



2005-2012 Acura RL Oil and Oil Filter Replacement

A video tutorial on how to change the engine oil and filter on your 2005-2012 Acura RL.

Written By: eCuration



INTRODUCTION

The engine oil and oil filter should be replaced every 5,000 miles.

Follow this video tutorial by YouTuber [ez](#) to complete the replacement yourself.



TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Oil Drain Pan](#) (1)
- [Long Neck Funnel](#) (1)
- [Oil Filter Wrench](#) (1)
- [Paper Towels](#) (1)



PARTS:

- [5W-20 Motor Oil](#) (5)
- [Oil Filter Acura RL 2005-2012](#) (1)

To reassemble your device, follow these instructions in reverse order.