




# 2005-2012 Acura RL Rear Differential Fluid Replacement

A video tutorial on how to change the rear differential assembly fluid for a 2nd generation Acura RL sedan (2005-2012).

Written By: eCuration

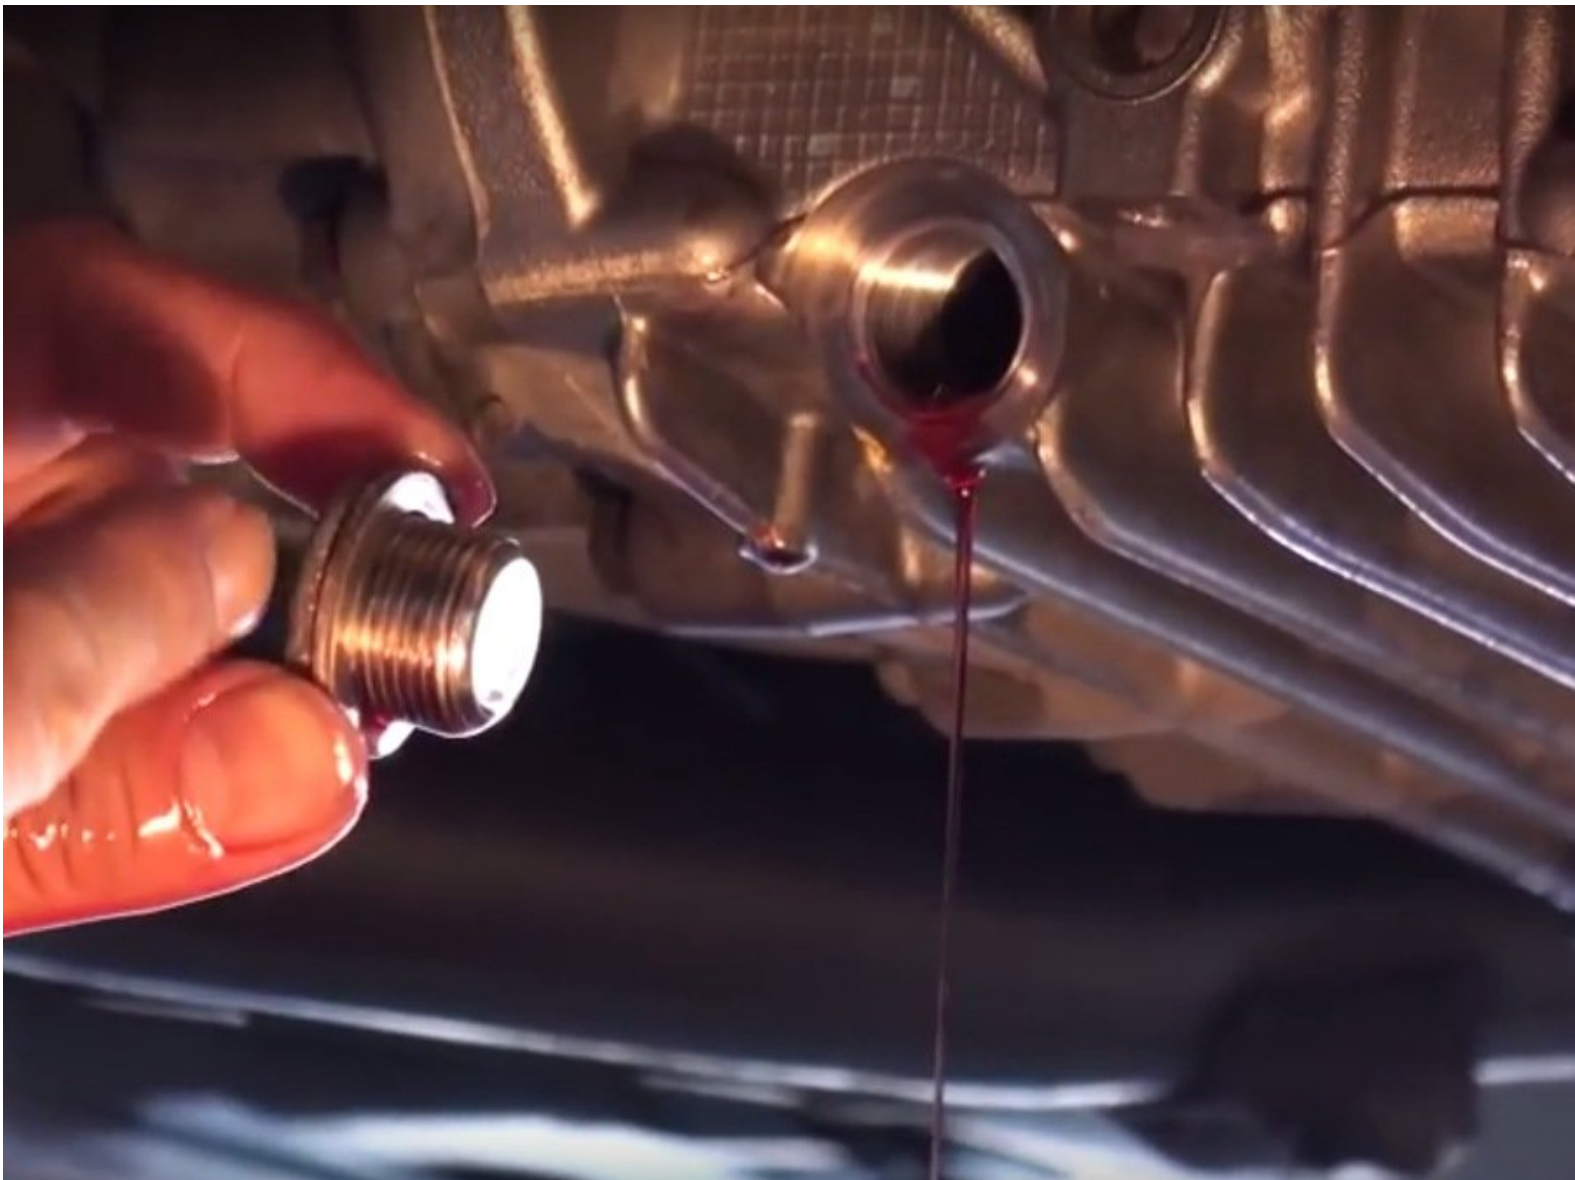

## INTRODUCTION

Procedure on how to replace the rear differential assembly fluid for a 2nd generation Acura RL sedan (2005-2012).

It is EXTREMELY important to use the newly designed Acura DPSF fluid and no other substitute otherwise unpredictable damage can occur from using the wrong fluid type.



### TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Oil Drain Pan](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [Long Neck Funnel](#) (1)
- [Fluid Hand Pump](#) (1)
- [Paper Towels](#) (1)



### PARTS:

- [Acura All-Wheel Drive Fluid \(DPSF\)](#) (4)  
Quart

To reassemble your device, follow these instructions in reverse order.