




# Sony Cyber-Shot DSC-TX30 Wrist Strap Holster Replacement

This guide will demonstrate how to replace the wrist strap holster of the device.

Written By: Kellen Fulkerson

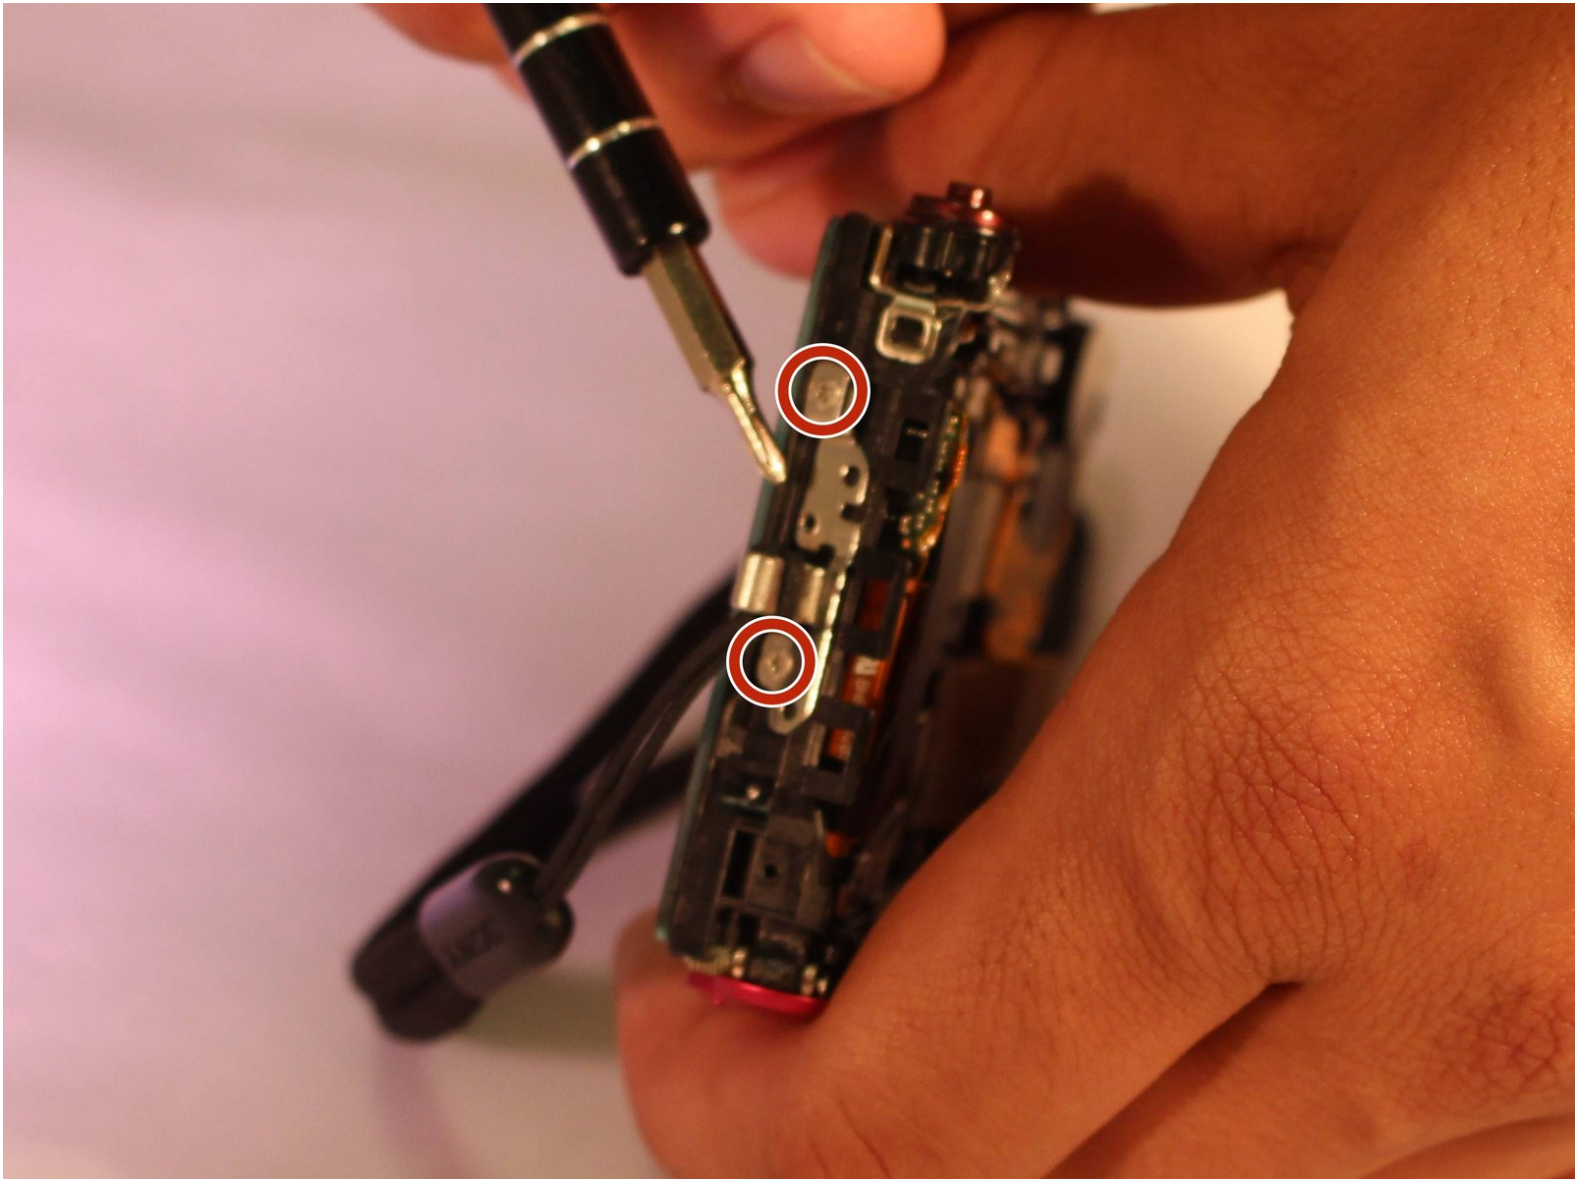

---

## INTRODUCTION

It's important to ensure the wrist strap of this camera is in working order to help prevent damage from falls onto hard or hazardous surfaces that can harm the device.



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Using your finger, slide the release catch to unlock the battery/memory card cover.


## Step 2

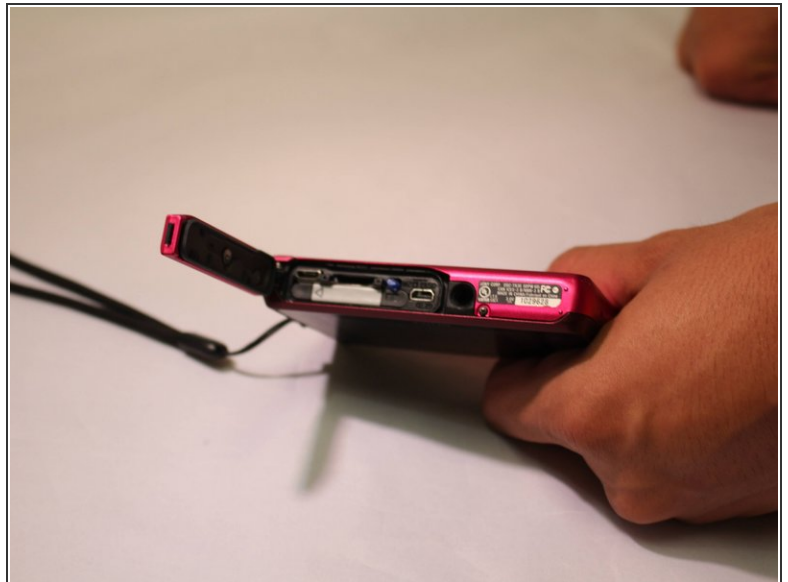

- Open the battery/memory card door.



### Step 3

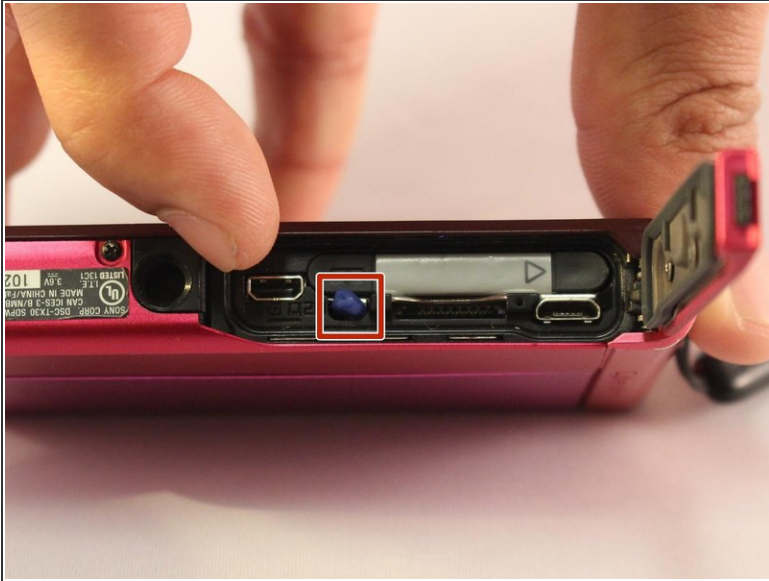

- Push the battery eject lever to free the battery.

### Step 4



- Remove the battery from the device.

## Step 5 — Outer Shell



- Using a Phillips #00 screwdriver, remove one black 2 2/5mm screw that is located next to the wrist band loop.


## Step 6



- Using the plastic opening tool, separate the edge-casing from the rest of the camera.




## Step 7

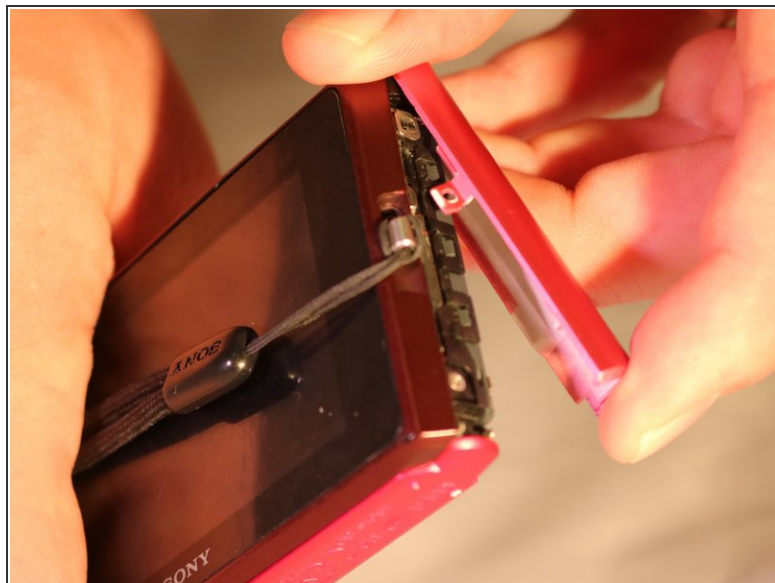

- Pull the edge-casing off of the camera.

## Step 8

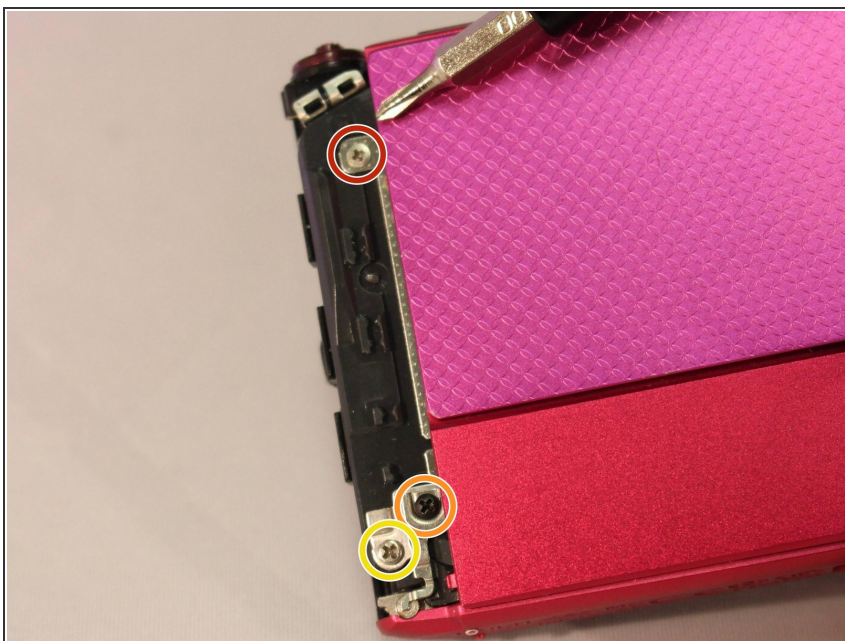

- Using a Phillips #00 screwdriver, remove one silver 3mm screw located on the front side of the camera.
- Using a Phillips #00 screwdriver, remove one silver 5 2/5mm screw located on the front side of the camera
- Using a Phillips #00 screwdriver, remove one black 2 1/2mm screw located on the front side of the camera.

## Step 9



- Using a Phillips #00 screwdriver, remove one 2 1/2mm screw located near the wrist strap.

## Step 10



- Using a Phillips #00 screwdriver remove one black 2 2/5mm screw near the tripod slot on the bottom of the casing.



## Step 11



- Using a Phillips #00 screwdriver remove the two 2 2/5mm black screws from the side of the camera opposite of the wrist strap



## Step 12



- Using the plastic opening tool, open the device's outer shell.





## Step 13

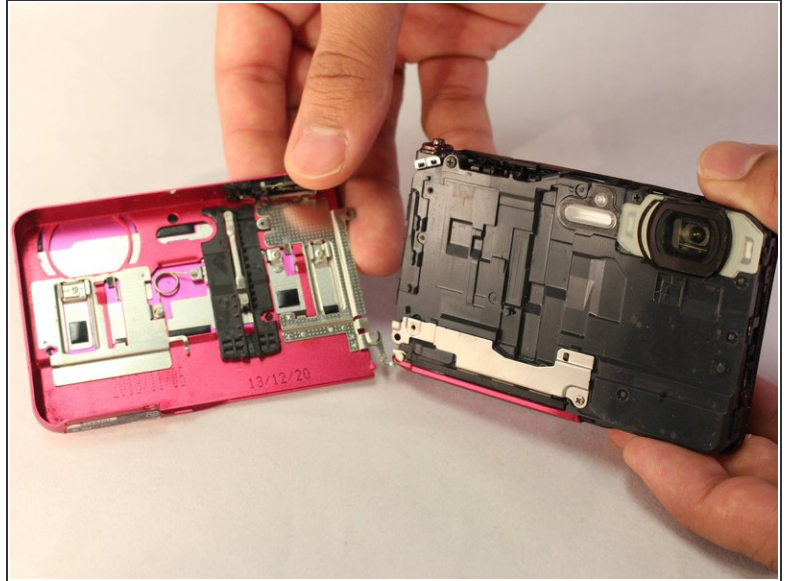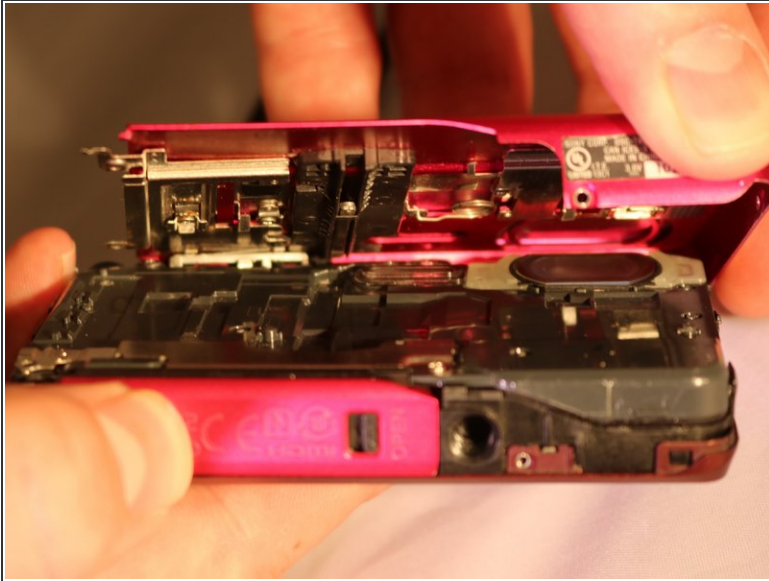


- Remove the front casing of the device.

## Step 14 — Back Casing

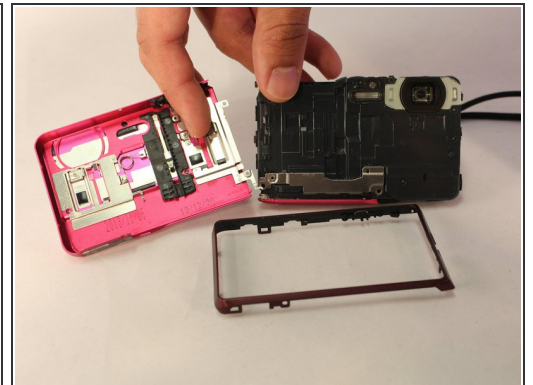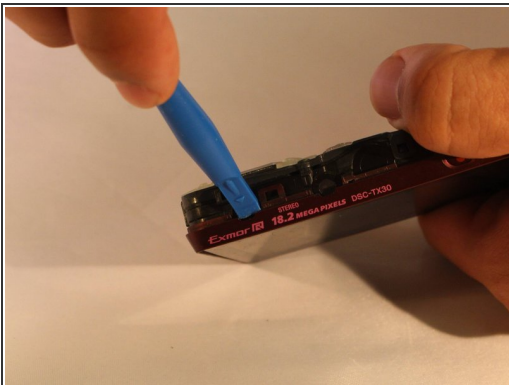


- Using the plastic opening tool, remove the back casing of the device.

## Step 15 — Wrist Strap Holster

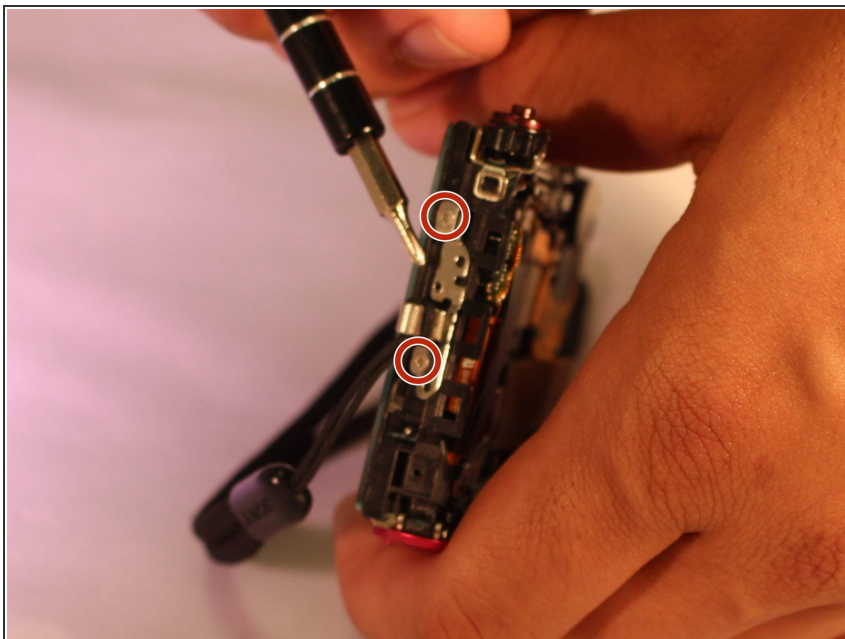

- Using a Phillips #00 screwdriver , remove two silver 3mm screws from the side of the device.

## Step 16

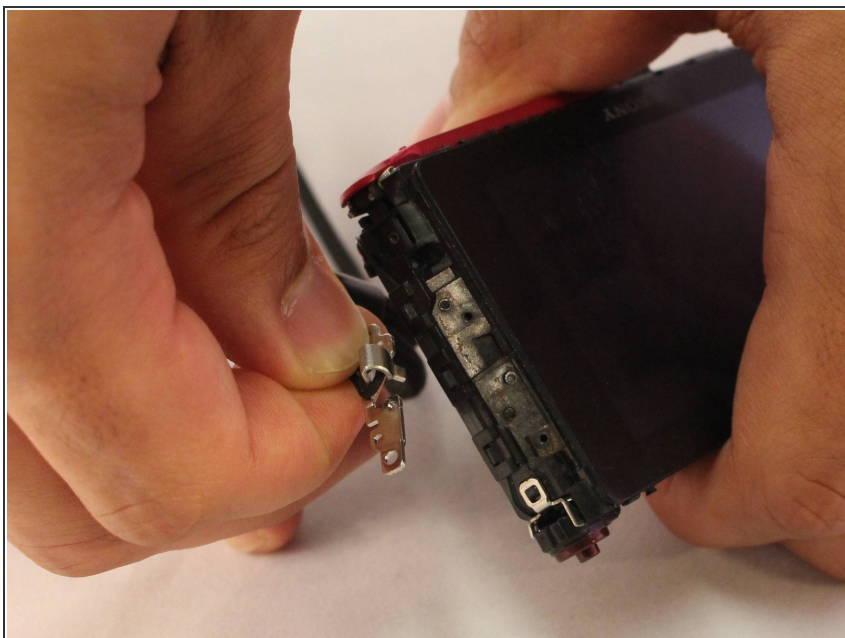

- Using your fingers, remove the silver wrist band holster from the device.

To reassemble your device, follow these instructions in reverse order.