



Panasonic D-snap SV-AV50 Screen Replacement

This guide gives instructions for installing the screen in a Panasonic D-snap SV-AV50.

Written By: Zoe Hinck



INTRODUCTION

Be sure to remove the battery and SD card before opening the camera to get to the screen component.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Screen



- Open and rotate the screen, then remove the screw(3.5mm Philips) indicated with a screwdriver.
- Then, rotate the screen 180 degrees and remove the screw on the opposite side.

Step 2



- Remove the screw(2.6mm Philips) indicated on the top of the screen with the screwdriver. Then remove the corresponding screw on the bottom of the screen.

Step 3



- Pull the backing away from the screen as shown in the photo.

Step 4




- Unplug the black connector between the camera and the screen by pulling down.
- For increased ease, use tweezers or forceps, as seen in the picture

Step 5




- Pull the screen away from the camera the same way that you removed the screen backing.

Step 6

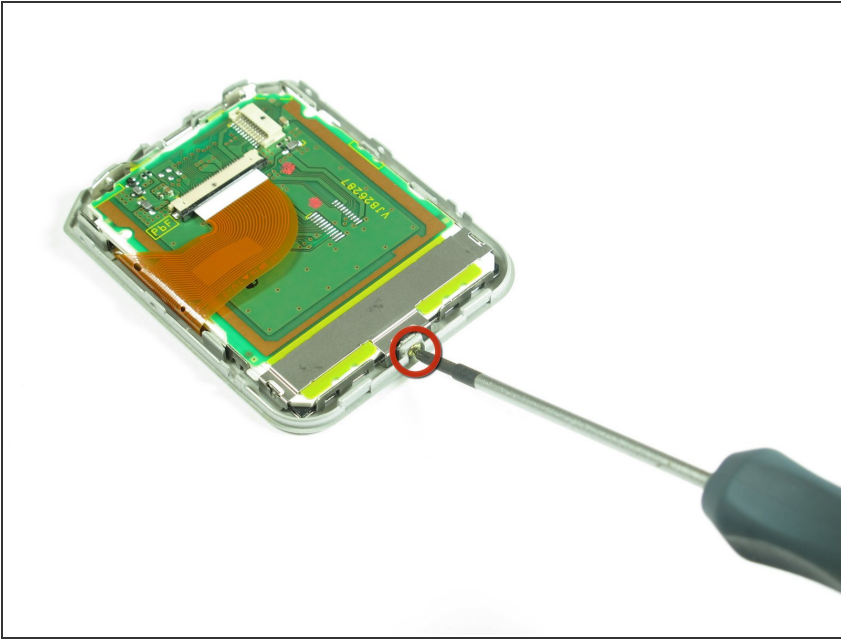

- Use the screwdriver to remove the screw(2.46mm Philips) indicated.

Step 7

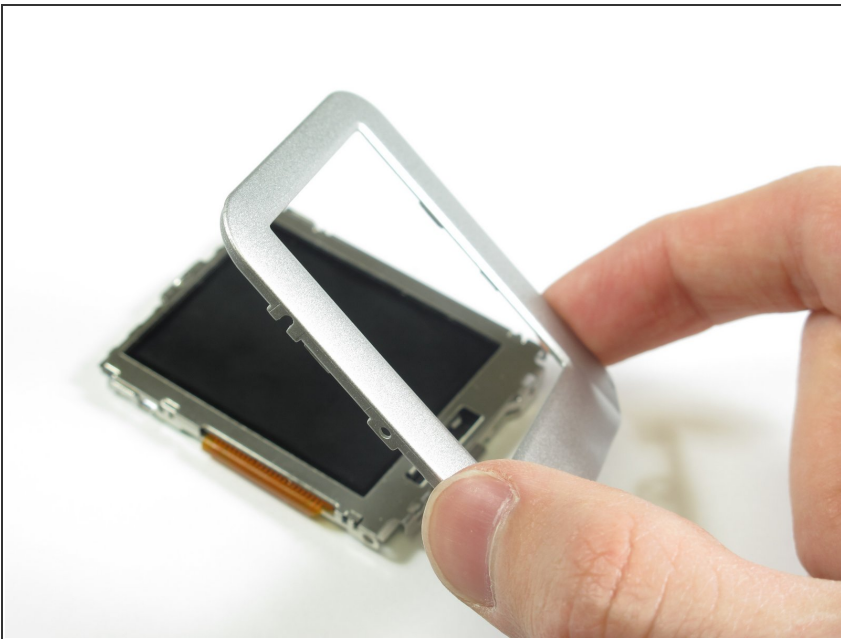

- Pull upwards on the screen border to remove it from the actual screen.

To reassemble your device, follow these instructions in reverse order.