



2003-2007 Honda Accord Coolant Replacement

A video tutorial on how to change and flush the coolant system on a 2003-2007 Honda Accord.

Written By: eCuration



INTRODUCTION

The coolant should be replaced every 30,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the change yourself.



TOOLS:

- [Spill Free Funnel](#) (1)
- [Oil Drain Pan](#) (1)



PARTS:

- [Engine Coolant](#) (1)

To reassemble your device, follow these instructions in reverse order.