



# Xbox One Elite Controller (Model 1698) Battery Replacement

A guide that helps you remove and replace the batteries of the Xbox One Elite Controller.

Written By: Cara Steinke



## INTRODUCTION

If your Xbox One Elite Controller is not vibrating, your batteries may be low. Here are instructions to help you remove and replace the batteries of your controller.



### TOOLS:

- [Fingers](#) (1)



### PARTS:

- [AA Batteries](#) (2)

## Step 1 — Battery



- Turn over the controller so that the buttons face down.
- ⚠ Be gentle when removing the cover so you do not break the small plastic tabs holding the cover to the controller.
- Remove the battery cover carefully by sliding the cover up in the direction of the arrow.

## Step 2



- Remove the two batteries AA batteries by lifting them from one end and pulling them out.

To reassemble your device, follow these instructions in reverse order.