



Xbox One Elite Controller (Model 1698)

Thumbstick Replacement

A guide that helps you replace the thumbsticks on the Xbox One Elite Wireless Controller.

Written By: Cara Steinke



INTRODUCTION

The Xbox One Elite Wireless Controller has easily removable thumbsticks. The controller comes with three interchangeable sets of two thumbsticks: standard, tall, and domed. If your controller's thumbsticks get stuck, there may be residue underneath them. Here are instructions to help you remove and replace your thumbsticks.



TOOLS:

- [Fingers](#) (1)



PARTS:

- [Xbox One Elite Controller \(1698\) Joystick](#) (2)

Step 1 — Thumbsticks



- Remove each thumbstick by grabbing the knob and pulling up on it

To reassemble your device, follow these instructions in reverse order.