



Lenovo Thinkpad x240 Internal Battery Replacement

How to replace the Lenovo Thinkpad x240 battery.

Written By: Mohammed Alsaadi



INTRODUCTION

Having issues with your battery life? No worries! Follow this simple guide to replace the internal battery.



TOOLS:

- [TR6 Torx Security Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Lenovo ThinkPad T440/T450/T460/X240/X250/X270 Battery](#) (1)

Step 1 — Internal Battery



- Turn off the laptop.
- ❗ Device's lights should all be off.

Step 2



- Remove the back cover by unscrewing the 8 0.2 mm screws holding it in place.

Step 3



- Locate the internal battery pack and unscrew the 3 0.2 mm screws holding it in place.

Step 4



- Unplug the connector cable that connects the internal battery pack to the laptop.

Step 5



- Insert the new internal battery pack into the laptop.

To reassemble your device, follow these instructions in reverse order.