



Xbox One Elite Controller (Model 1698) D-Pad Replacement

A guide that helps you remove the D-Pad on the Xbox One Elite Wireless Controller.

Written By: Cara Steinke



INTRODUCTION

The Xbox One Elite Wireless Controller has an easily removable D-Pad. The controller comes with two interchangeable D-Pads, standard and faceted. If your controller's D-Pad gets stuck, there may be residue underneath it. Here are instructions to help you remove and replace your D-Pad.



PARTS:

- [Xbox One Elite Controller \(1697\) D-Pad Button](#) (1)

Step 1 — D-Pad



- Remove the circular D-pad by pulling the ridge near the top of the button towards you.
- ⓘ If the D-pad is a cross instead of a circle, skip to the next step.

Step 2



- Remove the cross D-pad by pulling up on the top of the cross.

To reassemble your device, follow these instructions in reverse order.