




HTC Vive Controller Front Panel Buttons Replacement

How to replace the menu button, trackpad, and system button on the HTC Vive Controller.

Written By: Christopher Amaro

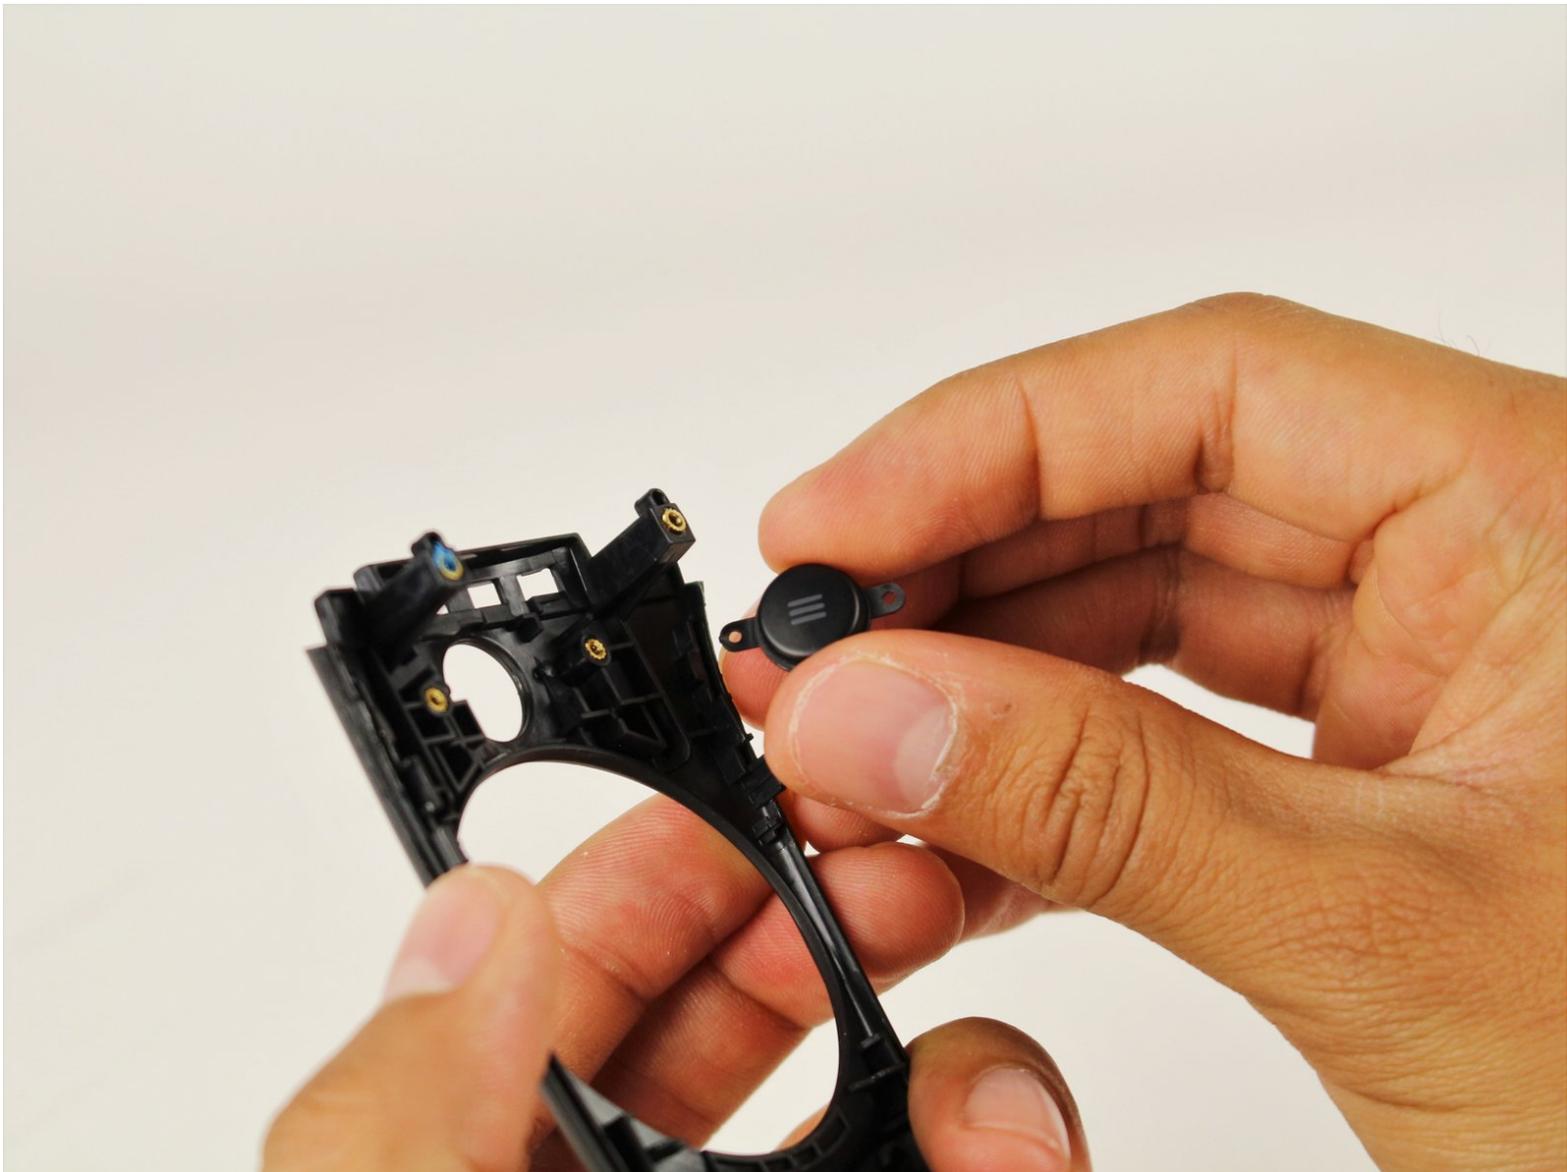

INTRODUCTION

The HTC Vive controller front panel buttons may be worn or can't click from extended use. This could cause functionality problems during use. When removing buttons be careful not to tear the rubber pinholes. This guide will show you how to replace the front panel buttons.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
#00
- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)

PARTS:

- [HTC Vive and Vive Pro Controller Menu Button Switch](#) (1)
- [HTC Vive and Vive Pro Controller Touchpad Button Switch](#) (1)

Step 1 — Saucer Panels




- Turn over the Vive controller so that the bottom saucer is facing up.
- Use the T5 Torx screwdriver to remove three black 21mm screws from the bottom saucer.

Step 2



- Use the nylon spudger to separate the top and bottom saucer covers all around the edges.
- Remove only the top saucer cover by pulling up with your hand.

Step 3

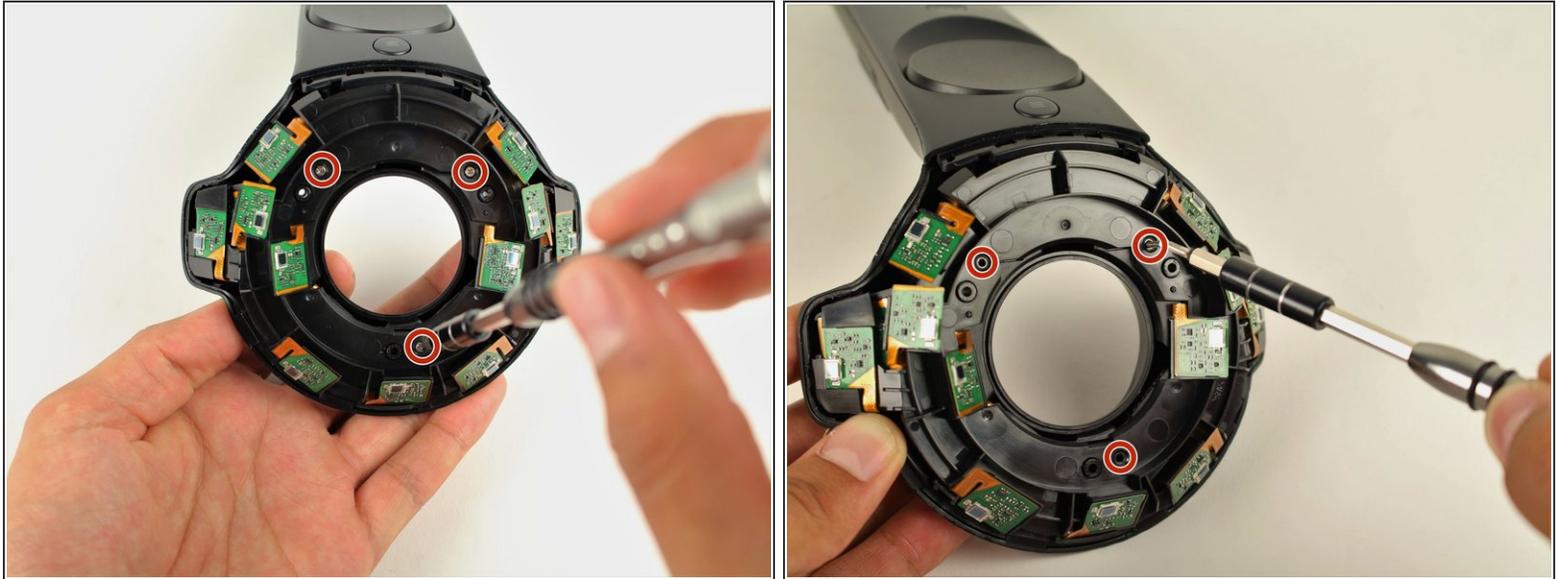

- Use the Phillips 00 screwdriver to remove the three silver 12.8mm screws from the exposed upper sensor panel.

Step 4



- Carefully pull away the bottom saucer cover with your hand.
- ⓘ To aid in removing the saucer cover, squeeze the base of the controller with your other hand, as shown in the second image of this step. Squeezing will make the clips easier to release and help prevent them from breaking.

Step 5 — Front Panel





- Use the T5 Torx screwdriver to remove the two black 5.2mm screws on the back gray panel.

Step 6



- Turn over the Vive controller so that the exposed bottom saucer panel is facing up.
- Use the T5 Torx screwdriver to remove the three black 5.2mm screws.

Step 7

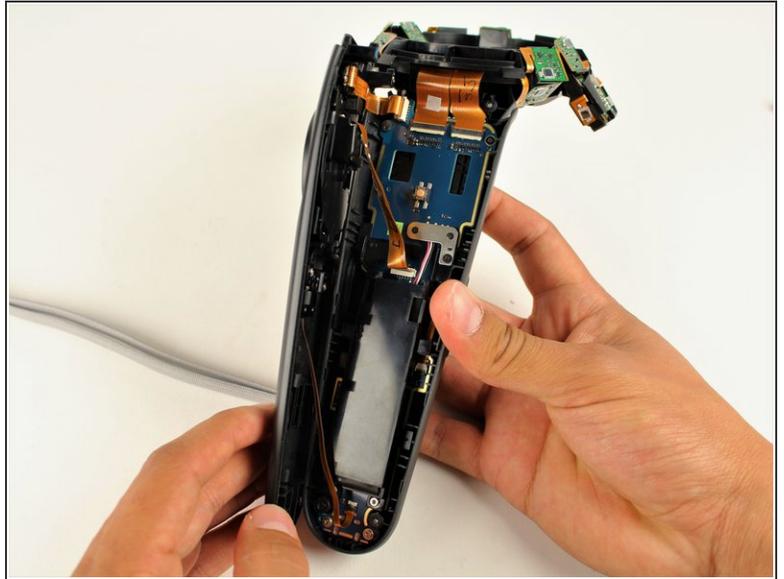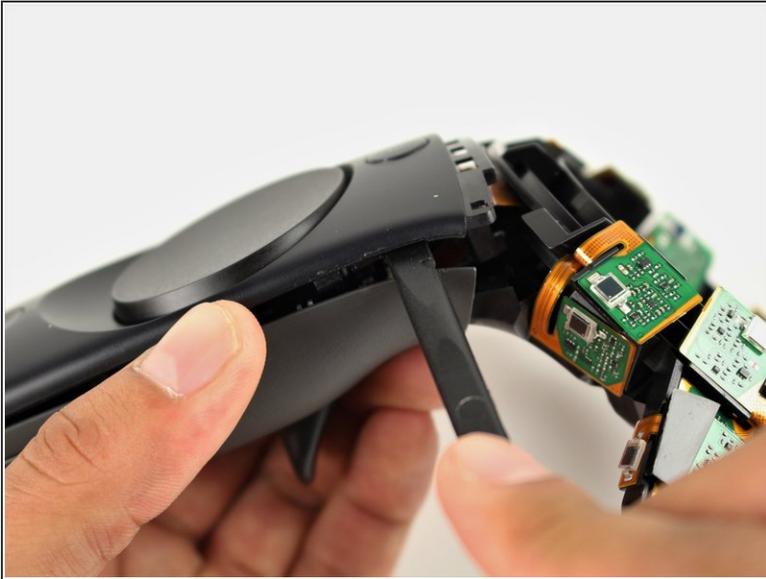


- Use the nylon spudger to separate the front panel gently by running the spudger around the edges of the handle.

⚠ Only separate the front panel around the edges. Do not try to completely remove the panel yet.

- Gently lift the right side of the panel to the left.


Step 8

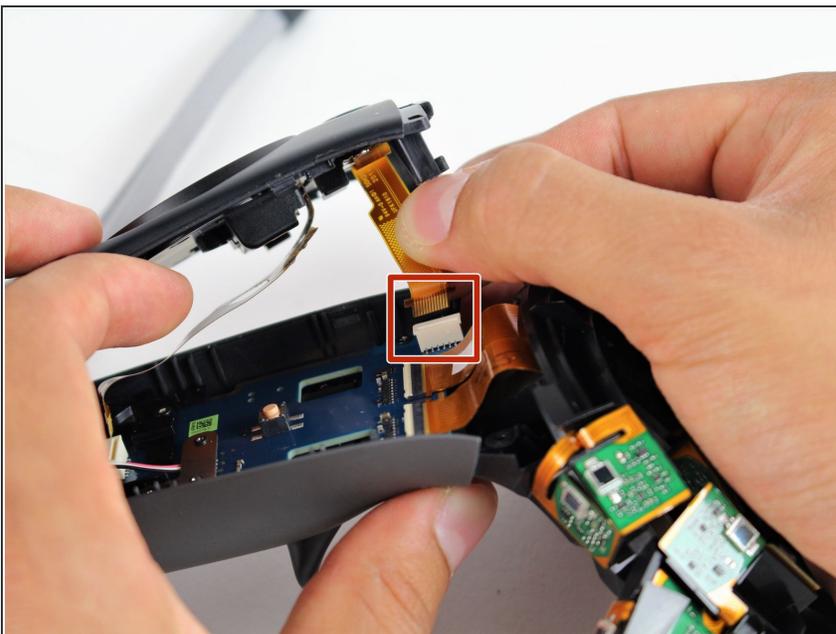

- Disconnect the upper ribbon cable gently by pulling the ribbon up and away from the motherboard with two fingers.

⚠ Do not try to disconnect the ribbon cables from the front panel.


Step 9

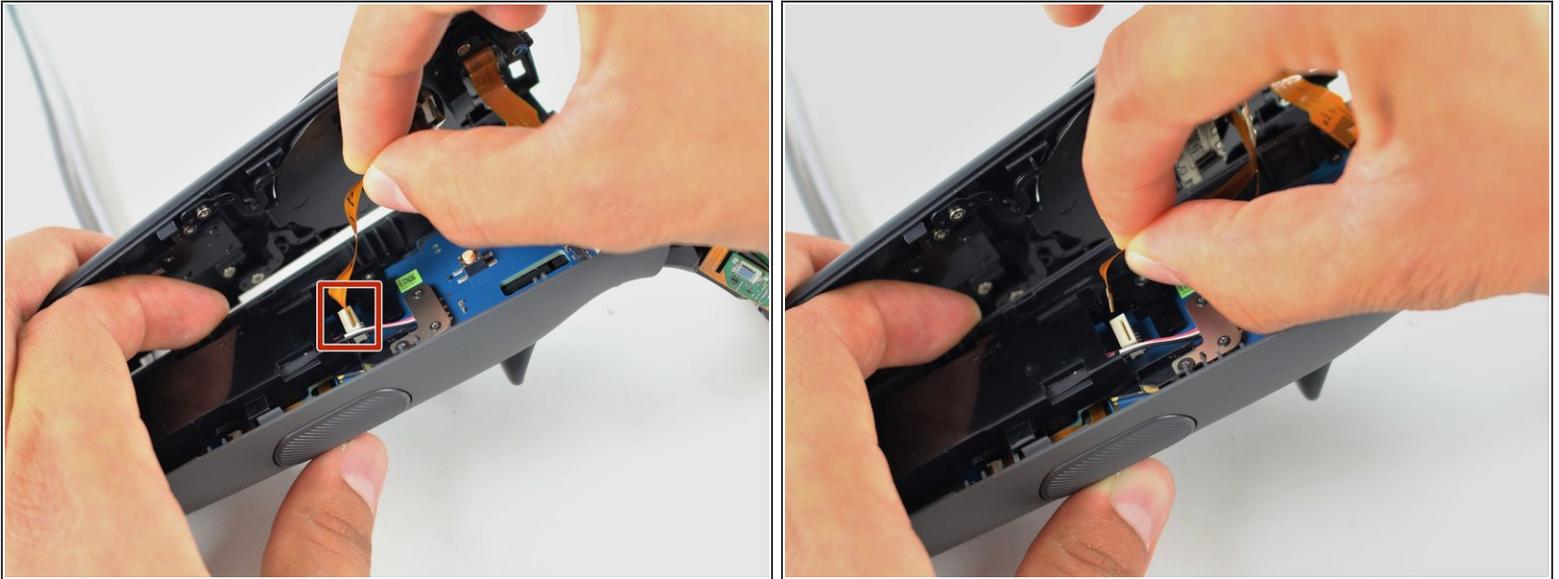

- Disconnect the middle ribbon cable gently by pulling the ribbon cable up and away from the motherboard with two fingers.


⚠ Do not try to disconnect the ribbon cables from the front panel.

Step 10

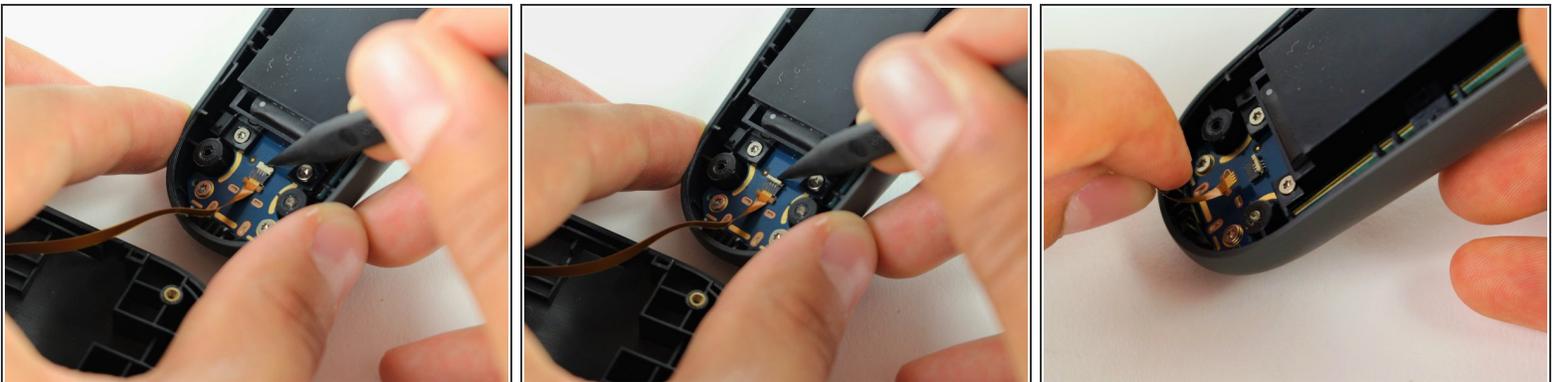


- Use the nylon spudger to lift the white tab by 90 degrees.
- Disconnect the bottom ribbon cable gently by pulling the ribbon cable down with two fingers.

Step 11 — Front Panel Buttons

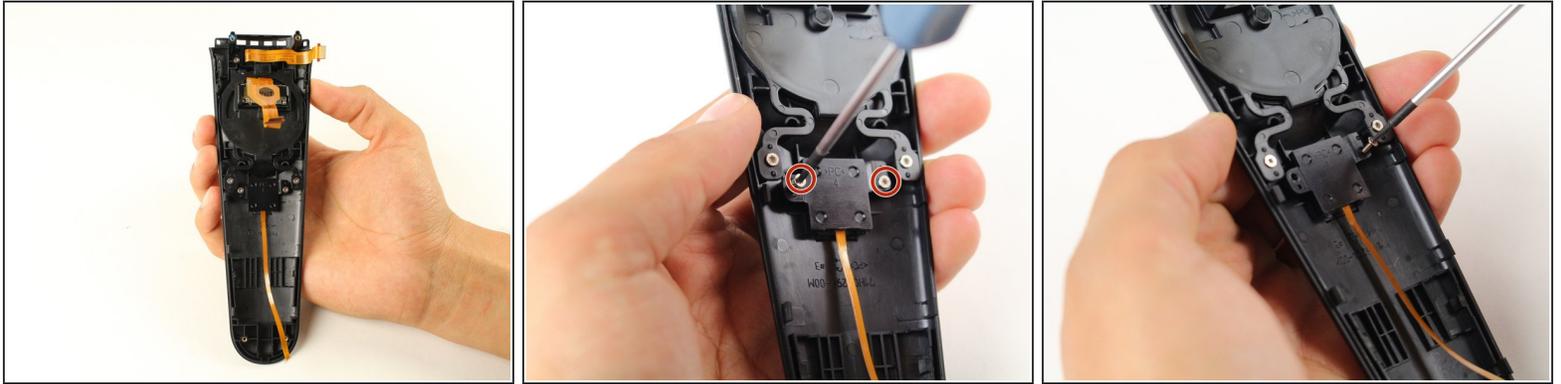


- Use the T5 Torx head screwdriver to remove the two silver 4.2mm screws from rear plastic cover of the system button.

Step 12

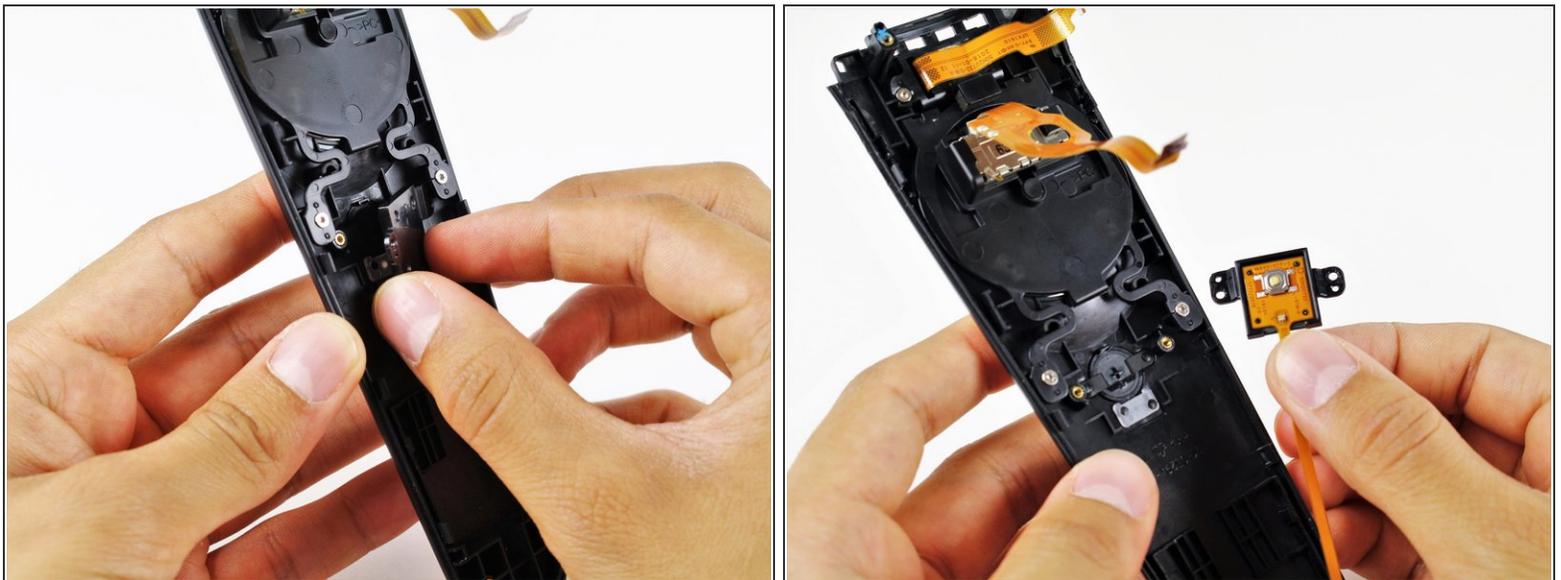


- Lift the plastic cover up and out of the front panel using your hand.

Step 13

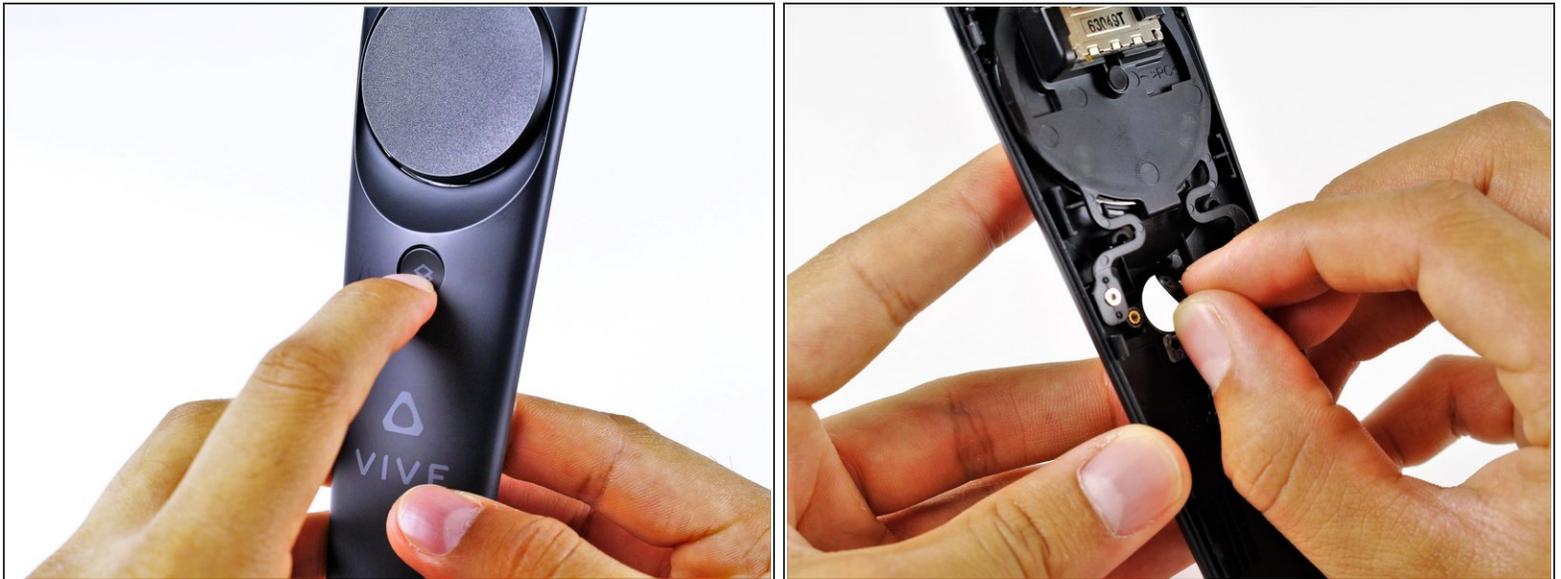


- Push the system button with your finger until it pops out of the front panel.

Step 14

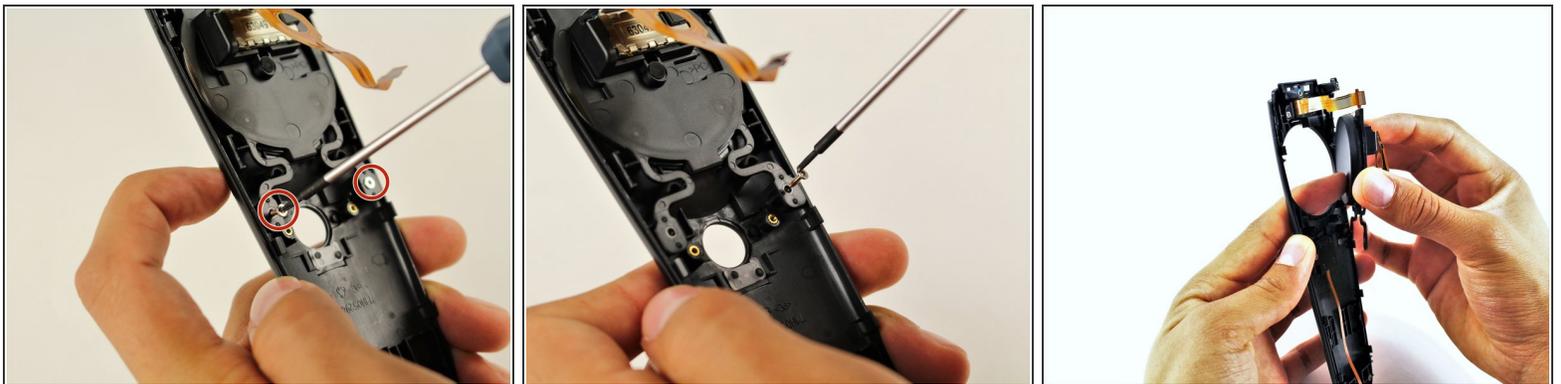

- Use the T5 Torx head screwdriver to remove the two silver 4.2mm screws from rear portion of the trackpad.
- Lift the trackpad up and out of the panel using your hand.


Step 15

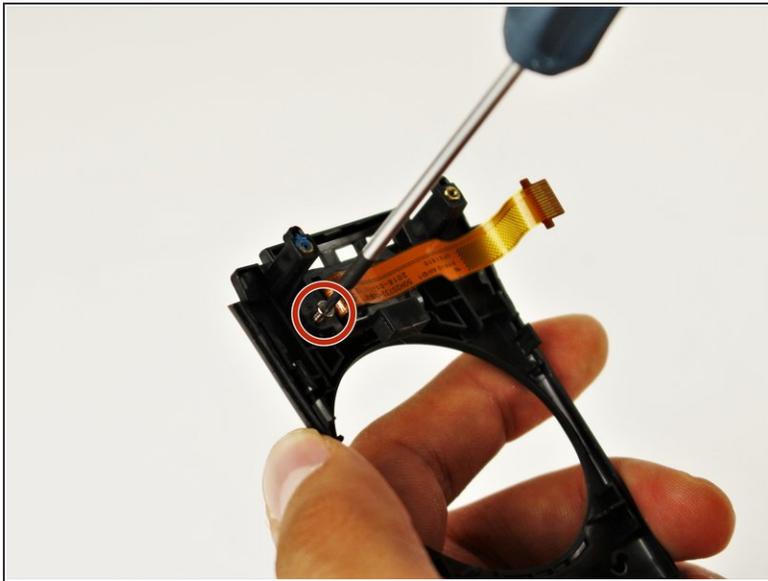

- Use the T5 Torx head screwdriver to remove the two silver 4.2mm screws from the rear plastic cover of the menu button.


i You may need to fold the ribbon cable to the left in order to expose the second silver screw.

Step 16

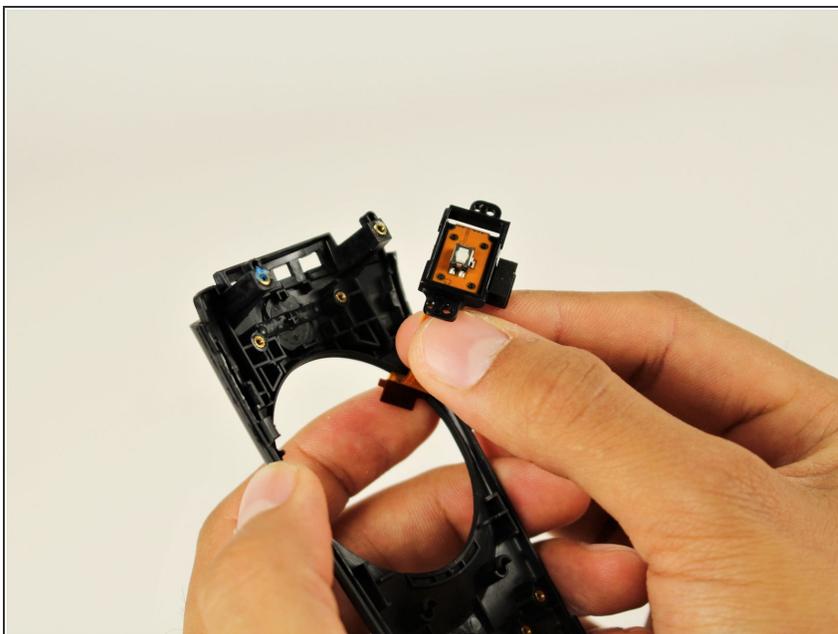

- Lift the plastic cover up and out of the panel using your hand.

Step 17

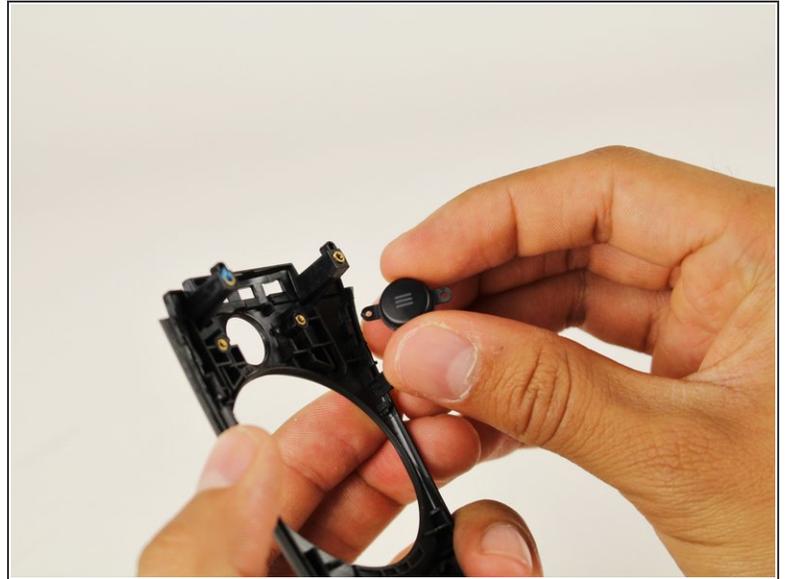

- Push the menu button with your finger until it pops out of the front panel.

To reassemble your device, follow these instructions in reverse order.