




Alienware 17 R4 Ram Replacement

This guide will teach you how to replace your...

Written By: Hector Mendez III

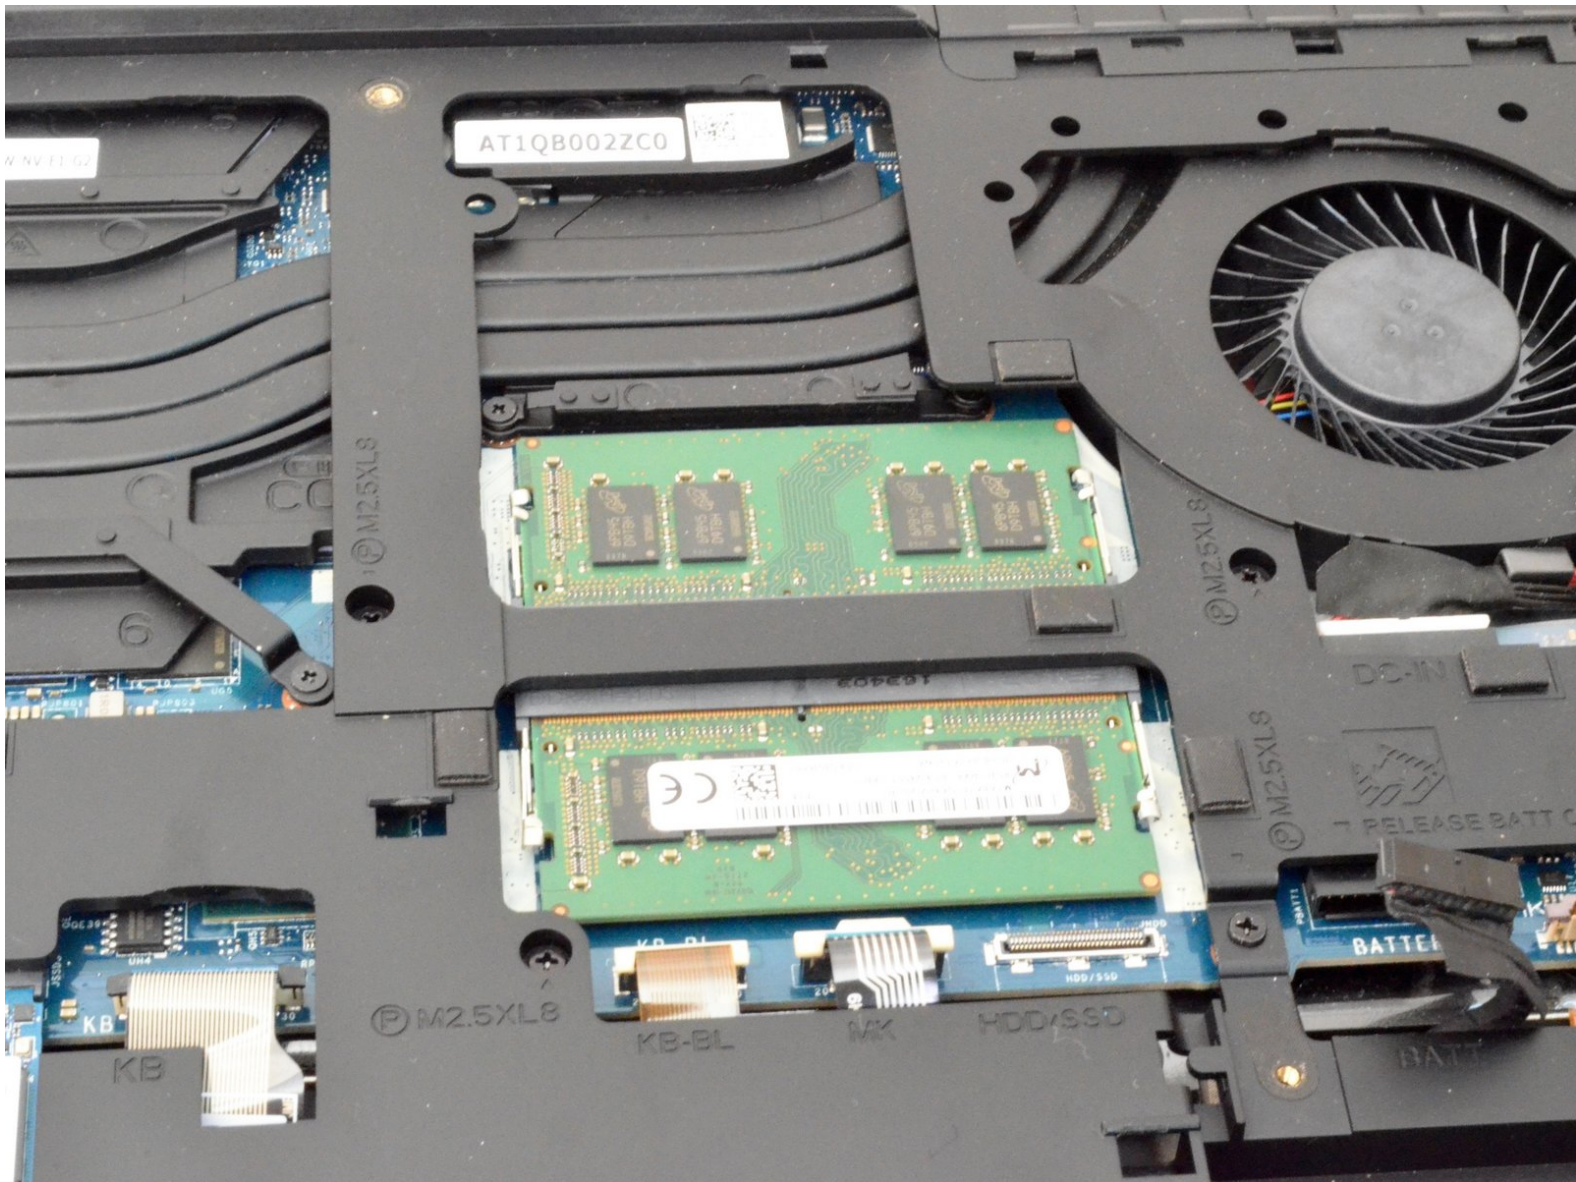

INTRODUCTION

This guide will teach you how to replace your RAM card allowing you to upgrade or simply replace your card.

TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Base Cover



- Use a **PH1 screwdriver bit** to remove the **six M2.5x13 screws (2.4 mm)** on the back of the laptop.
- Use a **PH1 screwdriver bit** to loosen the **one M2x3 screw (1.9 mm)**.
- ⓘ The **M2x3 screw (1.9 mm)** does not come out completely.


Step 2



- Pull the base cover up to remove it.
- If you are having trouble, insert a **plastic opening tool** into the divots along the laptop's edges to loosen.
- ⓘ Removing the cover may require some force.

This document was generated on 2022-11-29 03:10:56 AM (MST).

Step 3 — Hard Disk Drive (HDD)

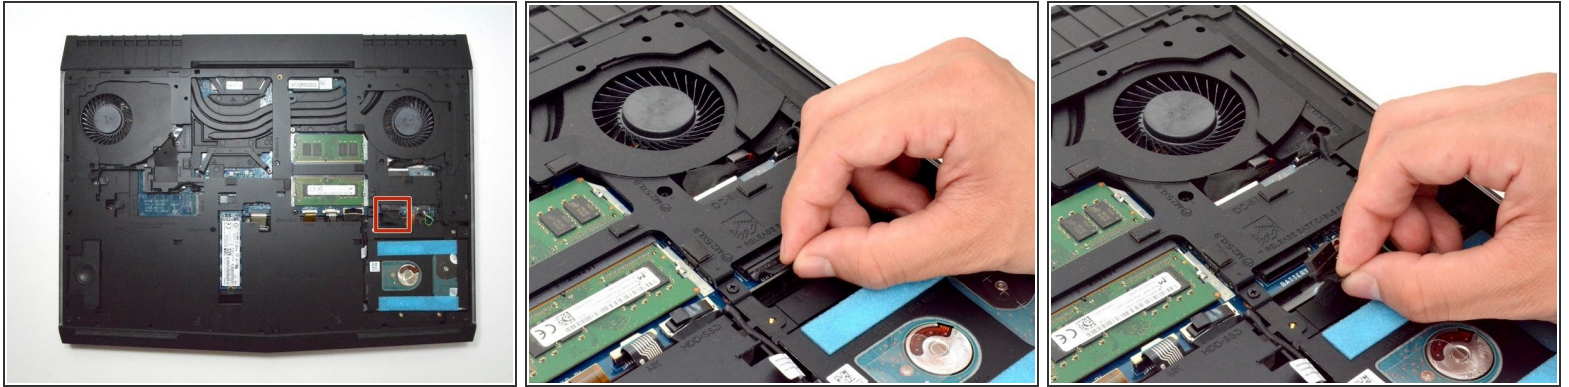


- Disconnect the **battery connector cable**, located on the right side of the laptop, above the hard disk drive.

i Once you have removed the cable, wait **5-10 minutes** to allow the laptop to power down.


! Failure to remove the battery connector cable properly may damage other parts of the laptop.

Step 4

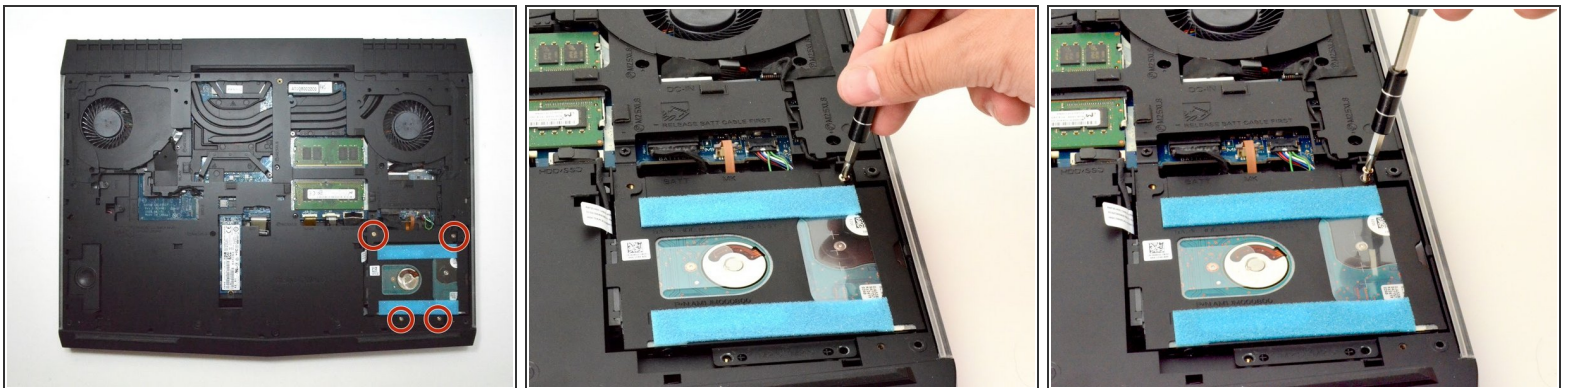


- Use a **PH1 screwdriver bit** to remove the **four M2.5x5 screws (2.4 mm)** on the hard disk drive.

Step 5

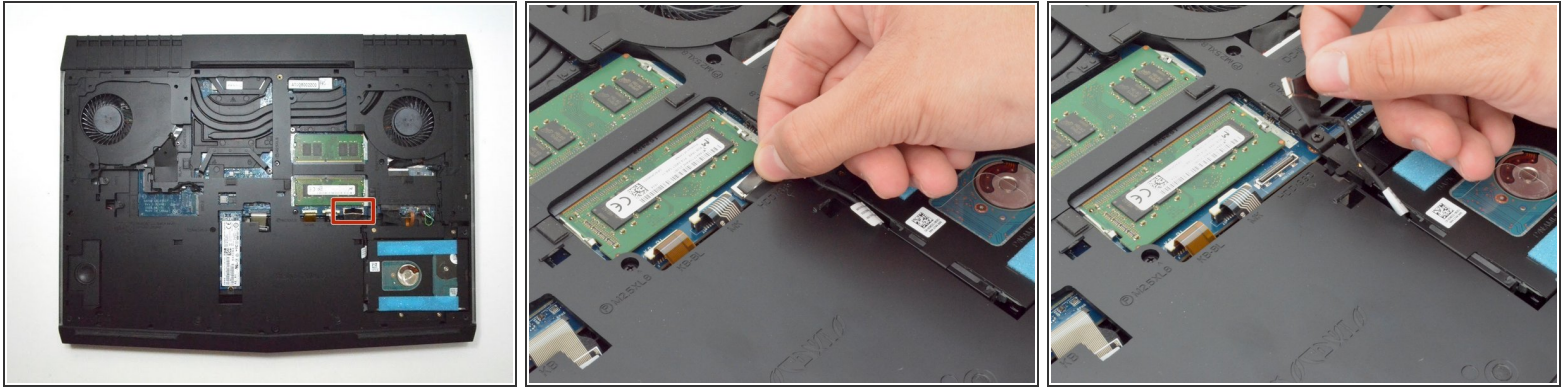


- **Gently** lift the HDD cable to disconnect it from the laptop.

Step 6

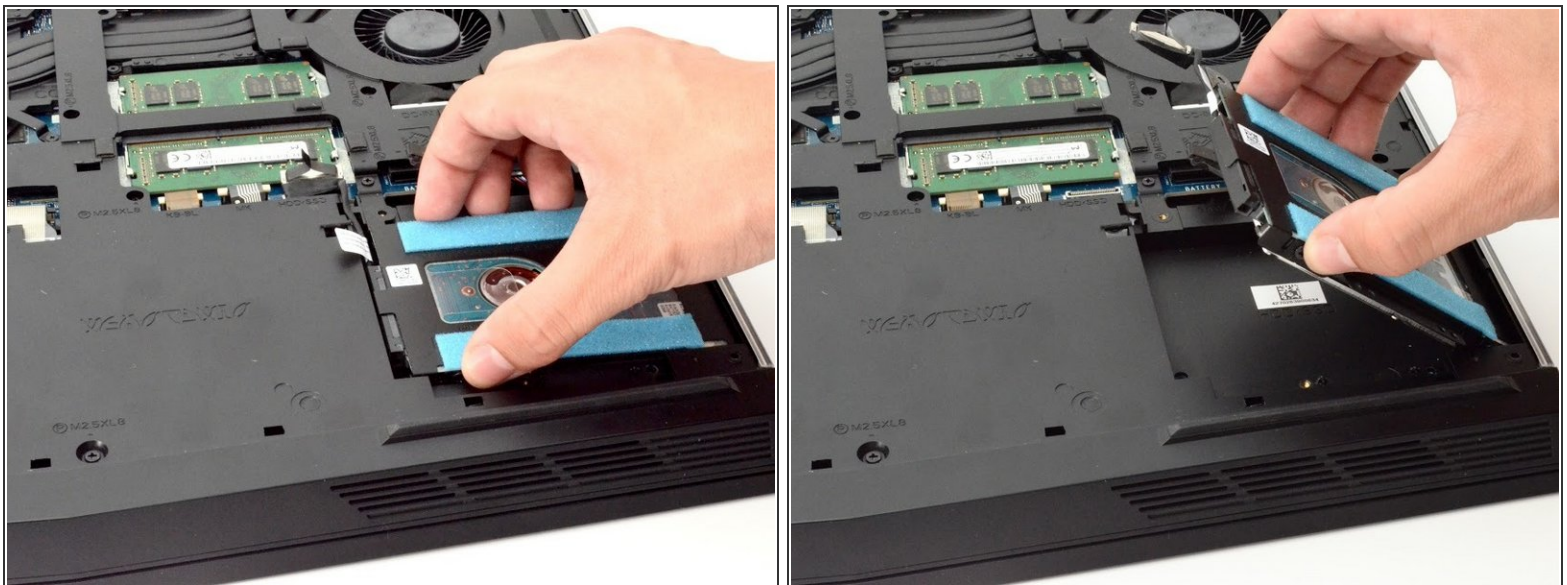


- Pull the hard drive up to remove.

Step 7 — RAM

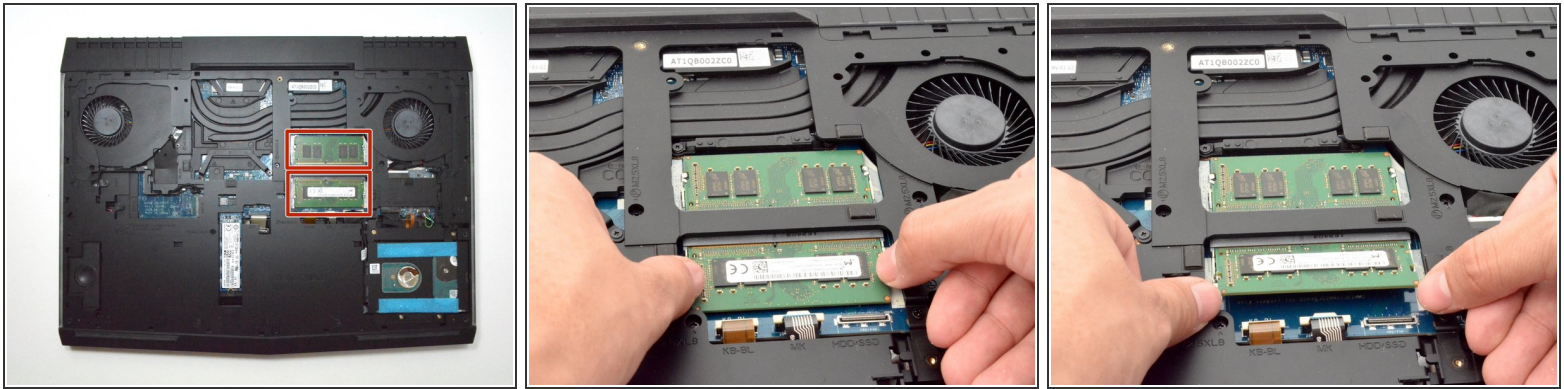

- Move the metal sidings outward to release the RAM card.

Step 8

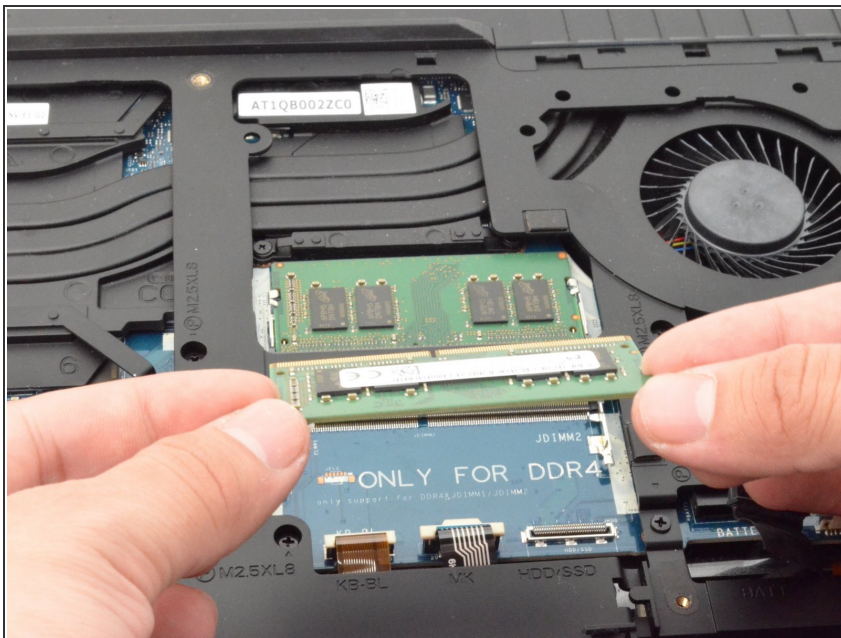

- Slide the RAM card out towards yourself to remove it.
- Repeat the same step for the RAM card above.

⚠ Slide the RAM card out carefully to avoid damaging it.

To reassemble your device, follow these instructions in reverse order.