



Samsung HMX-F90 Record Button Replacement

Removing and replacing a stuck or faulty HMX-F90 Camcorder recording button.

Written By: Amir Harb



INTRODUCTION

After several times of using buttons, they can become stuck or faulty. This guide can be used to loosen or replace the record button.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- Pull the release tab away from the battery.
- Slide the battery towards the release tab and then pull the battery away from the camcorder.

Step 2 — Strap Side Outer Casing



- Rotate the camcorder so that the strap side is facing you.
- Locate and remove the three 4.5mm Phillips #00 screws around the hand strap.

Step 3




- Rotate the camcorder so that the battery slot is facing you.
- Located in the top left corner of the battery slot, remove the 4.5mm Phillips #00 screw.

Step 4




- Rotate the camcorder so you are looking at the bottom of the camcorder.
- Locate and remove the last three 4.5mm Phillips #00 screws.

Step 5

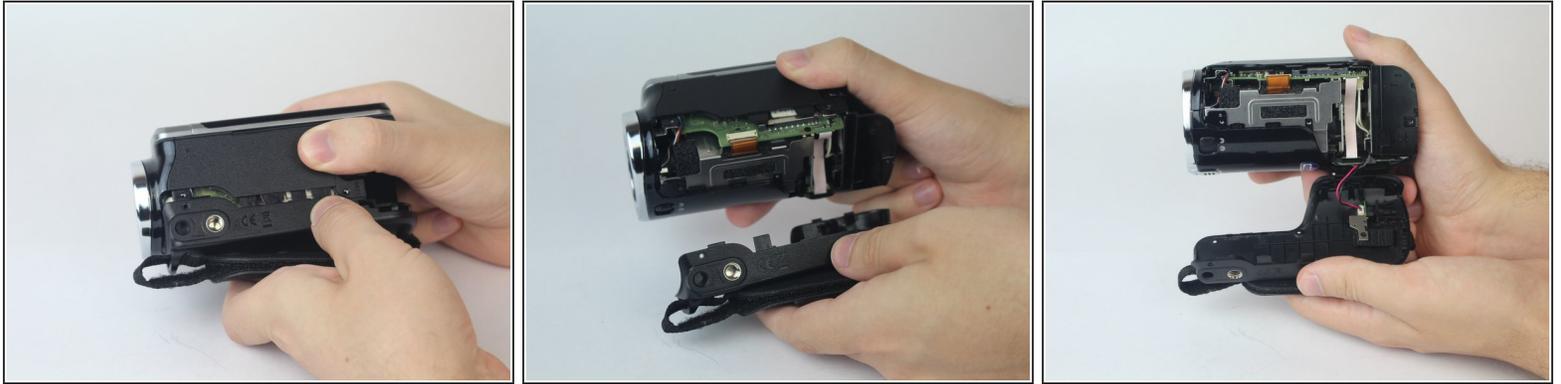

- With both hands, pull the side strap apart from the rest of the camcorder.

Step 6 — Record Button

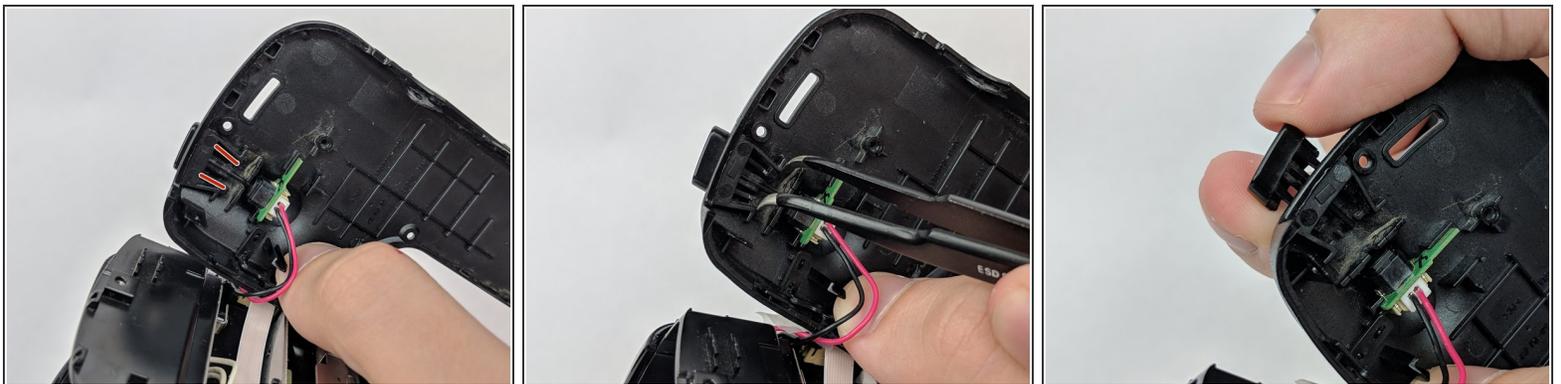

- Locate plastic clips of the record button.
- With tweezers squeeze together the two plastic clips and push the button out.
- Wiggle and pull the record button to remove completely.

To reassemble your device, follow these instructions in reverse order.