


HP Elitebook 820 G1 Keyboard Replacement

Replace the keyboard on your laptop in the case of damage or failure.

Written By: Lauren Vance

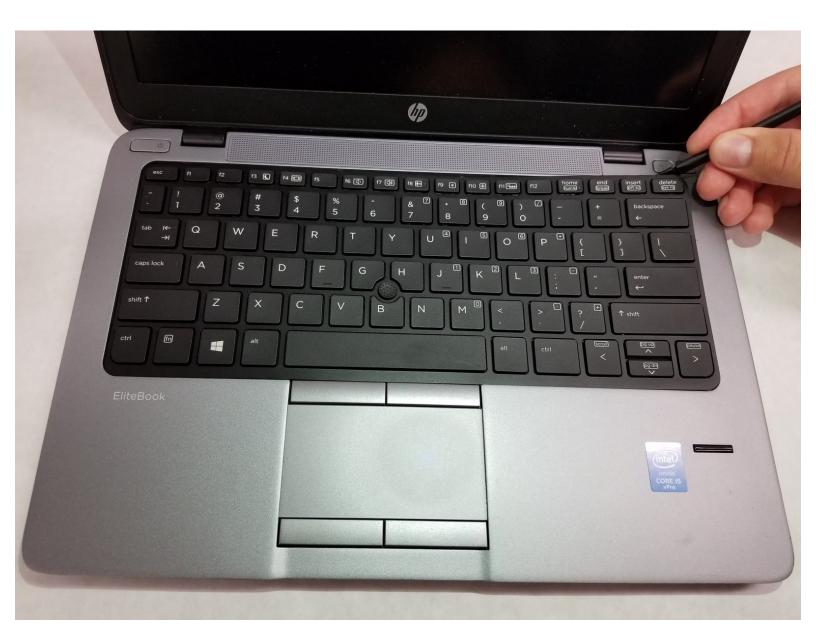

INTRODUCTION

This guide demonstrates how to safely remove and replace a damaged or malfunctioning keyboard. Following these steps should ensure a simple replacement for a keyboard that has experienced a spill, is missing keys, or otherwise does not function correctly.

TOOLS:

- iFixit Opening Tools (1)
- Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Battery



- Ensure the laptop is completely powered off and power adapter is unplugged before removing the battery.
- Turn over laptop so that the bottom is showing.
- Unlock the latch.

Step 2



• Remove the back cover and you will then be able to see the battery.



 Unlatch the two latches securing the battery in the case.

Step 4




• Use a plastic opening tool to lift and remove the battery.

Step 5 — Keyboard



- Remove the two Phillips #0 screws securing the keyboard to the laptop.
- Turn the laptop over and lift the display to reveal the keyboard.

Step 6

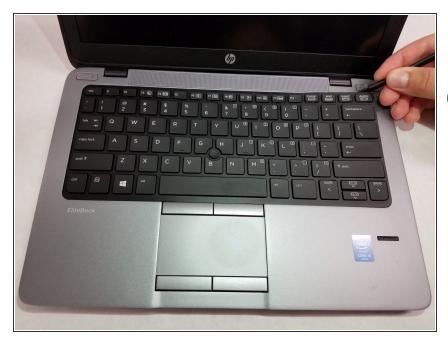

- Insert the plastic spudger between the keyboard and the housing.
- (i) Start at the corner.




- 4 tabs are located at the top of the keyboard, which lock it in place.
- Pry and twist the spudger along the top of the keyboard until each tab is released.

Step 8




- Pull back the keyboard from the top.
- Be mindful of the fragile cables behind it.

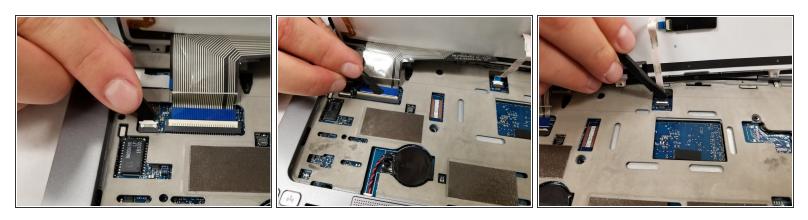

- Flip up the connecting flap on each of the three ribbon cables.
- (i) The small cable on the last picture ist only there, if you have a backlit keyboard. If you want to replace a keyboard without backlight, there will be no cable on your original keyboard.

Step 10

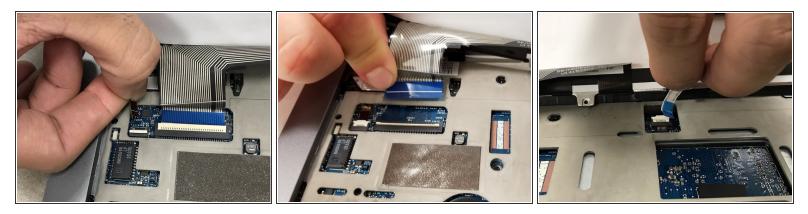

• Remove each of the three cables by gently pulling them from their respective connectors.



• Remove the keyboard from the housing.

To reassemble your device, follow these instructions in reverse order.