




Lenovo Yoga 720-15IKB Battery Replacement

Is your Lenovo Yoga 720-15IKB (88YG7000828) struggling to hold a charge? If so, follow this guide to replace the battery for your laptop.

Written By: Matthew Bornhorst

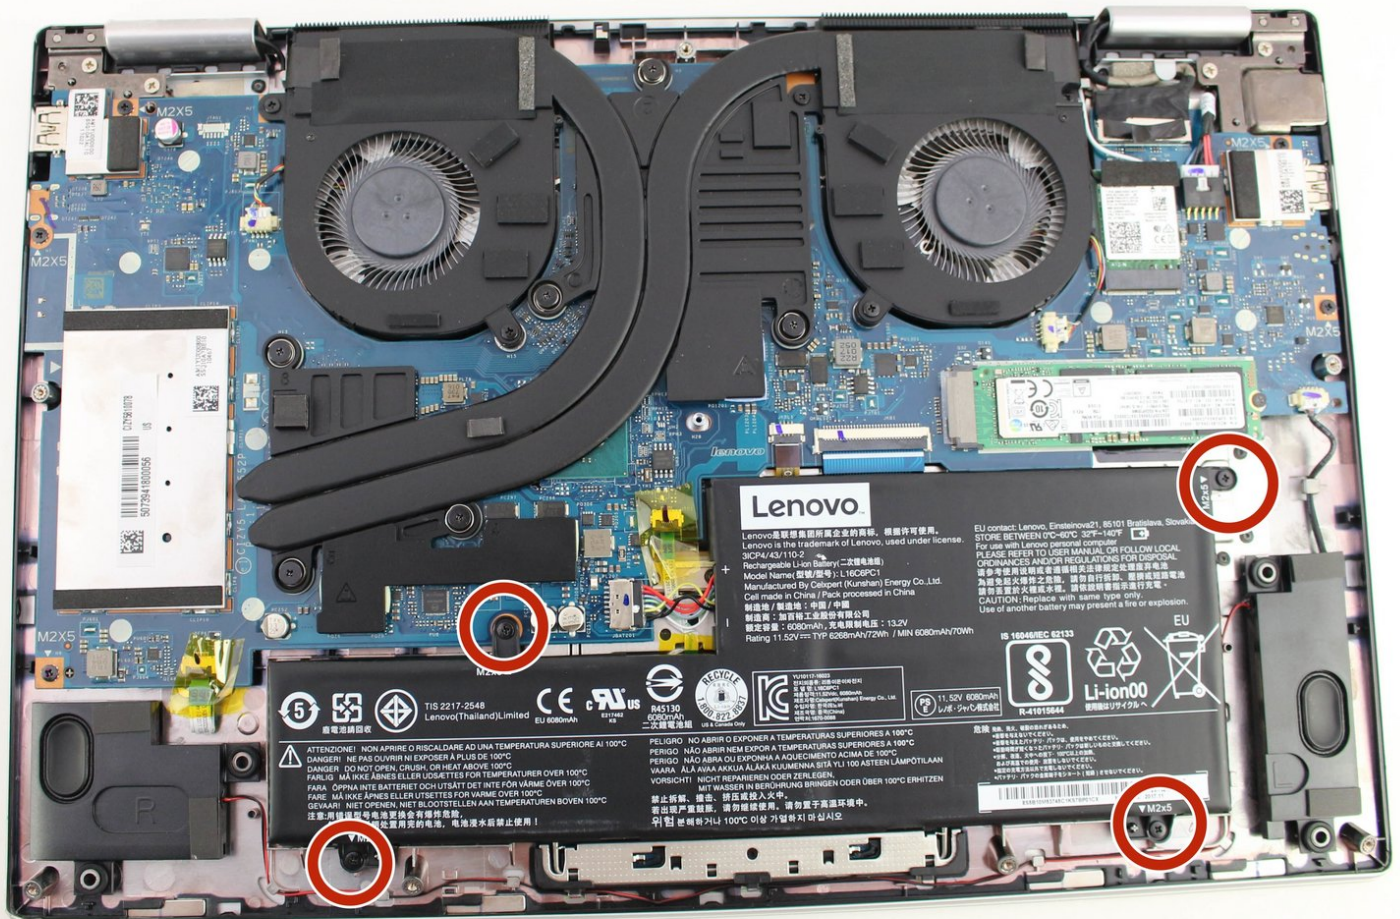

INTRODUCTION

This guide shows you how to replace the Lenovo Yoga 720 15-IKB (88YG7000828) battery. Batteries tend to wear out over time, so if your battery isn't holding a charge as long as it should, you might need to replace it. Refer to the [troubleshooting page](#) for more information about symptoms.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Lenovo Yoga 720 \(15"\) Replacement Battery](#) (1)
- [Lenovo Yoga 720 \(15"\) Battery - Genuine](#) (1)

Step 1 — Bottom Cover



- Power off the device before starting.
- Flip the device over with the hinges facing away from you.
- Remove seven 5.0 mm Torx T5 screws.
- Remove three 9.5 mm Torx T5 screws.

Step 2

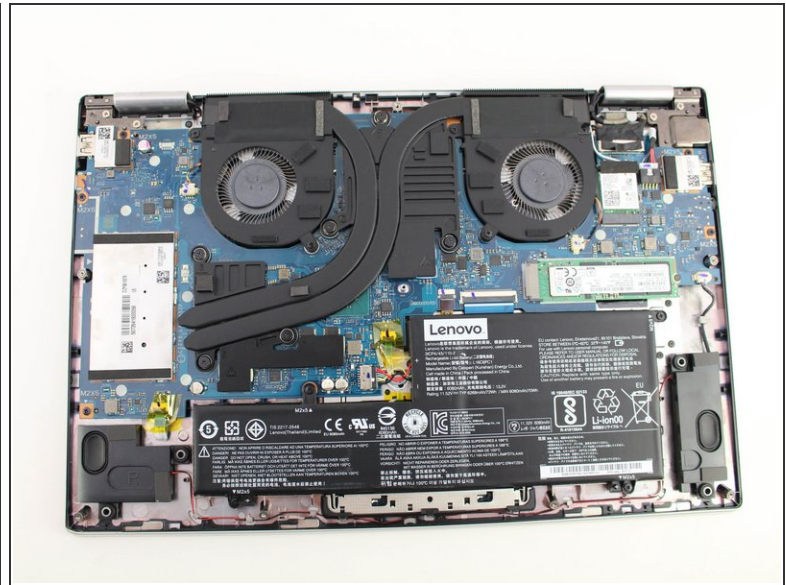

- Pry around the edges from one side to another with a plastic opening tool.



⚠ Do not pry on the side with the hinges because this can break the cover.

- Lift the case from the front until you feel resistance.

⚠ Do not keep lifting after you feel resistance, or the bottom cover can break.

- Pull the cover towards you, away from the hinges.
- Completely lift off the cover.


Step 3 — Battery

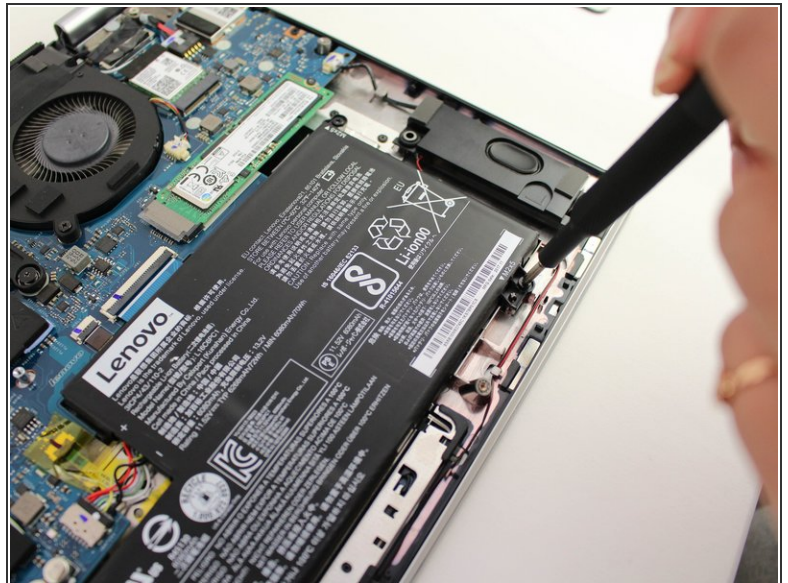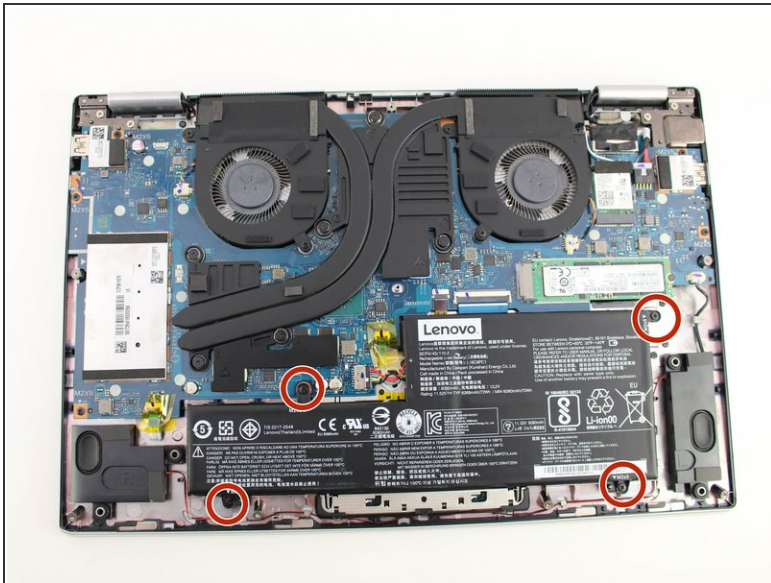

- Remove the four 4mm screws surrounding the battery with a Phillips #0 screwdriver.


i Each is marked by "M2x5" with a small white arrow pointing to the screw itself.

Step 4

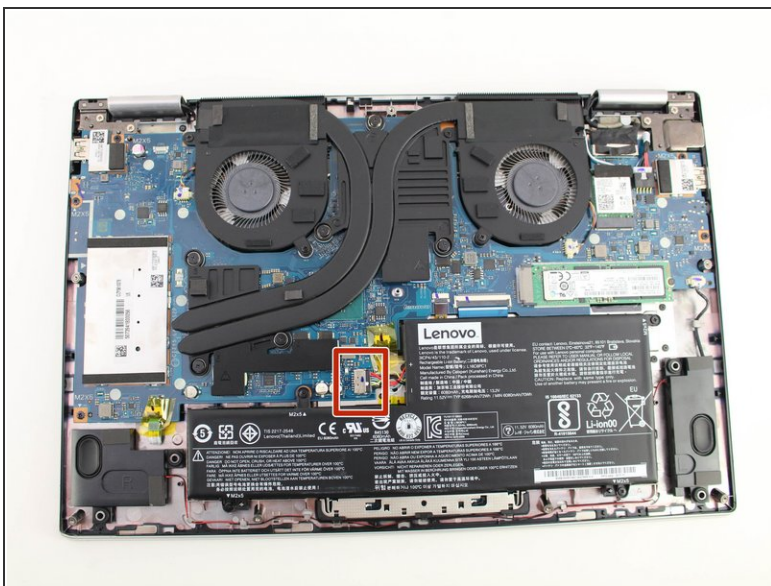

- Pull firmly on the battery connector to disconnect it.

Step 5

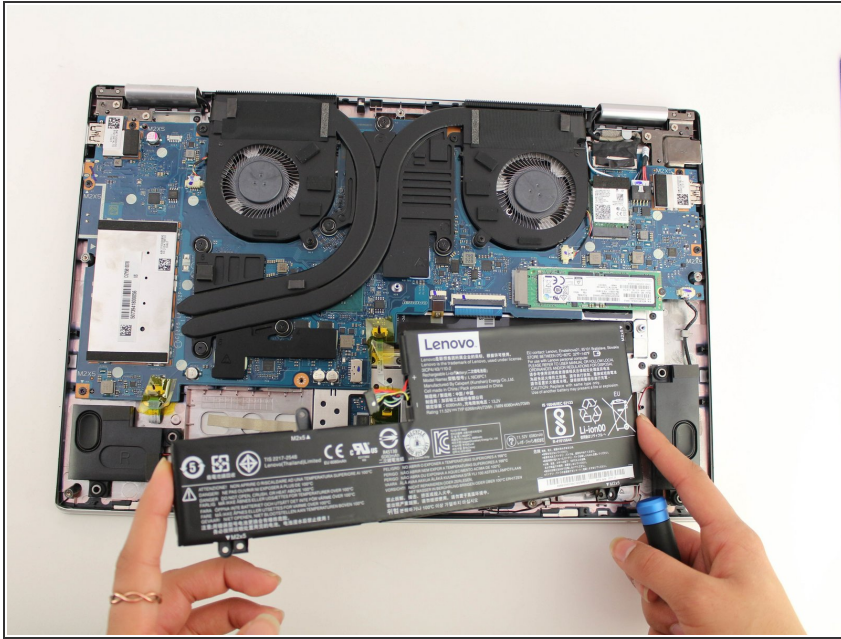

- Lift the battery out of the case to remove it.

To reassemble your device, follow these instructions in reverse order.