




Lenovo Yoga 720-15IKB Speakers Replacement

This guide will show you how to replace the speakers of your Lenovo Yoga 720 15-IKB (88YG7000828).

Written By: Jeremy Kostel

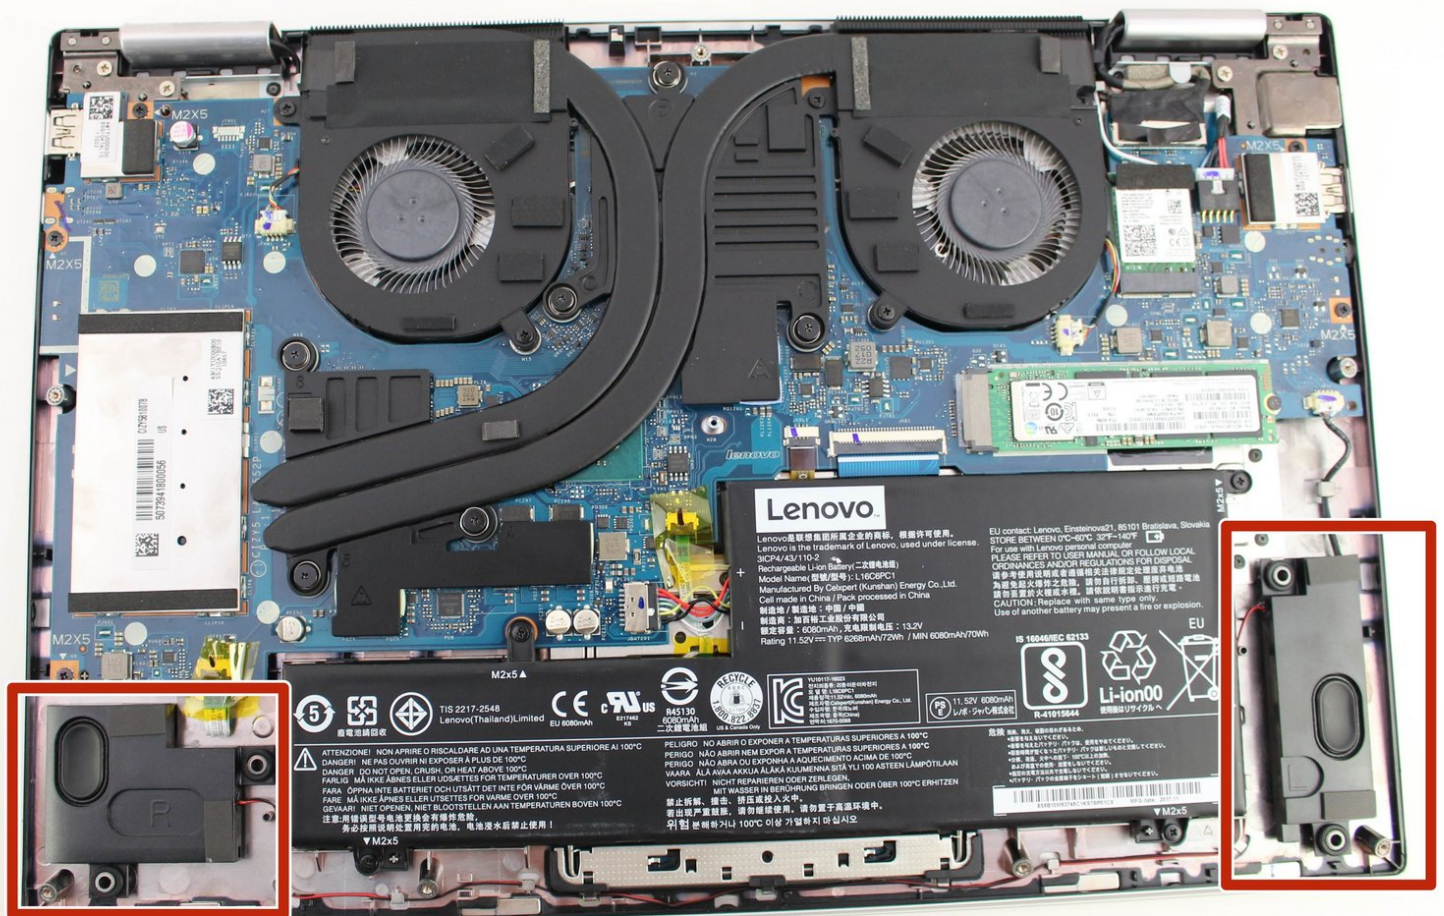

INTRODUCTION

This guide shows you how to replace the Lenovo Yoga 720 15-IKB (88YG7000828) speakers. This laptop is very similar to the Lenovo Yoga 720 13-inch , the Yoga 710, and the Yoga 730. Faulty speakers can cause audio to either be distorted or the computer to not produce audio at all. These symptoms are further explained on the [troubleshooting page](#).



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Bottom Cover



- Power off the device before starting.
- Flip the device over with the hinges facing away from you.
- Remove seven 5.0 mm Torx T5 screws.
- Remove three 9.5 mm Torx T5 screws.

Step 2



- Pry around the edges from one side to another with a plastic opening tool.


⚠ Do not pry on the side with the hinges because this can break the cover.

- Lift the case from the front until you feel resistance.

⚠ Do not keep lifting after you feel resistance, or the bottom cover can break.


- Pull the cover towards you, away from the hinges.
- Completely lift off the cover.

Step 3 — Speakers

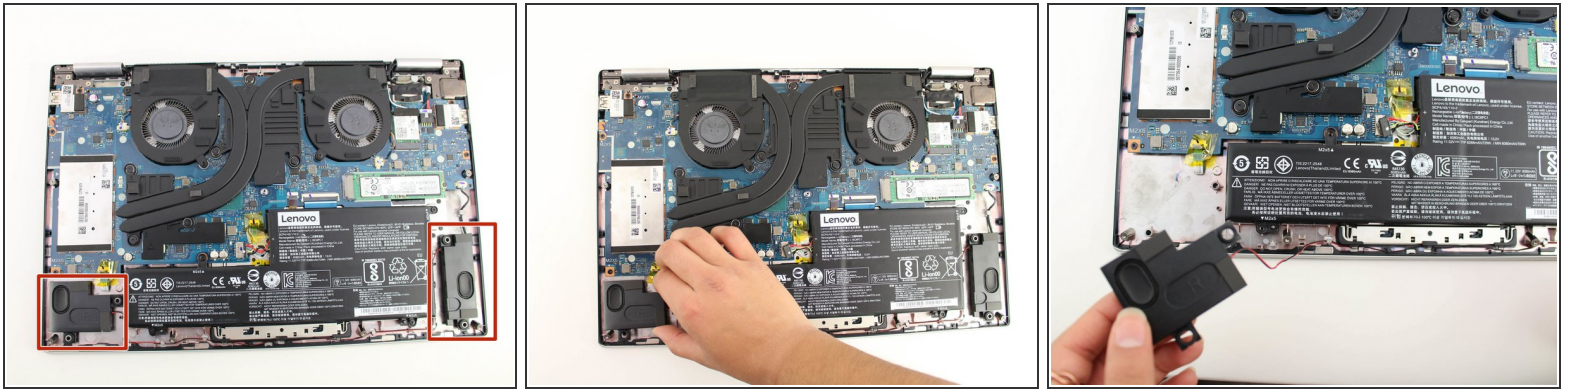


- Here are the speakers for this device.
- Pull the right speaker straight up and remove it from the computer.
- ⓘ As you remove the speaker, make sure to also carefully pull the wire connected to the speaker out along with the speaker.

Step 4

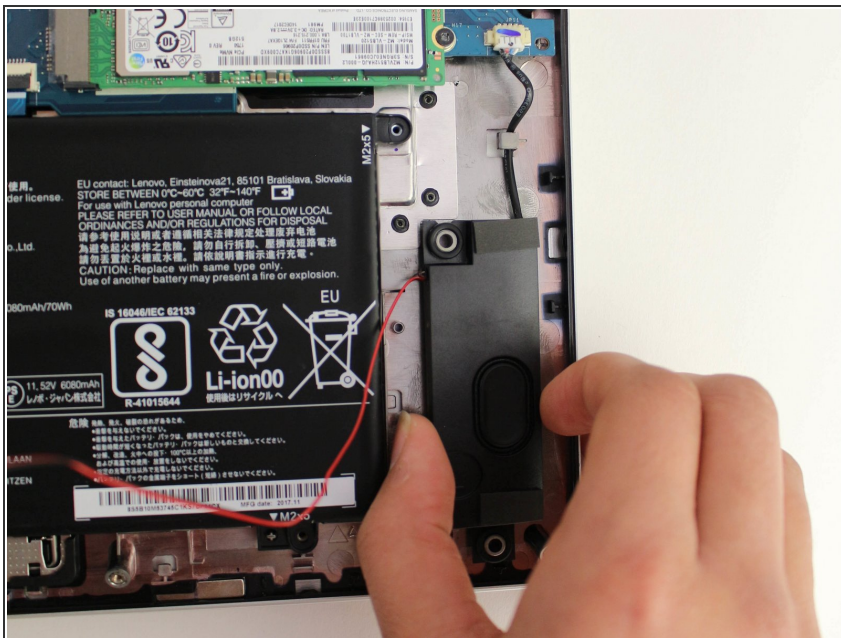

- Remove the left speaker similarly to how the right speaker was removed.

Step 5

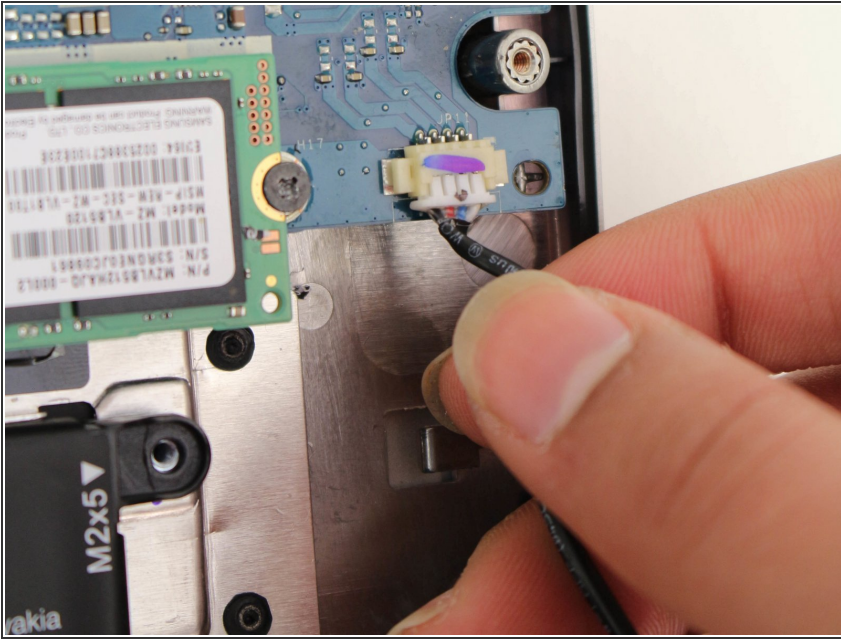

- Unplug the speaker by firmly pulling the wire out of the socket.

To reassemble your device, follow these instructions in reverse order.