



Sony VAIO VGN-FW 590 Hard Drive Replacement

This guide demonstrates how to replace the hard drive for the VAIO VGN-FW590

Written By: William Cawley



INTRODUCTION

The hard drive is the major internal data storage device of the VAIO VGN-FW590. Without a working hard drive, the laptop will not function properly. This guide will demonstrate how to identify, remove, and replace the hard drive without damaging the device.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Sony VAIO VGN-FW590 Hard Drive](#) (1)

Step 1 — Hard Drive




- Set the laptop upside down on your work area.
- Locate the hard drive under the panel on the bottom left side.

Step 2



- Remove one 7.7 mm Phillips #1 screw securing the panel to the laptop.
- Slide the panel down to remove it from the computer.

Step 3

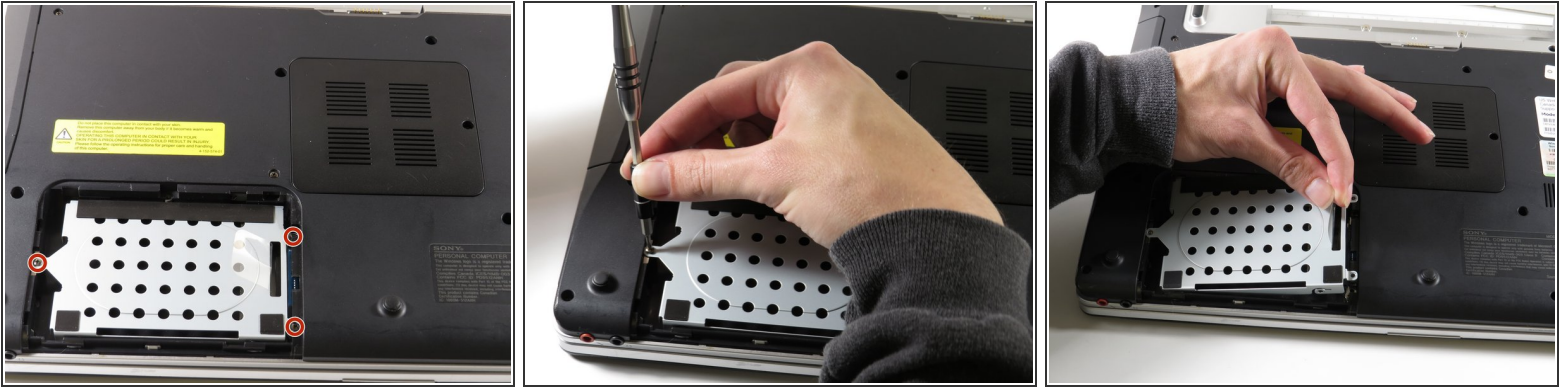

- Remove three 7.7 mm Phillips #1 screws securing the hard drive to the laptop.
- Slide the hard drive to the left to disconnect it from the motherboard.
- Remove the hard drive by lifting it out of the computer.

To reassemble your device, follow these instructions in reverse order.