



# ASUS Q324UA-BHI7T17 Battery Replacement

A step by step guide on how to quickly and easily replace the ASUS Q324UA-BHI7T17 battery component.

Written By: Scott Santiago



## INTRODUCTION

Batteries either get damaged due to electrical or physical damage, or they get old and simply need to be replaced. Therefore, a replacement battery will be needed, which can be purchased, after purchasing a replacement battery follow these steps to replace the old battery.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)

### PARTS:


- [57Wh OEM Genuine C31N1538 Laptop Battery](#) (1)

## Step 1 — Battery



- Remove all 10 Phillips screws on the backplate.
- ⓘ All 10 screws are 0.55 inches and 20 mm in diameter.

## Step 2

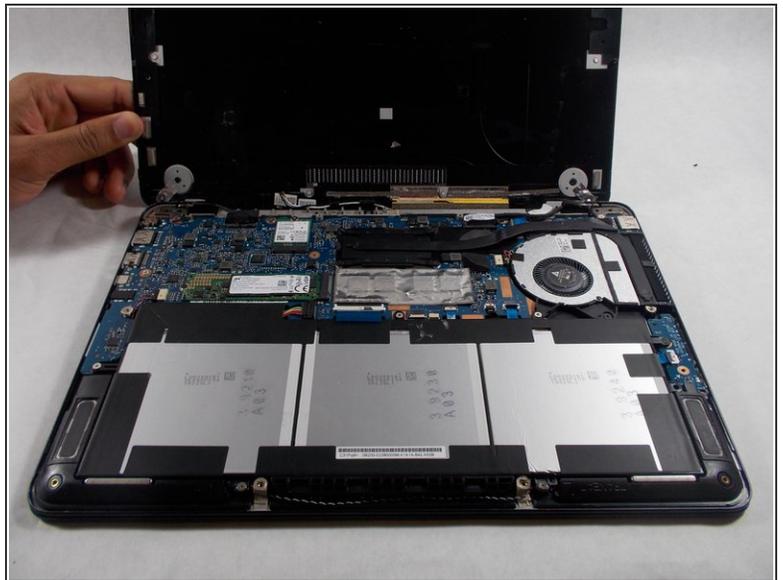


- Carefully remove the backplate using the plastic opening tool.

### Step 3





- Locate the battery near the bottom.

### Step 4

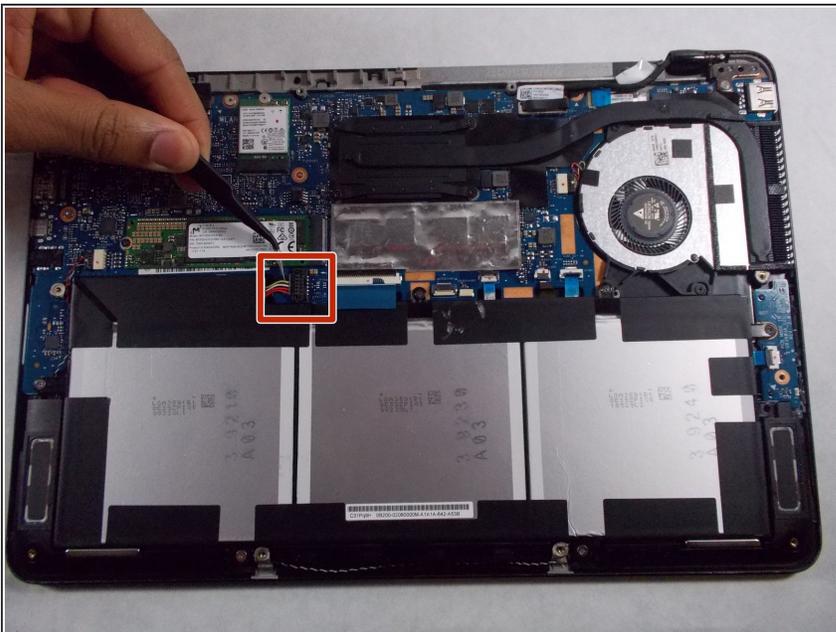

- Next, lift up the battery connector from the laptop in the upper left side of the battery, using tweezers or spudger.
- ⚠ Make sure to complete this step with caution, because if the battery is not unplugged, the motherboard may shock you.

## Step 5

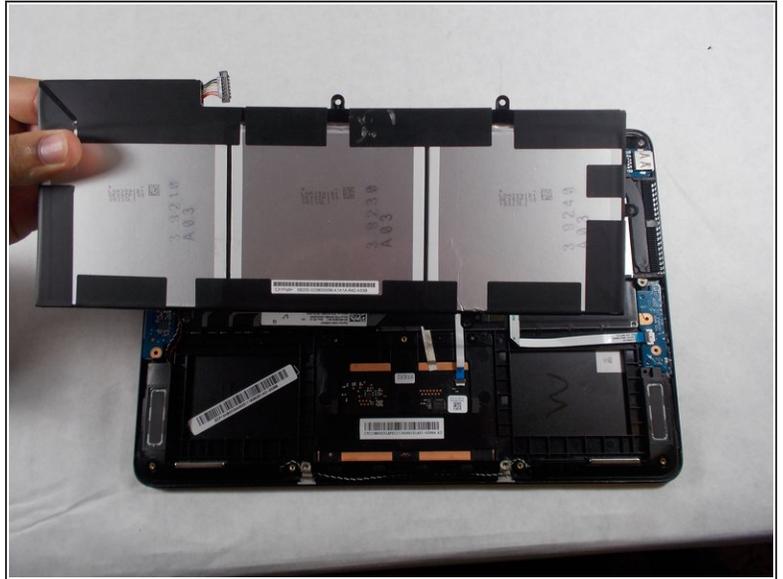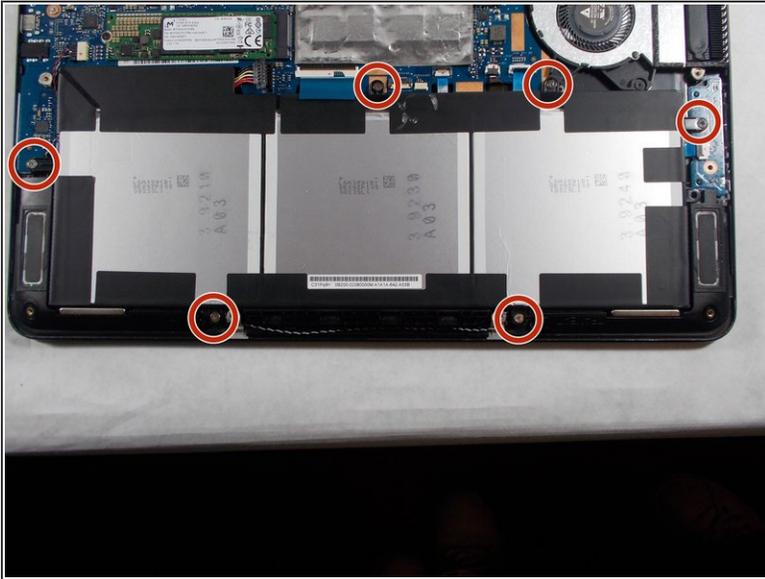

- Remove the six screws holding in the battery with a Phillips #0 screwdriver.
- Once battery is lifted out and removed, proper dispose of the old battery.
- ⓘ Each screw is 0.5 cm in length and 0.5 cm in diameter.

To reassemble your device, follow these instructions in reverse order.