



Sony VAIO VGN-FW 590 Battery Replacement

This guide will demonstrate how to replace a dead or dying batter for a VAIO VGN-FW 590 laptop.

Written By: Morton Wakeland



INTRODUCTION

The battery of the VAIO VGN-FW590 allows the laptop to remain working when not plugged into a power point. Replacing the battery pack is not complicated and you should be able to replace it easily.



PARTS:

- [Sony Rechargeable Battery Pack](#) (1)
-

Step 1 — Battery




- Turn the computer off, close the LCD screen, and insure the computer is unplugged from any outlet.
- Turn the computer over so that the bottom of the computer is facing up and the "screen swivels" (DC in port and On button) are facing away from you.
- Locate the battery pack between the two "screen swivels" at the top of the computer back.

Step 2



- Locate two sliding release switches below the battery pack.
- Slide the "Lock" release to the right toward the center of the computer.
- Slide the "Release" switch to the left, toward the center of the computer. It must be held in place because it is spring loaded.

Step 3

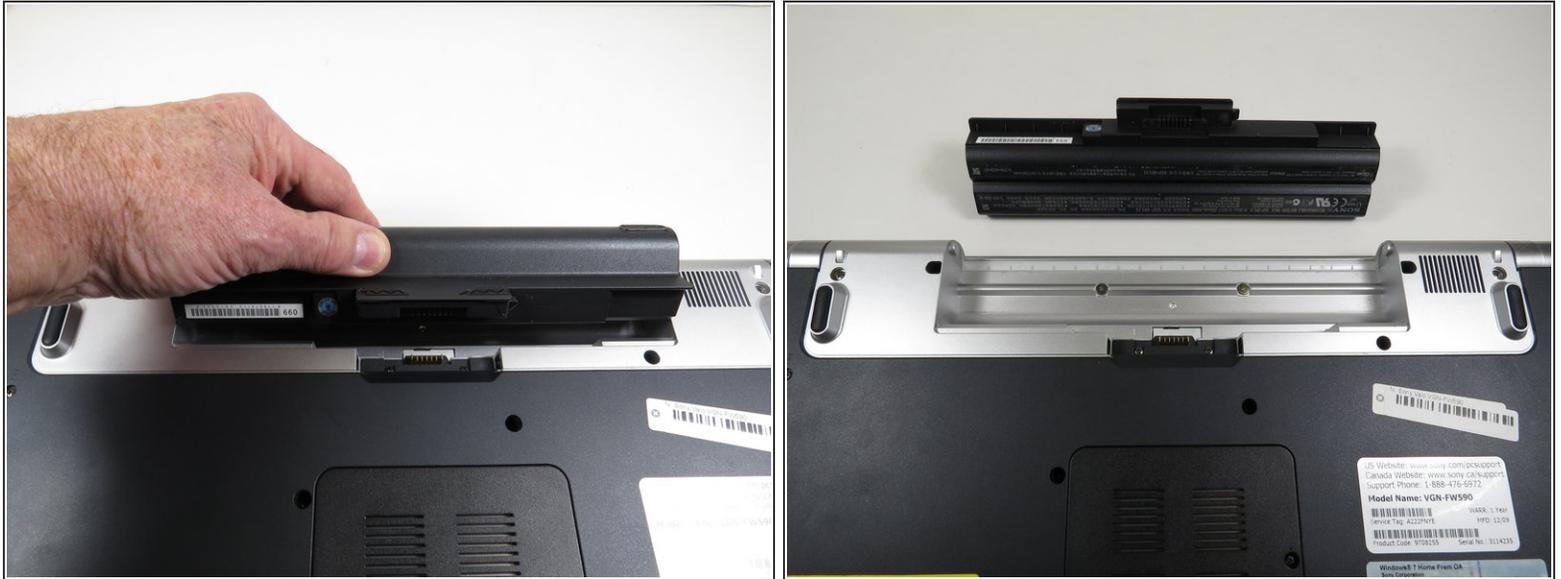

- While holding the "Release" switch toward the center of the computer, press on the raised portion of the battery pack away from you. The battery pack will pop up.
- Once the battery pack has popped out of its compartment, lift it out of the computer.

To reassemble your device, follow these instructions in reverse order.