


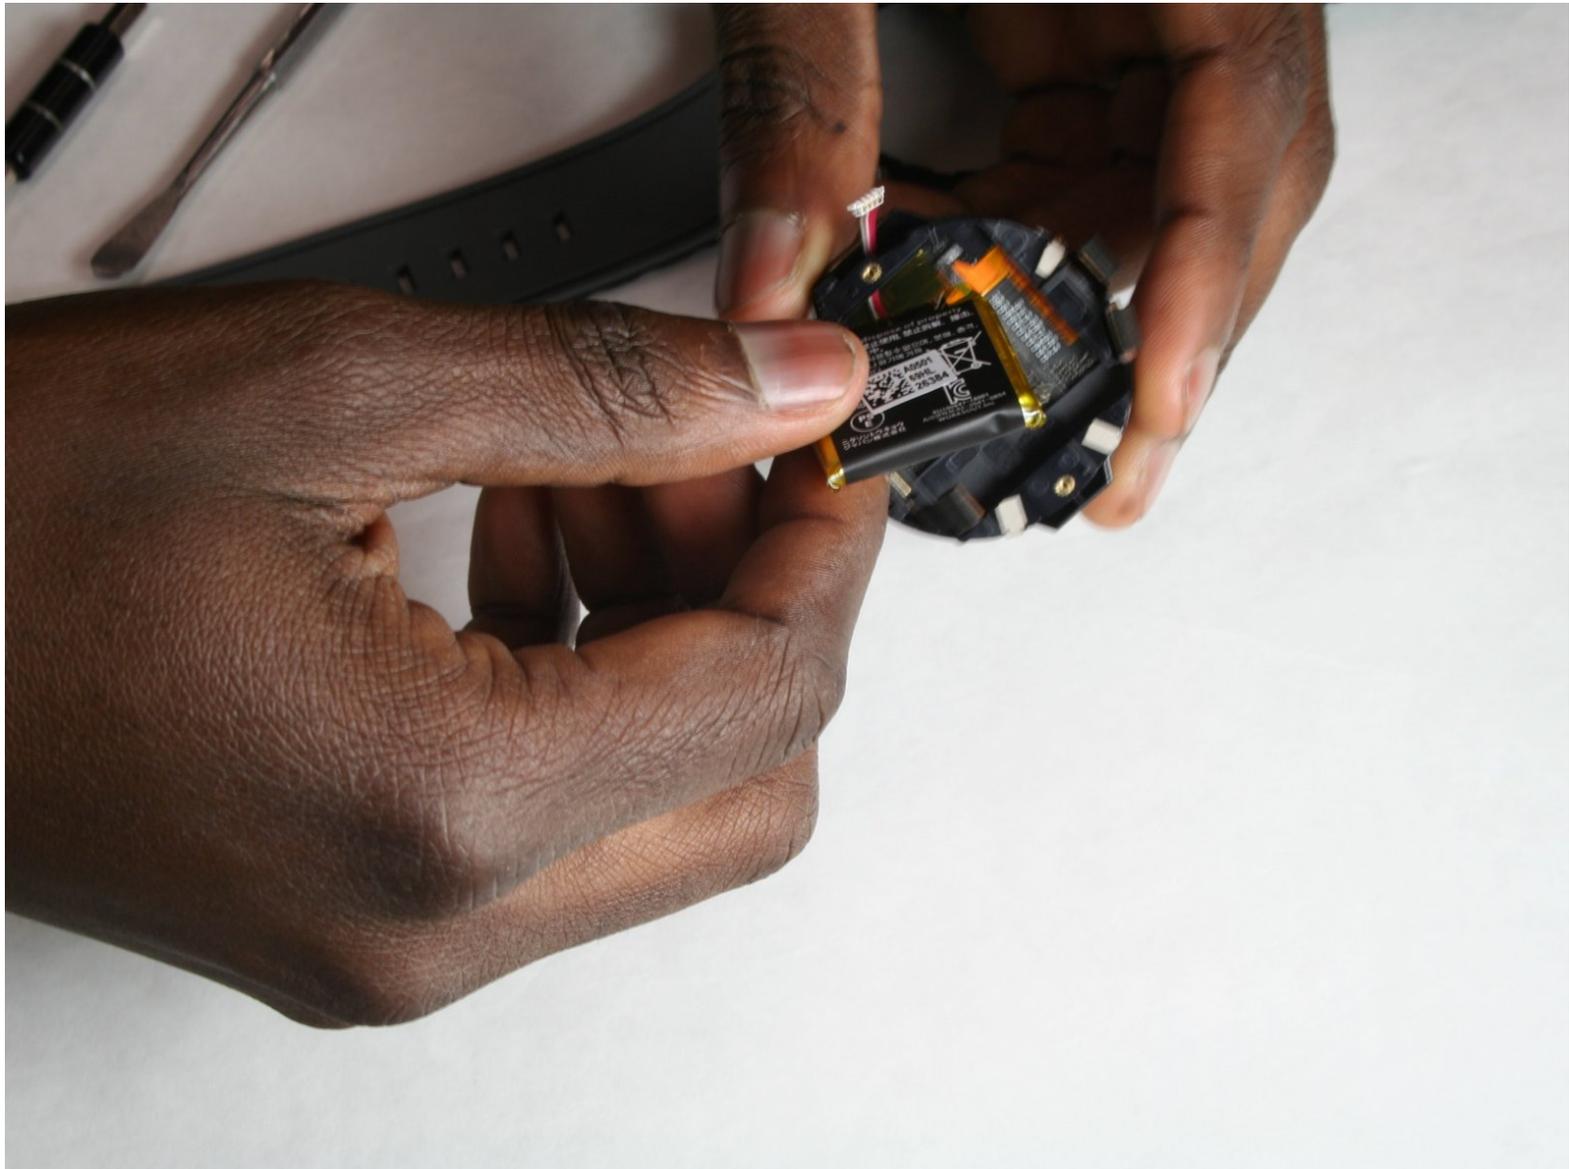

Nixon Mission Android Wear Battery Replacement

Disassemble Nixon Mission Android Wear for battery replacement.

Written By: Mauricio Ambrosio




INTRODUCTION

Batteries tend to lose capacity over time. This guide will show you how to replace the battery of your Nixon Mission Android Wear.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

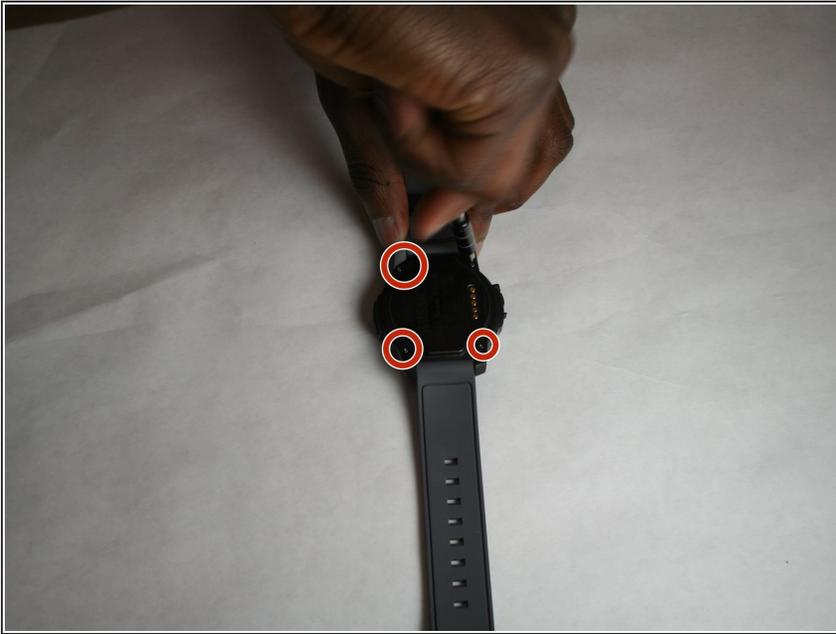

- Remove 4 4.5mm Phillips head screws from back side of watch using PH00 Phillips head.

Step 2



- Remove the back plate of watch.

Step 3




- Unclip 5 latches from motherboard using a plastic spudger.

Step 4




- Remove the 2 3.0mm screws from motherboard using PH00 Phillips head.

Step 5

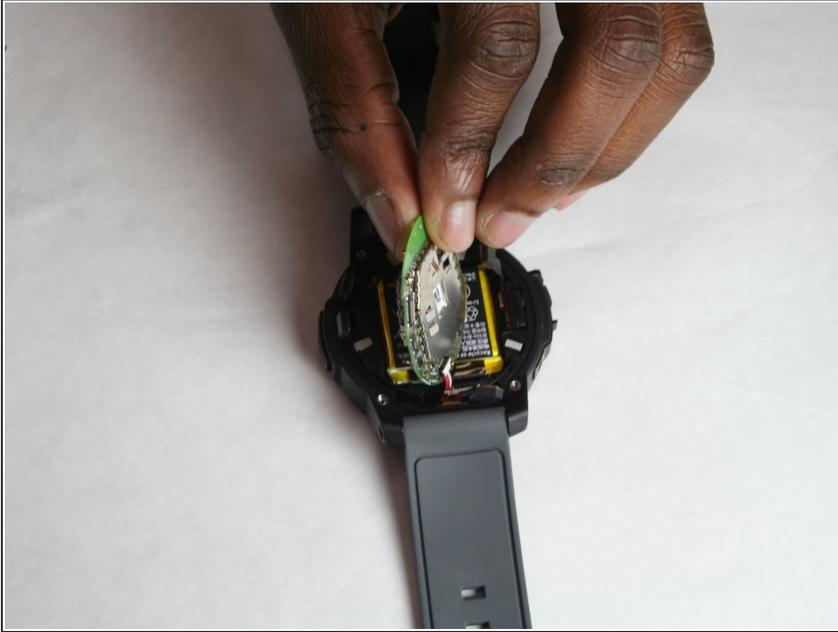


- Carefully remove motherboard & internal screen.

Step 6

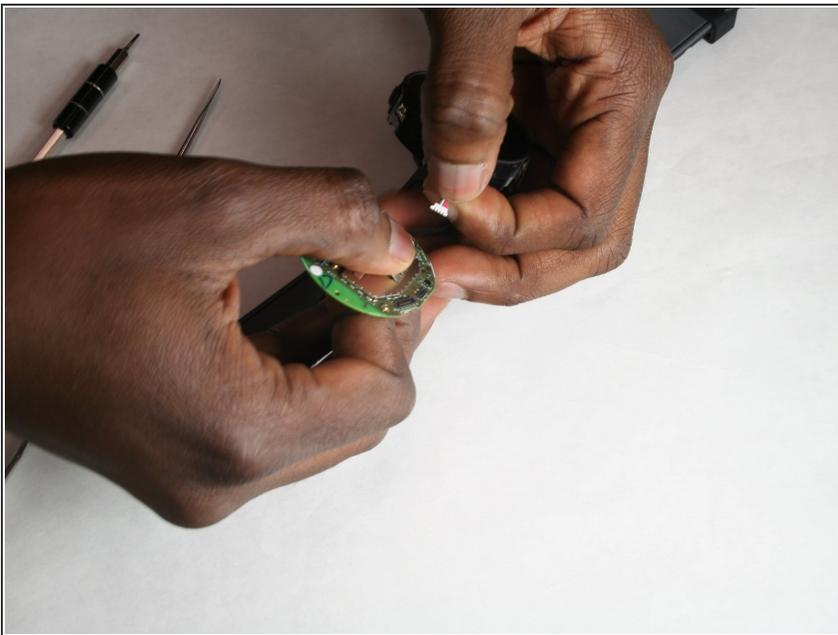

- Remove from the motherboard the connector with the four cables.
- Pull the cables upward and the motherboard downward as shown in the picture.

Step 7

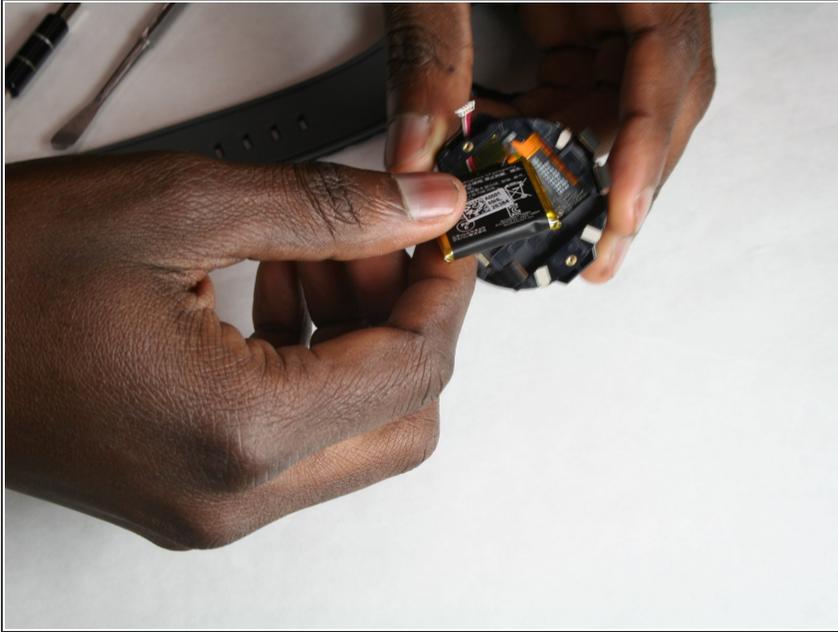

- Carefully remove the battery from the watch.

To reassemble your device, follow these instructions in reverse order.