



HP Envy dv7t-7200 Service Cover Replacement

Use this guide to replace a faulty service cover on your HP Envy dv7t-7200 if the back cover has been broken, damaged, or will not stay on any longer.

Written By: Krystal



INTRODUCTION

Use this guide to replace a faulty service cover on your HP Envy dv7t-7200 if the back cover has been broken, damaged, or will not stay on any longer.




TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-


Step 1 — Battery



 Turn the power off and disconnect all cables and cords from the laptop.


- Place the computer on its top on a flat surface with the hinges facing away from you.

Step 2

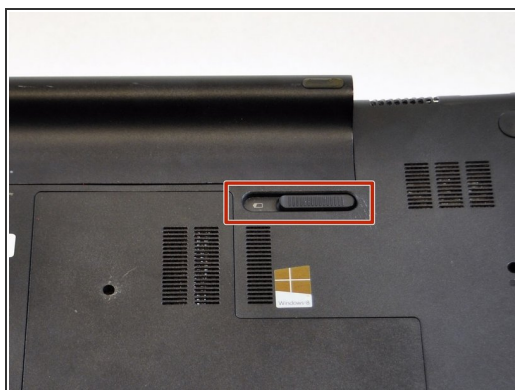

- Slide the battery release latch to the left which is located on the right-hand side of the battery.

Step 3

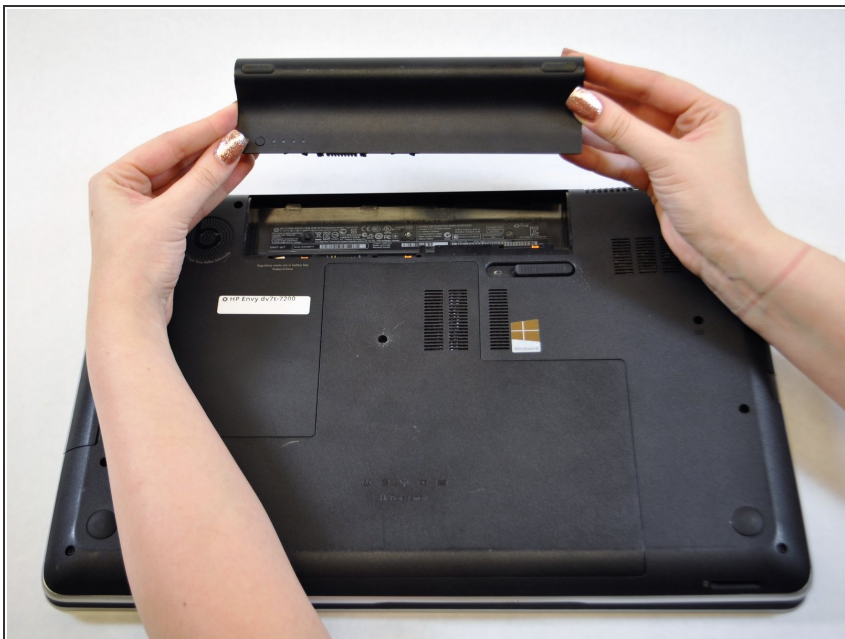



- Tilt the battery away from you and lift out.

Step 4 — Service Cover



- Using a Phillips #01 screwdriver, remove the Phillips PM2.5x5.5 screw on the service cover.
- ⓘ This screw does not come out of the service cover completely once loosened.

Step 5

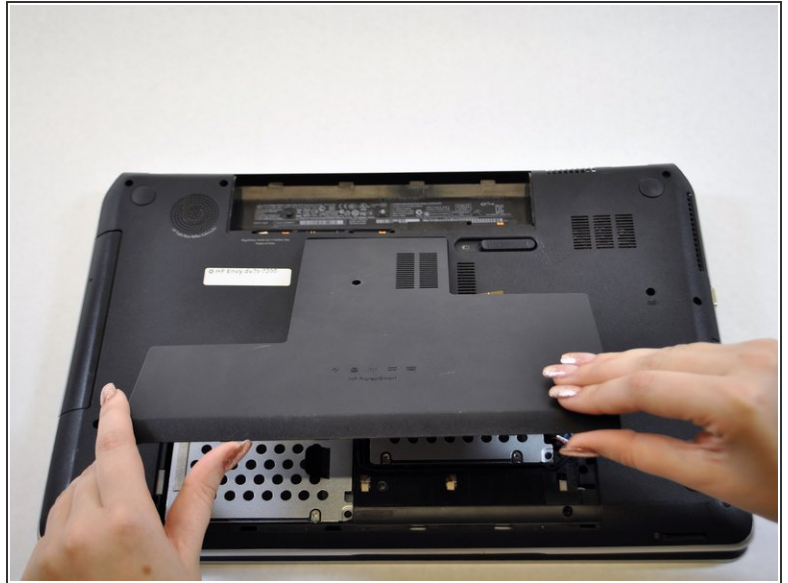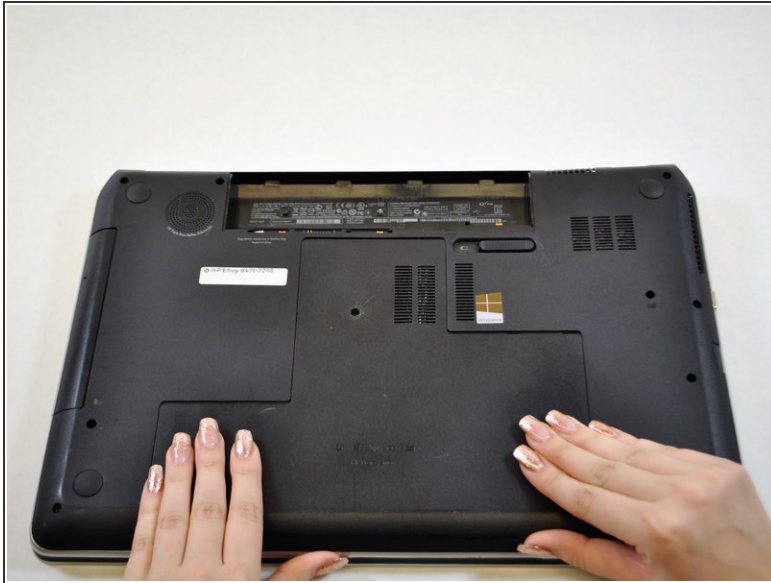

- Slide the service cover toward the front of the laptop.
- Lift the service cover to remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.