




# Acer Chromebook CB5-571-C5XU Trackpad Replacement

The trackpad is one of the main inputs of a...

Written By: David Flint

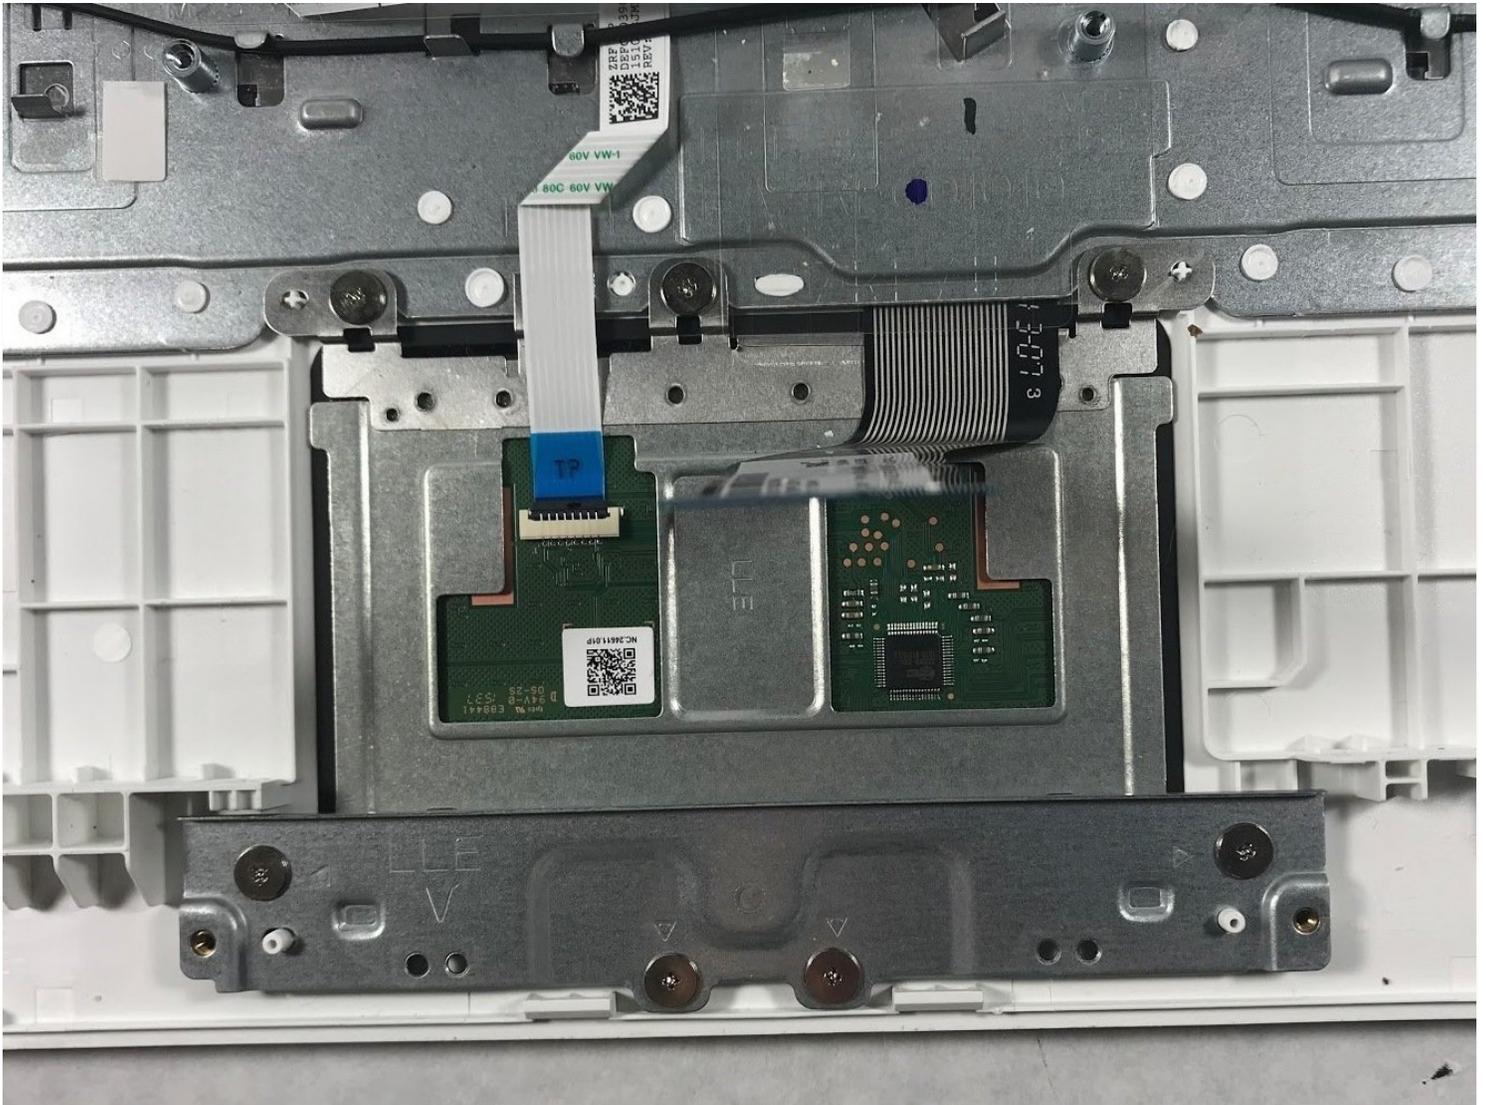

# INTRODUCTION

The trackpad is one of the main inputs of a laptop; it is how the user controls the mouse and scrolling functions of the laptop. It can be susceptible to cracking or internal damage if too much pressure is applied to the part. This guide will show how to replace the trackpad if it is broken.


## TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #0 Screwdriver](#) (1)

[Spudger](#) (1)


## Step 1 — Bottom Case

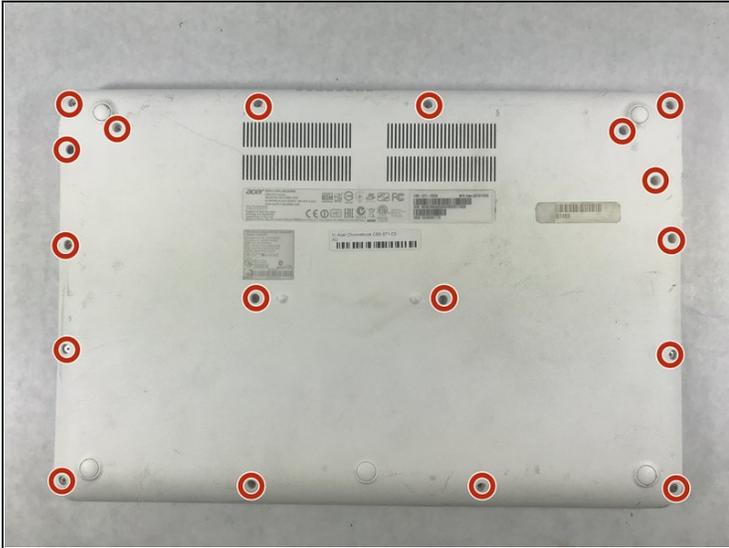

- Remove the following eighteen screws using a Phillips #0 screwdriver.


 **Make sure the Chromebook is unplugged and shut down, so no files are lost and there is no risk of electrocution.**

## Step 2

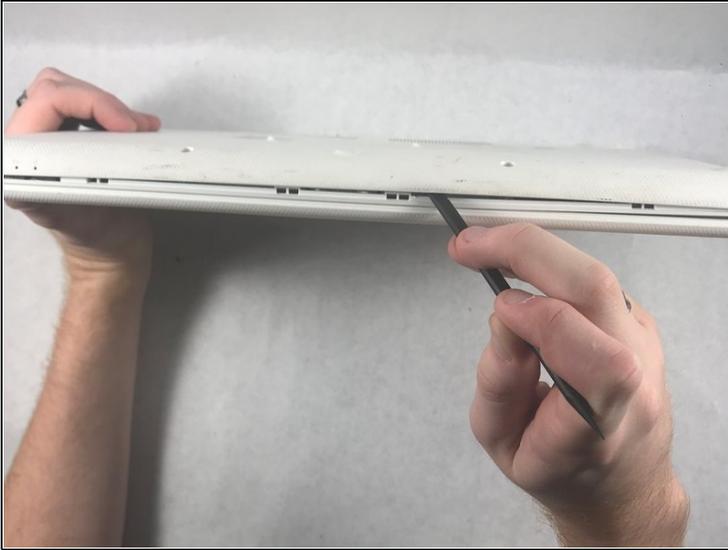


- Using the flat side of the spudger, pry open the bottom case of the laptop.
- ⓘ Working from the front to the back, where it connects to the screen, proved to be the easiest way of popping the case off.

## Step 3 — Battery

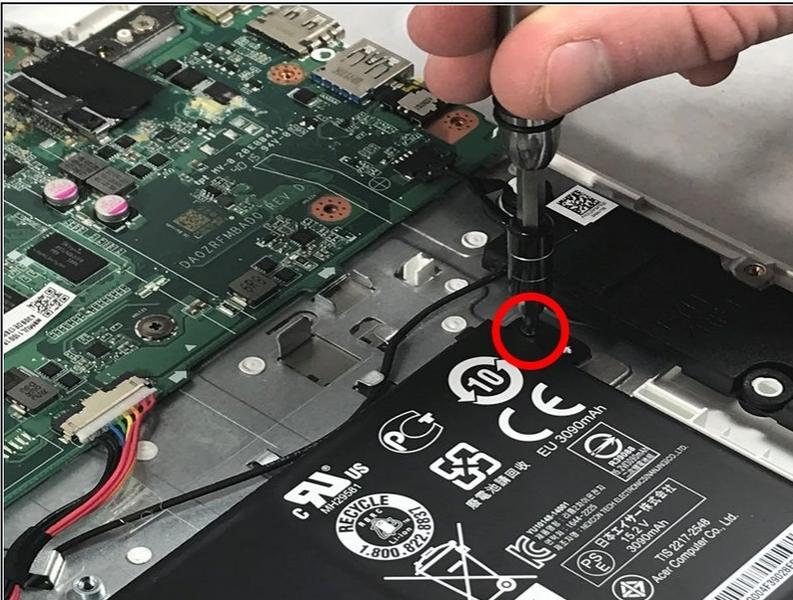

- Using a Phillips #0 screwdriver, unscrew the screw on right side of the battery placement.
- ☑ Be careful not to lose the screw and have a small container nearby to place it in.

## Step 4

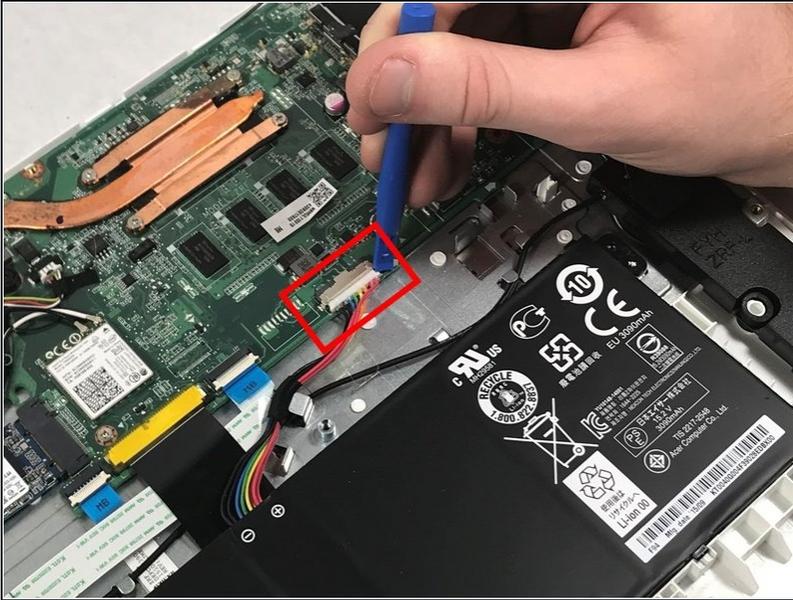


- Using a plastic opening tool, disconnect the wires connecting the battery to the motherboard.

## Step 5




- Gently lift the battery out and remove it from the laptop casing.

## Step 6 — Trackpad

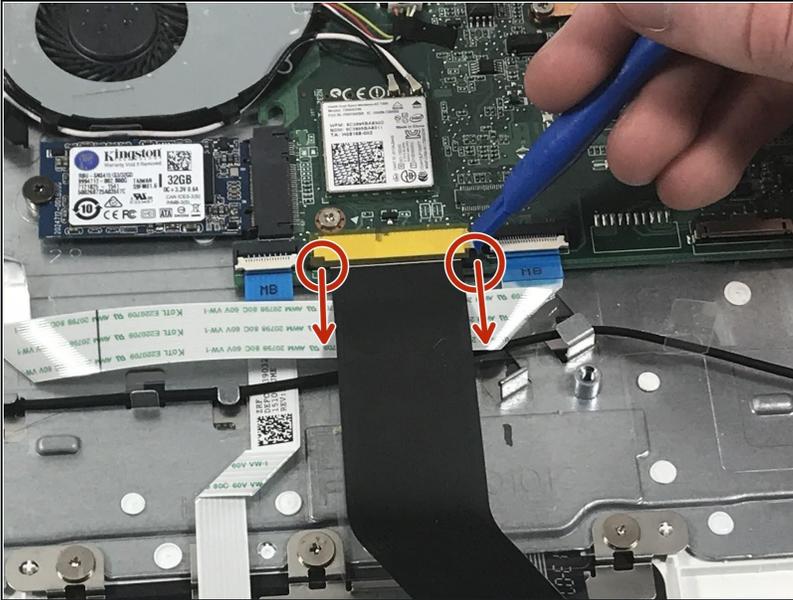


- Unhook the black ribbon from the motherboard, using the opening tool to pull the hooks in the direction of the arrows.
- Once the hooks are released, simply pull the black ribbon outward to remove it from the motherboard.

## Step 7

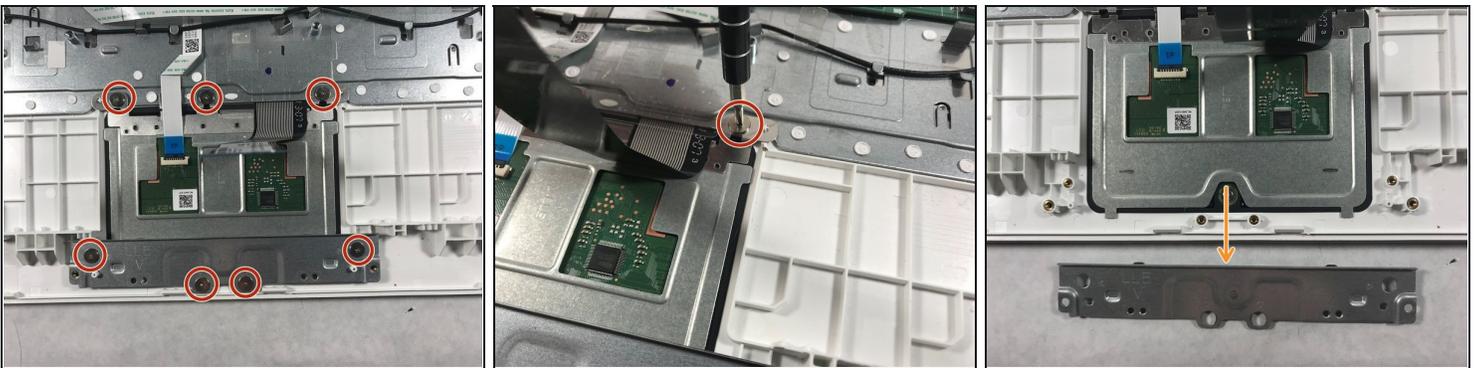



- Using a Phillips #0 screwdriver, remove the 7 screws holding the trackpad in place.
- The metal piece at the bottom edge of the laptop will lift off after the screws are removed.

## Step 8

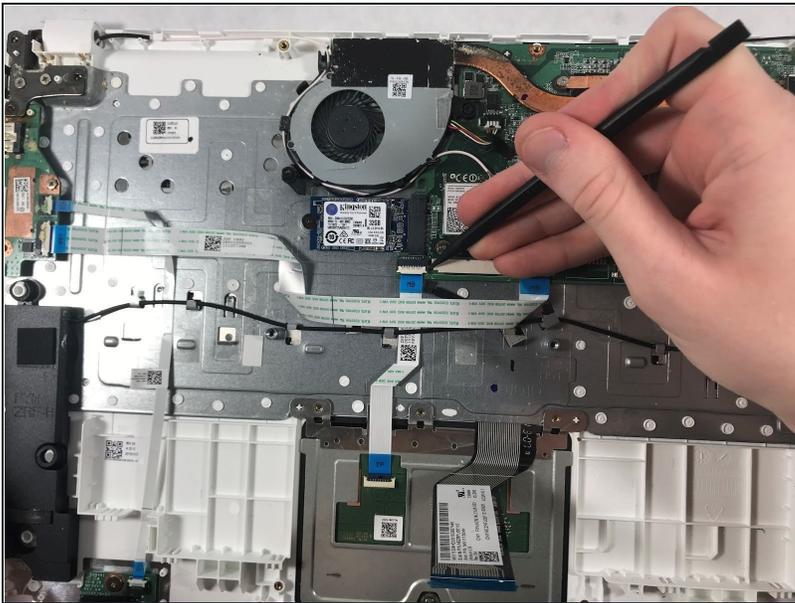

- Use the spudger tool to unhook the locks on both sides of the end of the white ribbon. Pull the ribbon outward away from the motherboard.

## Step 9

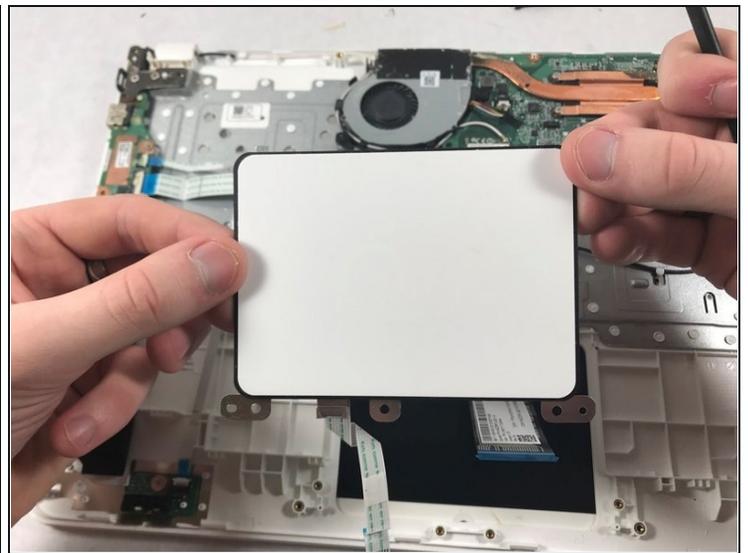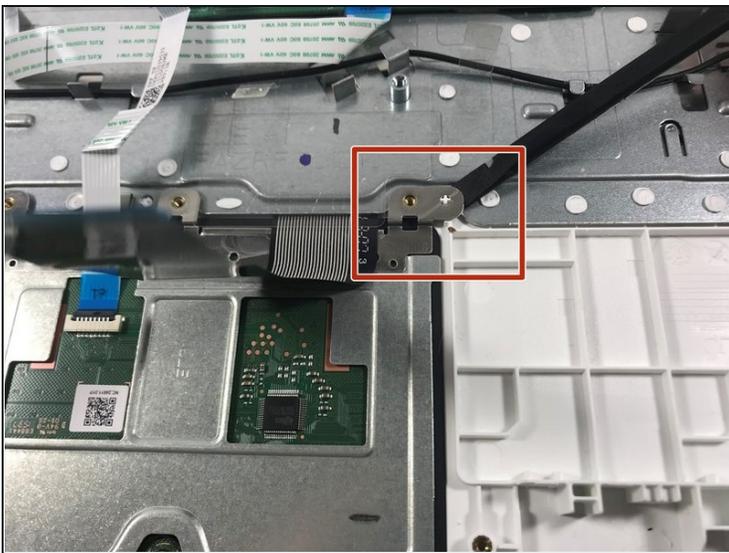

- Use the spudger tool to pry the trackpad up and away from the laptop.

To reassemble your device, follow these instructions in reverse order.