



Acer Chromebook C740-C4PE Solid State Drive Replacement

Use this guide to replace the Solid State Drive in Acer Chromebook C740-C4PE

Written By: Sang Huynh



INTRODUCTION



This guide will show you how to change the Solid State Drive in Acer Chromebook C740-C4PE.




TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Solid State Drive

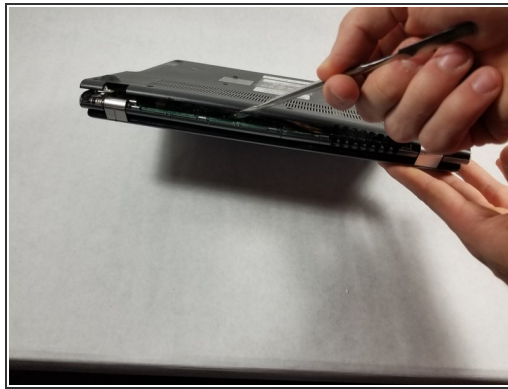
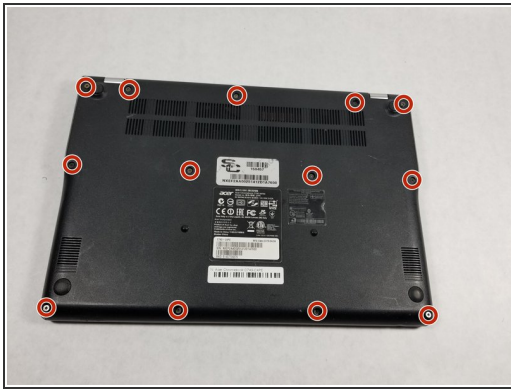


 Make sure the laptop is turned off and laid down on a flat surface.

- Unscrew the 13 screws on the back of the device using a PH0 Phillips head screwdriver.
- Use the spudger or any other prying tool to pry the back plate off of the device.


 Be sure not to pry too hard as it may result in snapping the back plate.

Step 2

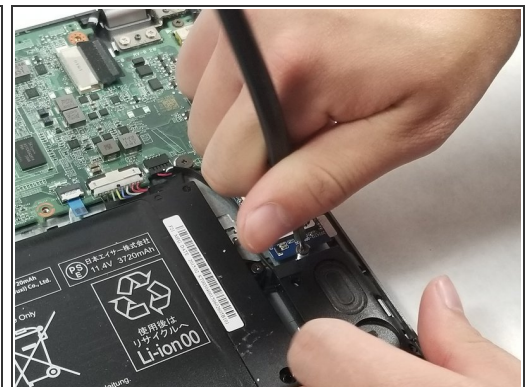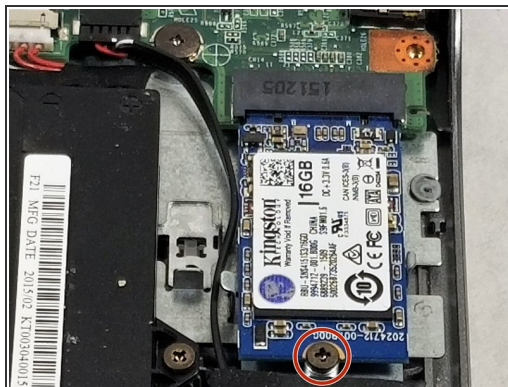

- Remove the 3.75 mm screw with a Phillips #0 screwdriver.

Step 3

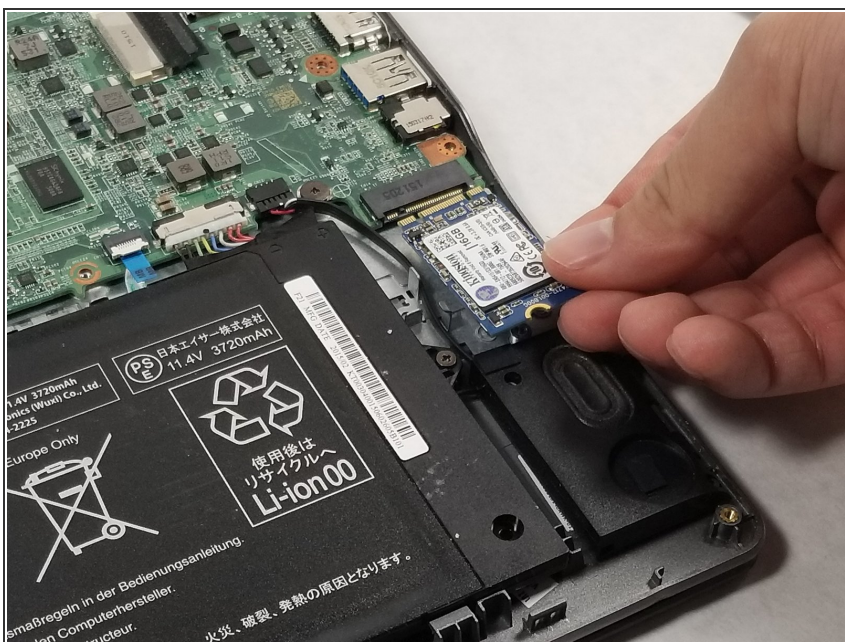

- Pull the Solid State Drive out of the connector.

To reassemble your device, follow these instructions in reverse order.