



Solio Rocsta Battery Replacement

In this guide, we will show you how to change the battery of the Solio Rocsta.

Written By: David Vazquez




INTRODUCTION

A batteries' cycle life will only last for so many charges. In time the battery may no longer hold a charge to power your device. In this guide, we will show you how to change the battery of the Solio Rocsta.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Solio Rocsta Top Cover Disassembly

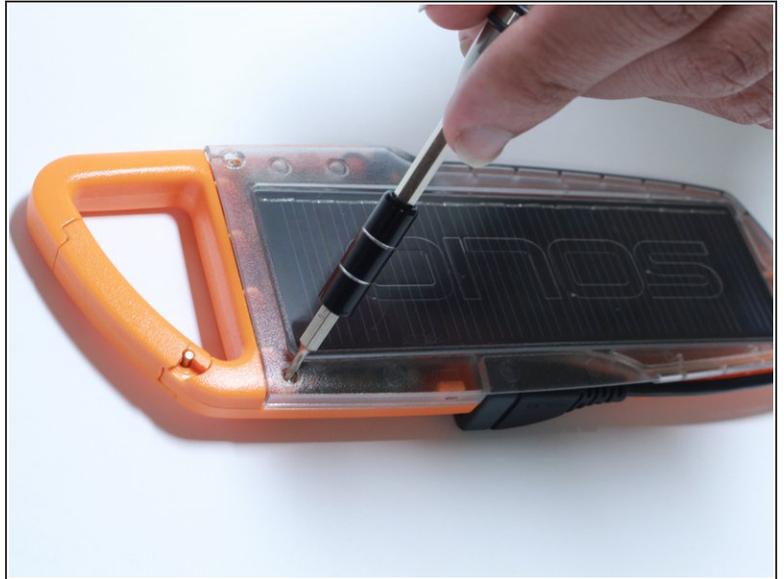

- Locate, and unscrew, the three 5.72 mm screws that hold down the top cover using the T6 Torx screwdriver.

Step 2

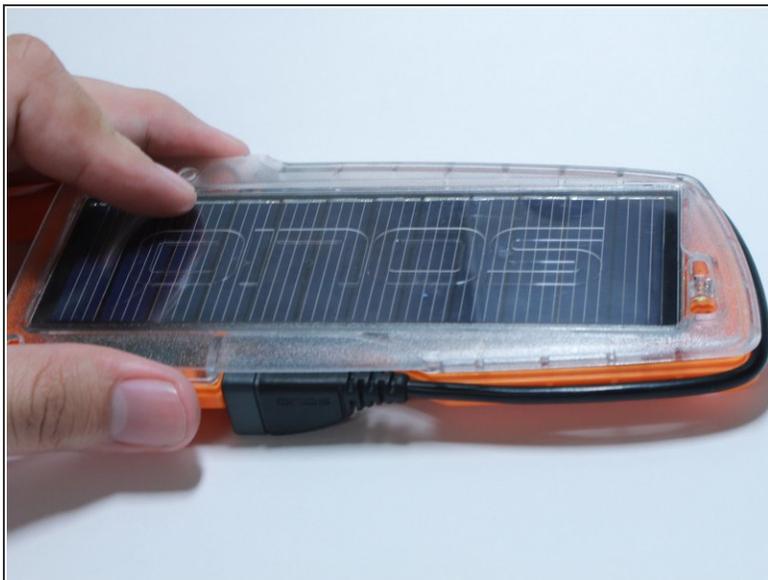

- Remove top cover.


⚠ Caution: the solar cell is attached to the top cover and connected to the circuit board by a short wire .

Step 3 — Battery




- Using the spudger, pry the battery off the back cover.

Step 4

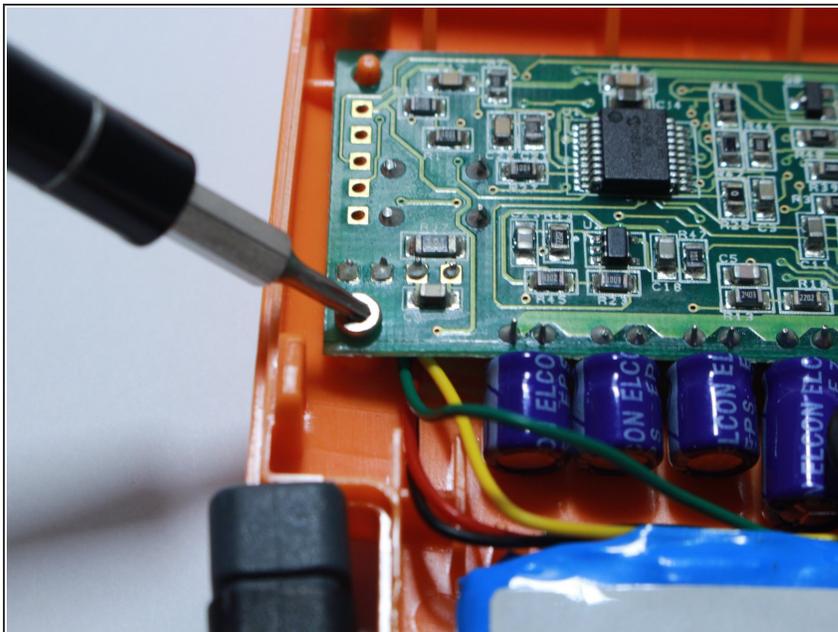

- Using a T6 Torx screwdriver, unscrew the 5.66 mm screws attaching the circuit board to the case and flip the circuit board.

Step 5

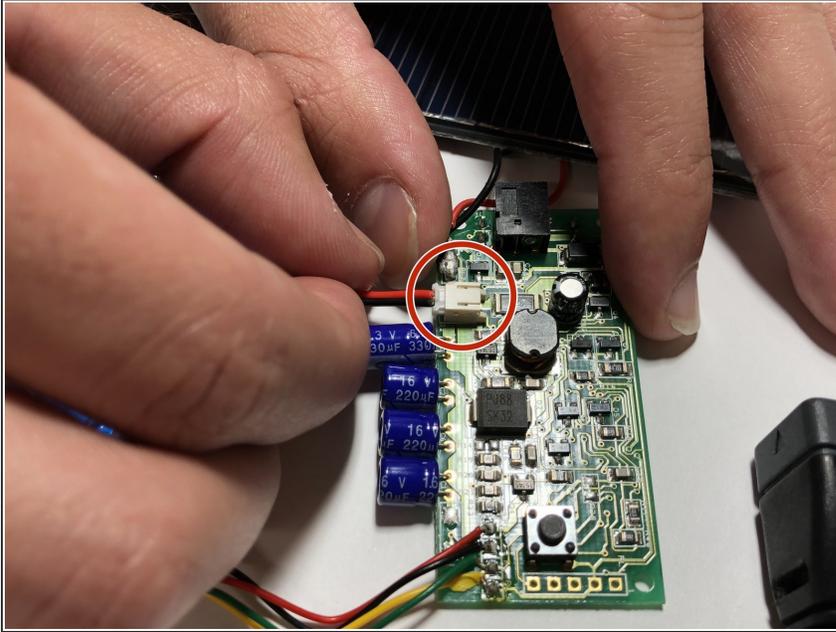

- With the circuit board flipped, locate the battery connector.
- Hold the component attached to the circuit board the battery is connected to and wiggle the cable out.

To reassemble your device, follow these instructions in reverse order.