



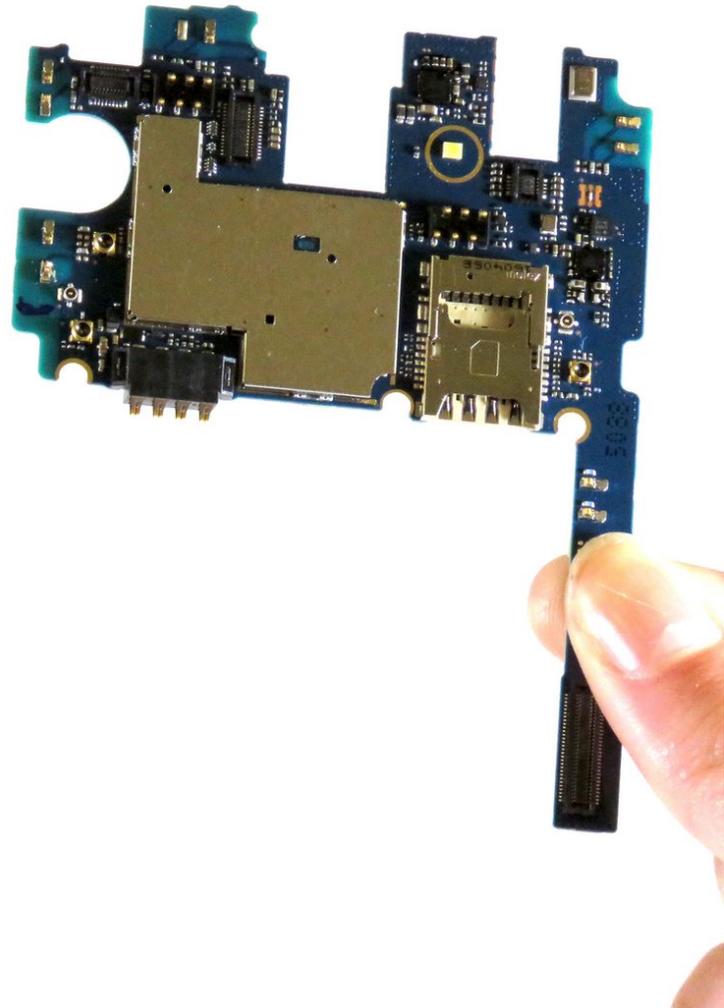

LG G Vista Motherboard Replacement

How to replace the motherboard in your LG G Vista.

Written By: Key Baker

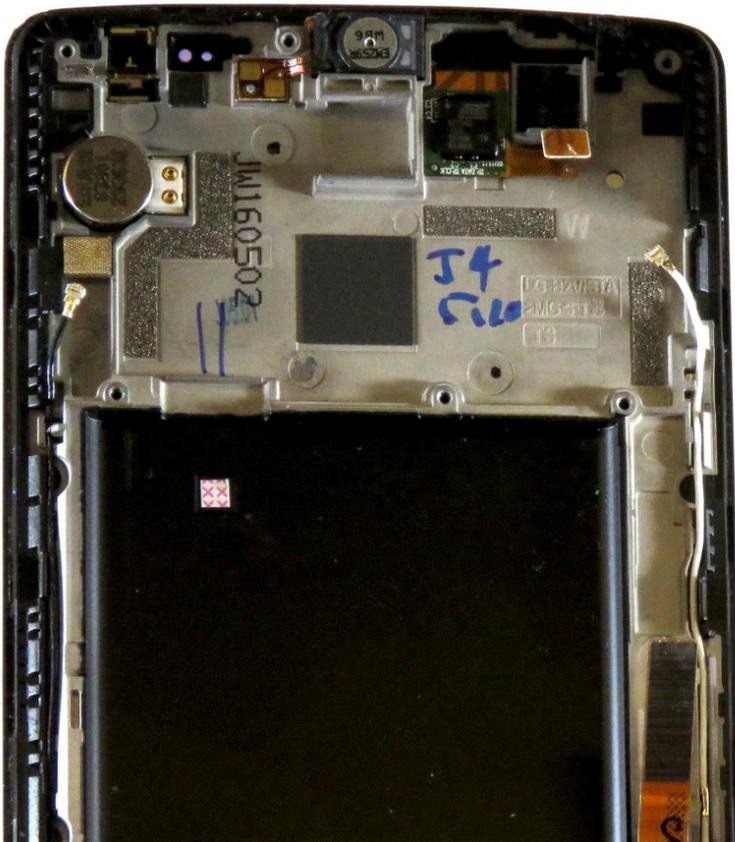

INTRODUCTION

This guide will walk you through with replacing the motherboard of you LG G Vista. You will need tweezers, a Phillips screwdriver #000, and a small plastic spudger, or your thumb nail.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery




- Make sure the device is powered off.

Step 2



- Remove the back cover by gently prying open the case of the device from the charging port.

Step 3

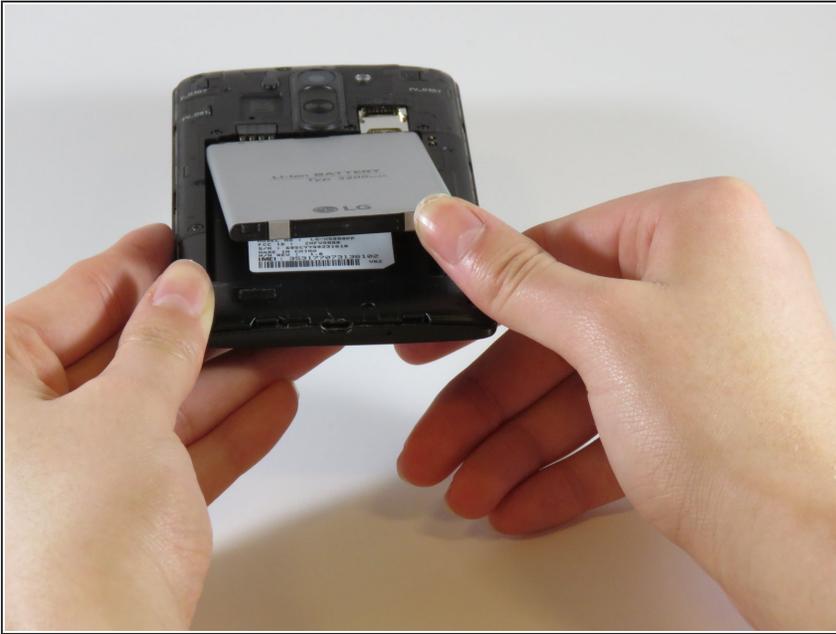


- Lift the battery out of its place by prying up from the small notch at the base of the battery.

Step 4 — Motherboard




- Remove the eight 3.0 mm screws using the Phillips #000 screwdriver.

Step 5

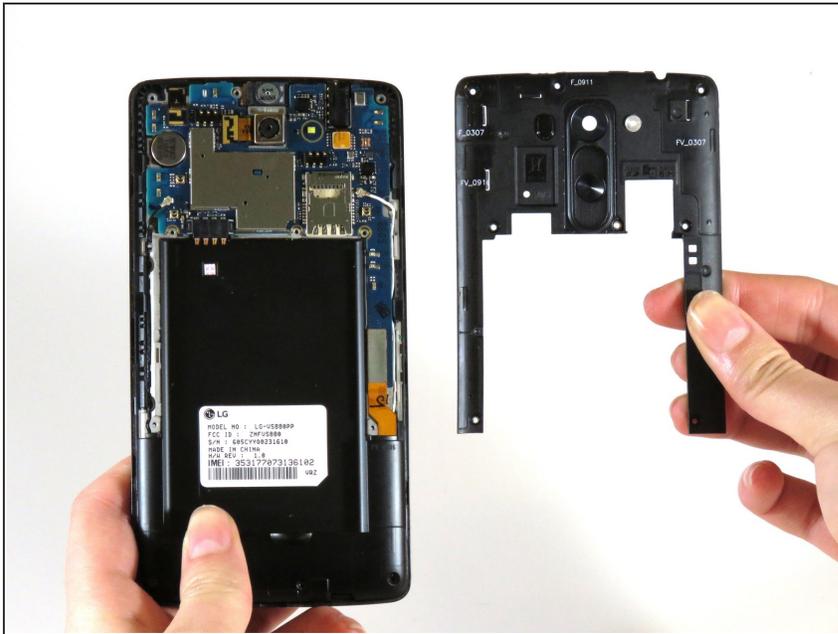


- Remove the hard shell covering the motherboard.

Step 6

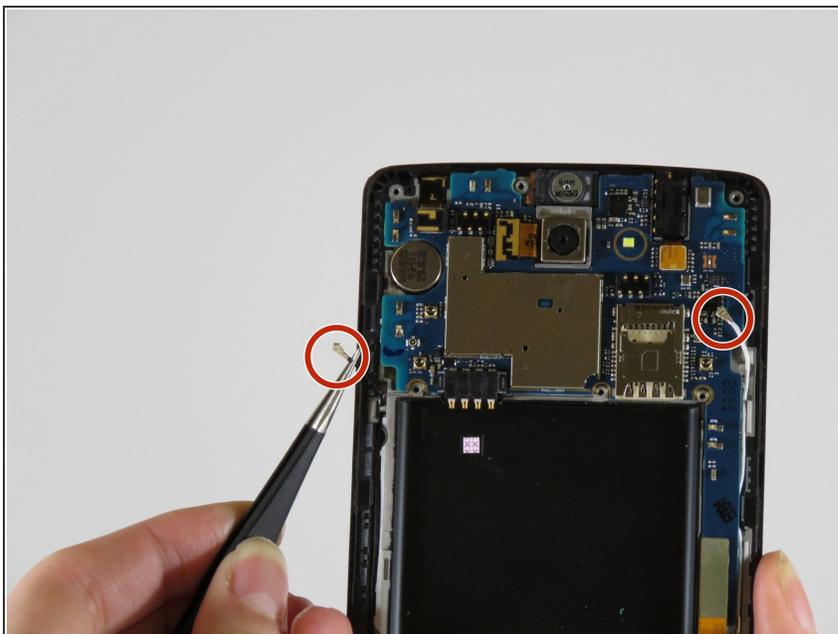

- Use a pair of tweezers to lift up the white antenna wire. On the other side of the logic board, do the same for the black antenna wire.


Step 7

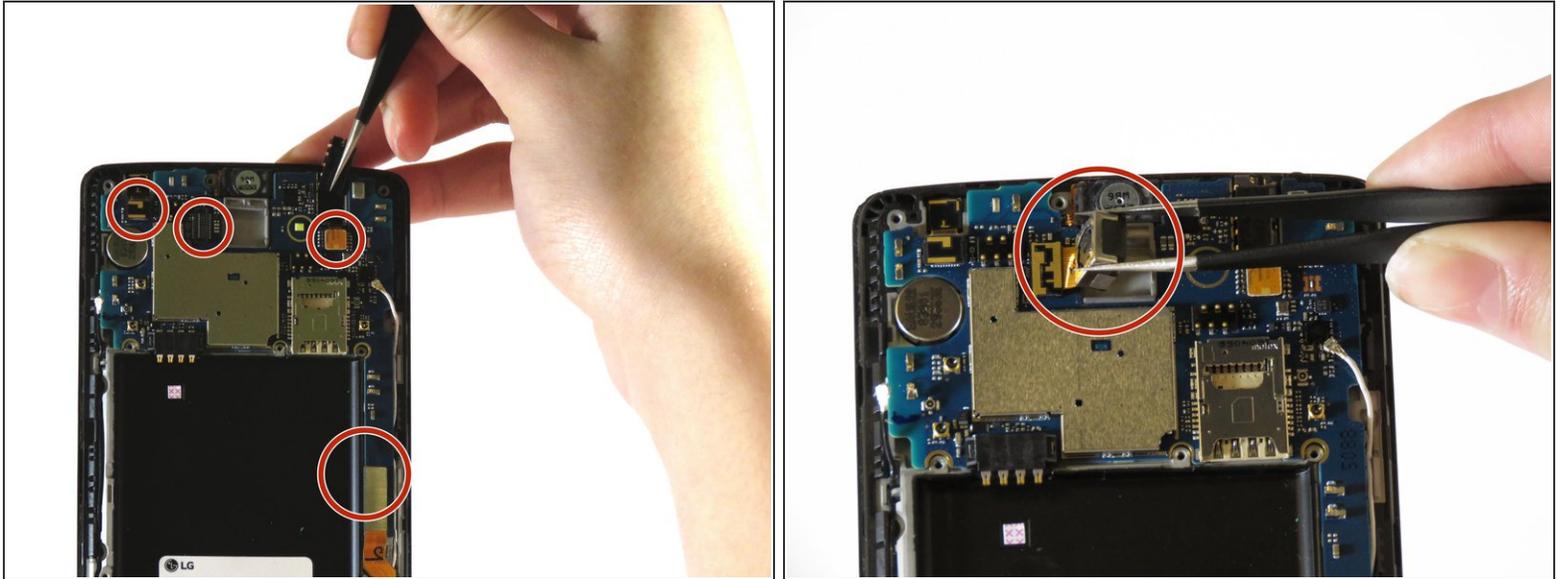

- Use the tweezers to remove the four connectors as well as the back camera.

⚠ Be careful not to directly touch the camera lenses.

Step 8

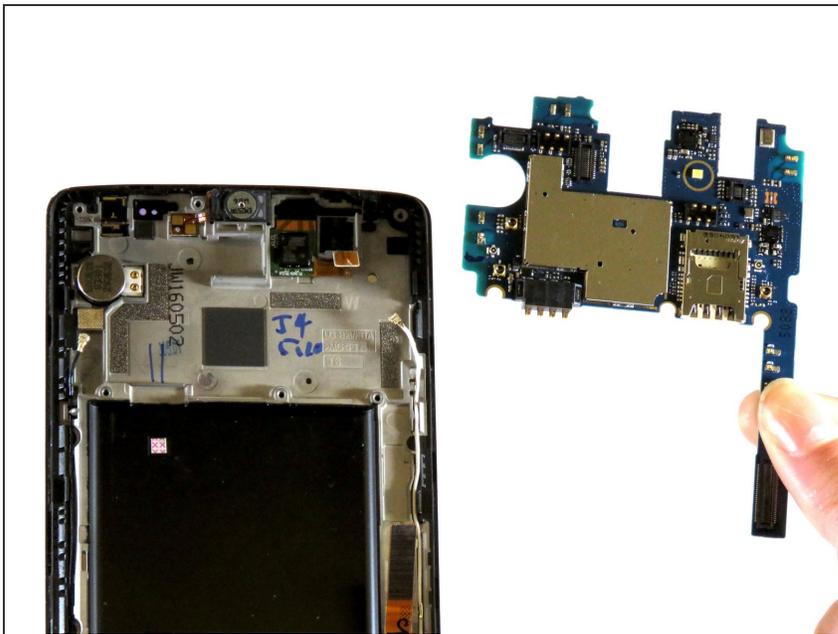

- Lift up and remove the motherboard from the device.

To reassemble your device, follow these instructions in reverse order.