


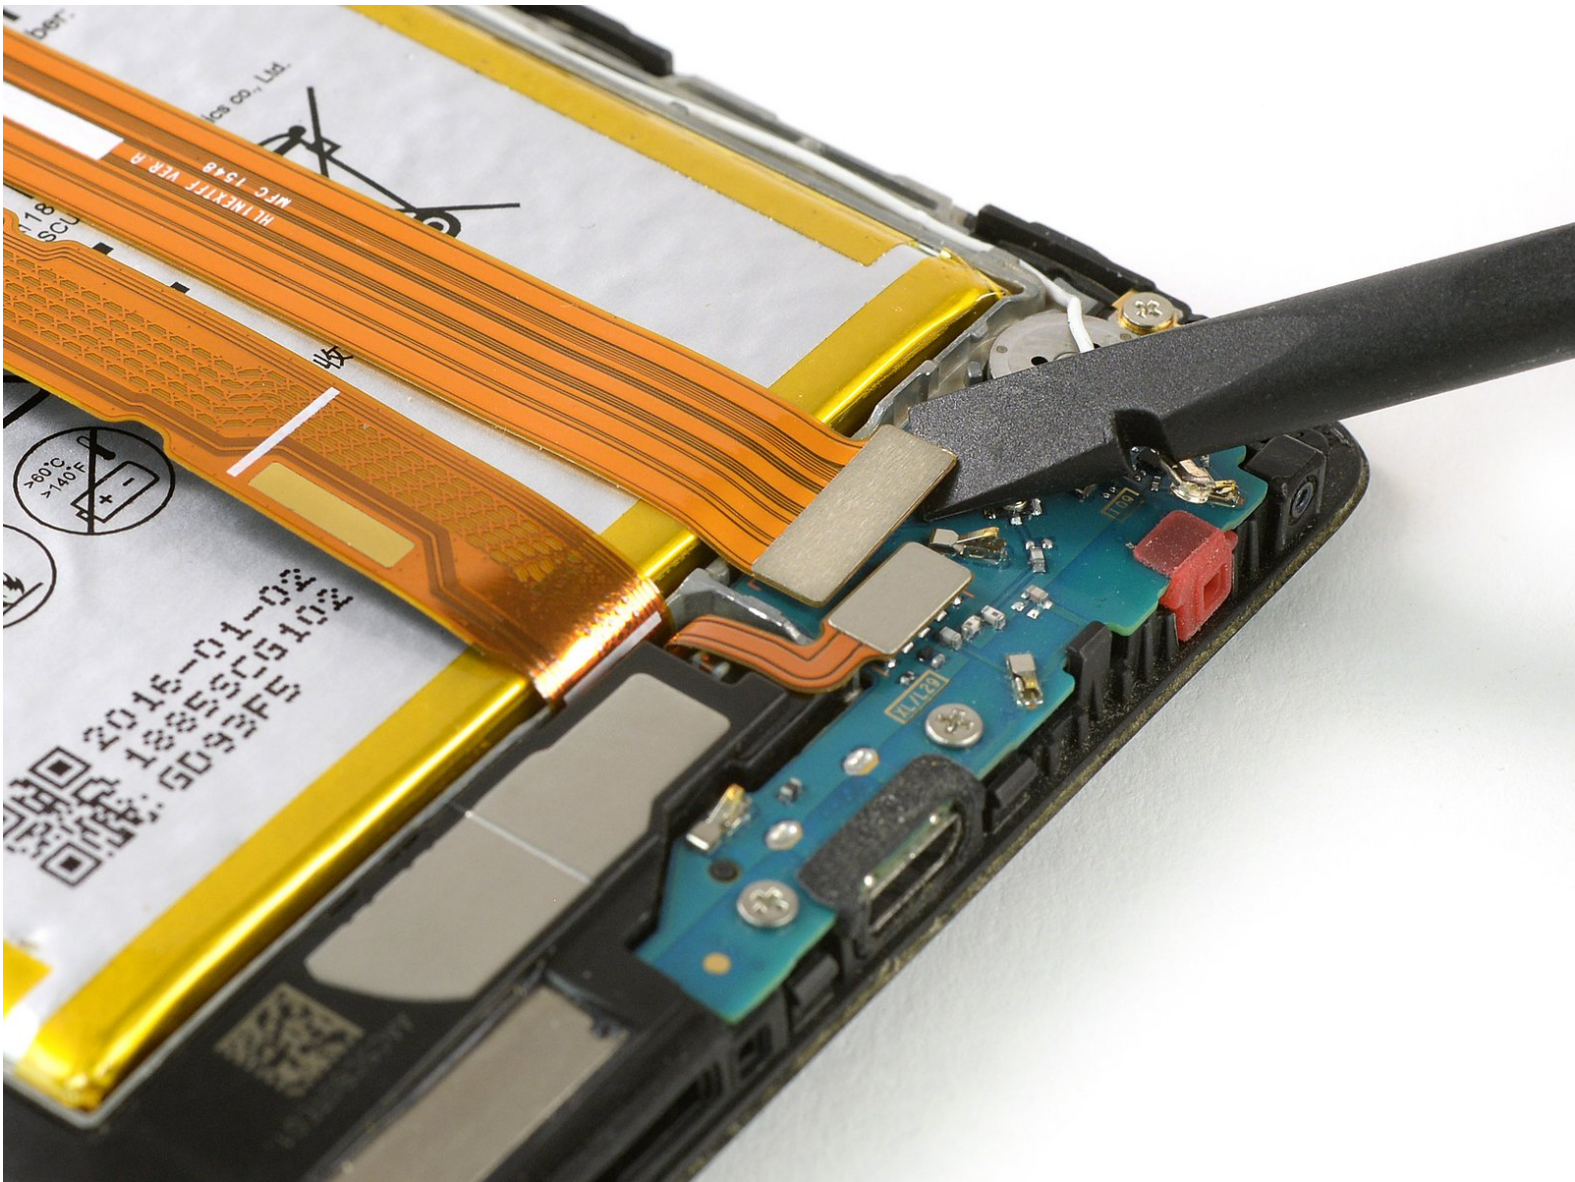

Written By: Dominik Schnabelrauch



Page 1 of 5

---

# INTRODUCTION


Prereq only



## TOOLS:


- [T2 Torx Screwdriver](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [iOpener](#) (1)
  - [iSlack](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Daughterboard interconnect cable

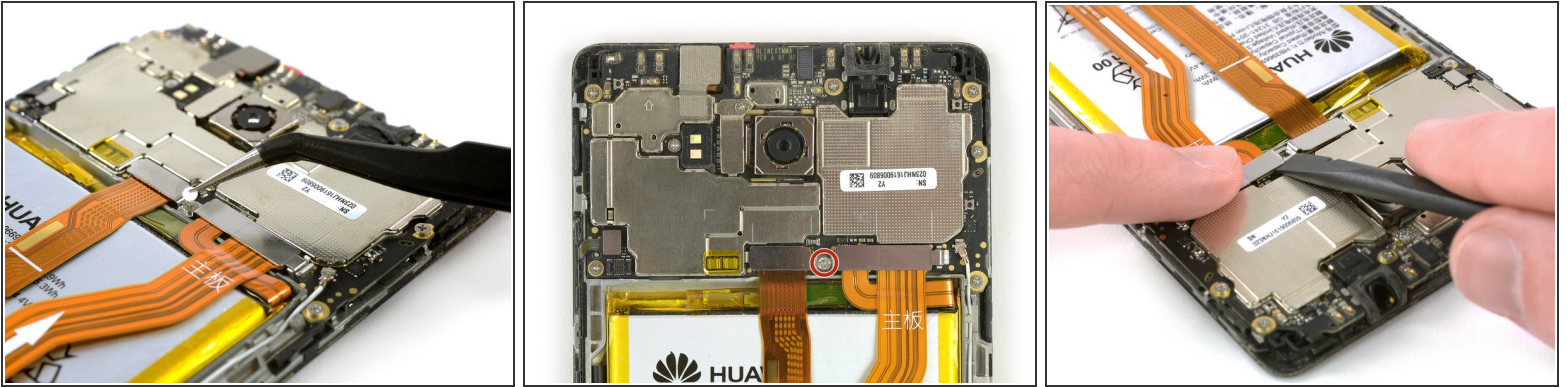

- Remove the liquid indicator sticker.
- Remove the Phillips #00 screw that holds down the metal shield.
- ⚠ The metal shield is tightly held in place. If you try to remove it without holding it down on one side, it'll break easily.
- Use a spudger to remove the metal shield.


## Step 2

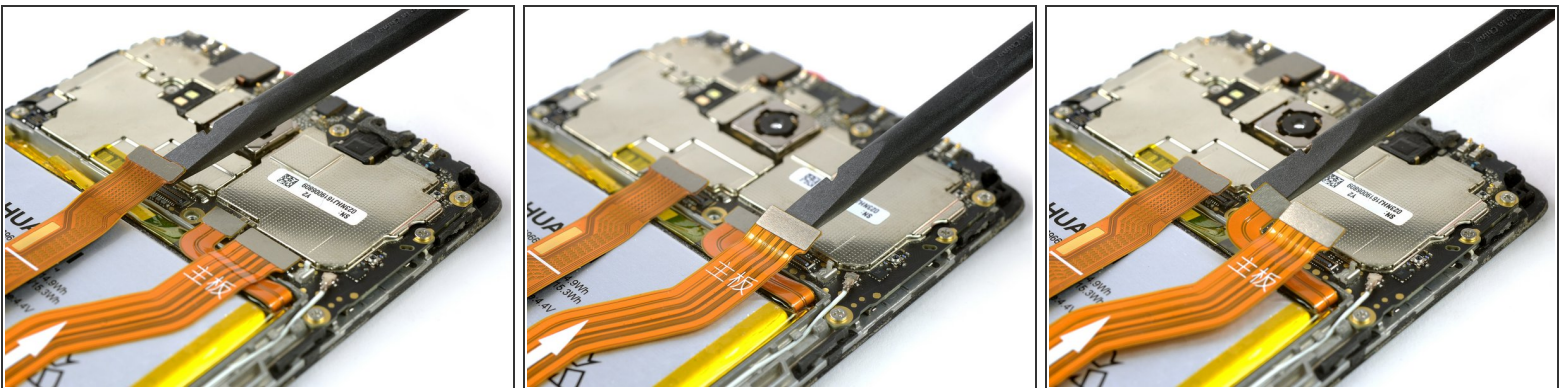

- Use the flat end of a spudger to disconnect the display, daughterboard interconnect, and battery cables.





### Step 3

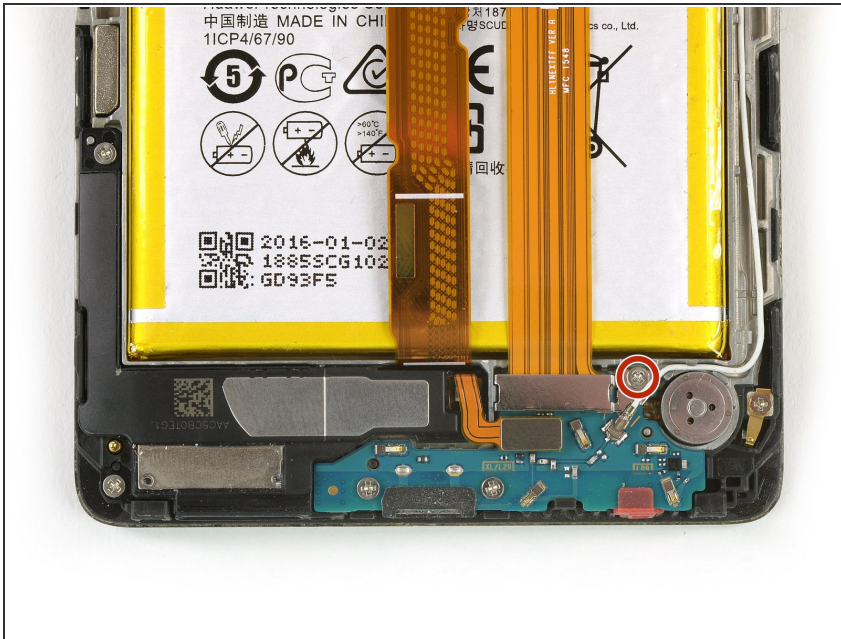


- Remove the Phillips #00 screw that holds down the interconnect cable bracket.

### Step 4

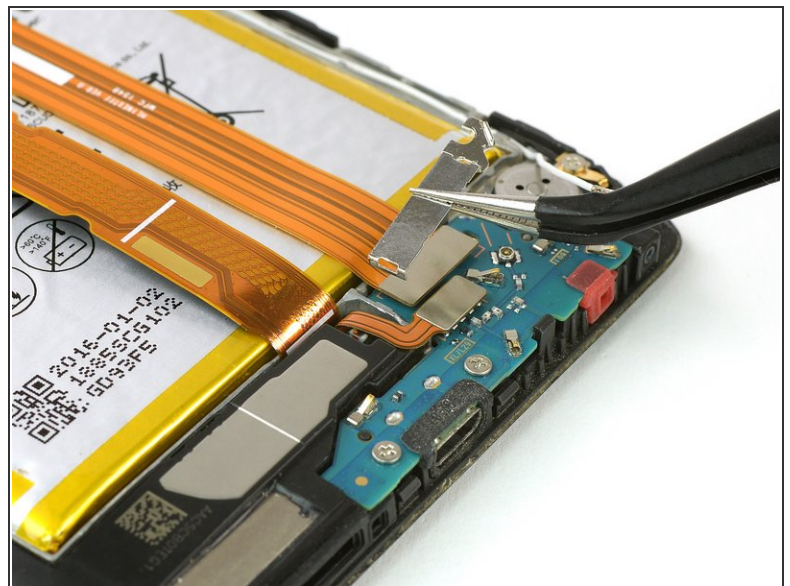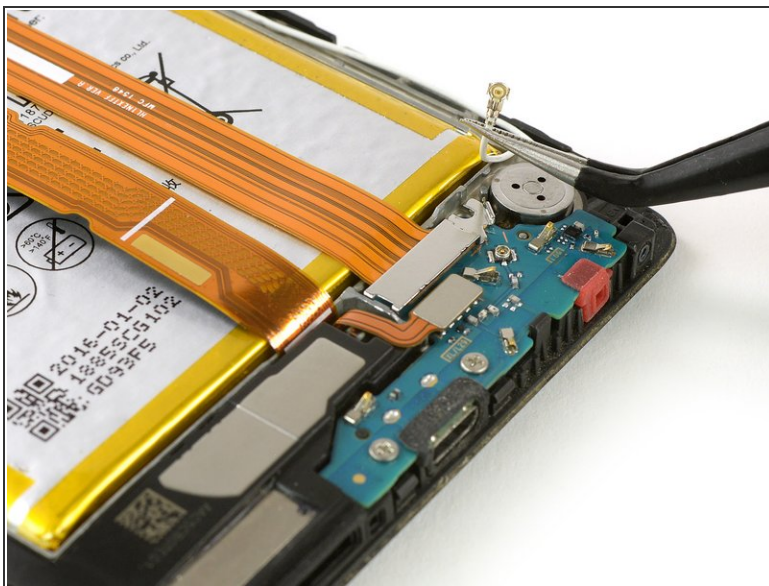

- Lift the coaxial connector off of its socket to allow access to the daughterboard interconnect cable bracket.
- Remove the bracket.

## Step 5

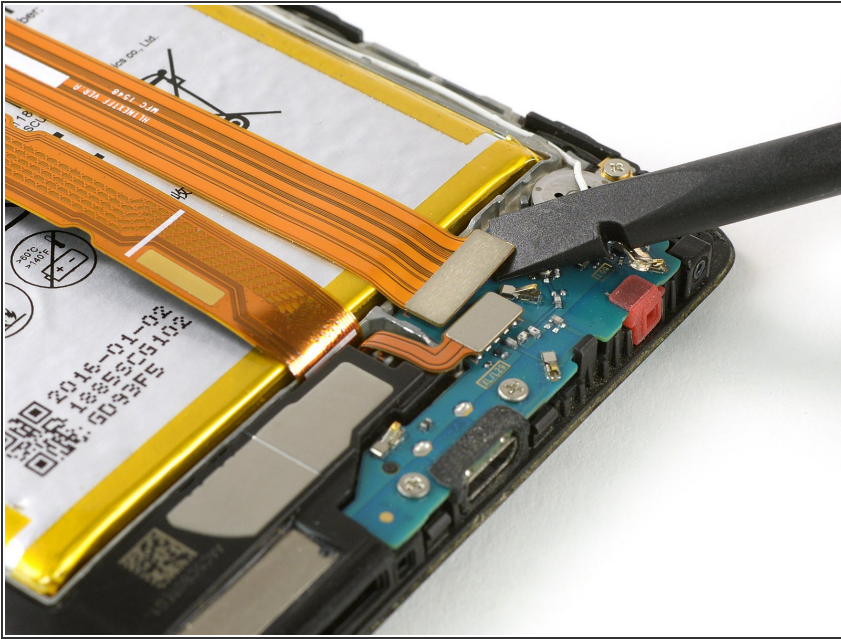

- Use a spudger to disconnect the interconnect cable.
- Remove the interconnect cable.

To reassemble your device, follow these instructions in reverse order. When reassembling your phone apply new adhesive where it is necessary.