




Dell Alienware 13 R2 Memory Modules Replacement

Dell Alienware 13 R2 Memory Modules Replacement

Written By: Terrence15

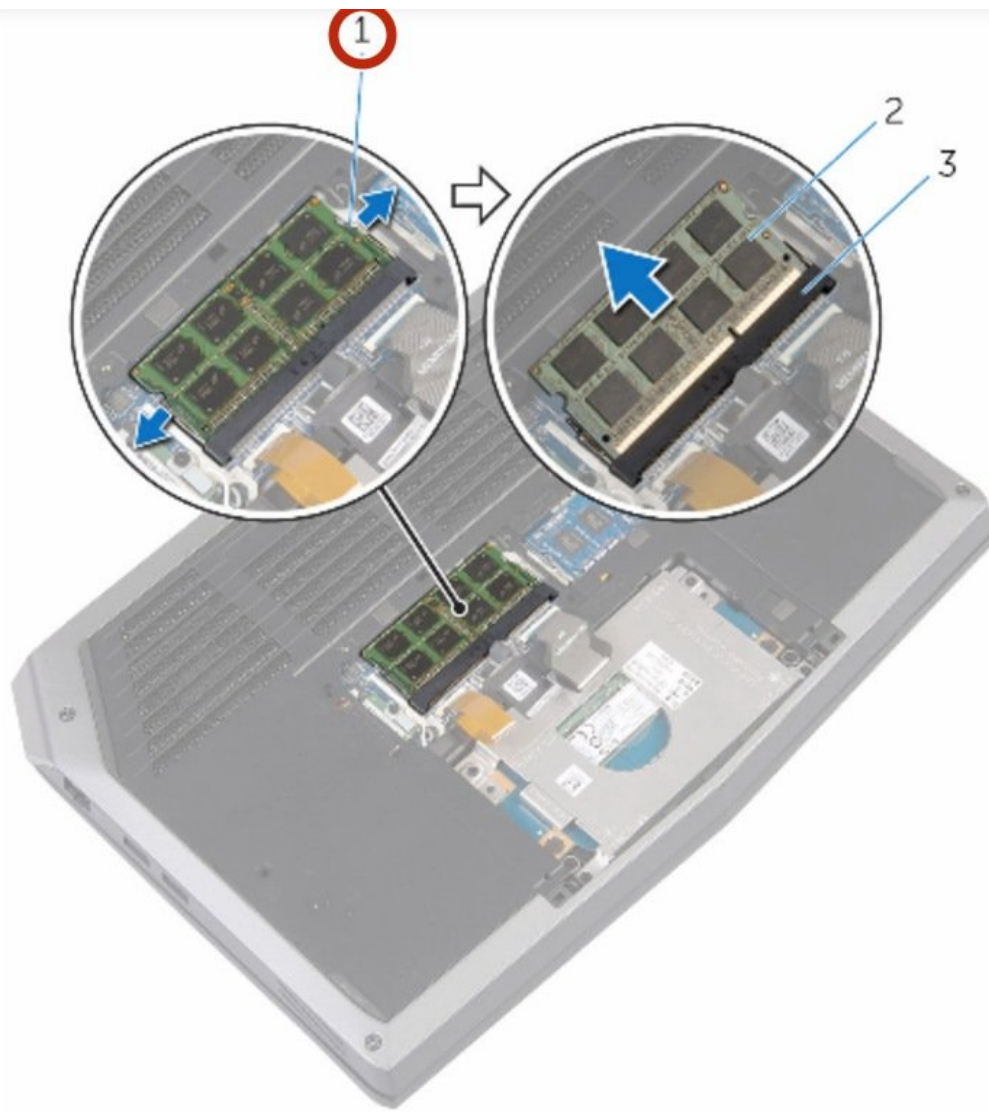


1 securing clips (2)

2 memory modules (2)

INTRODUCTION

In this guide, we will be removing and replacing the memory module on the Dell Alienware 13 R2.


Step 1 — Popping up the Memory Module

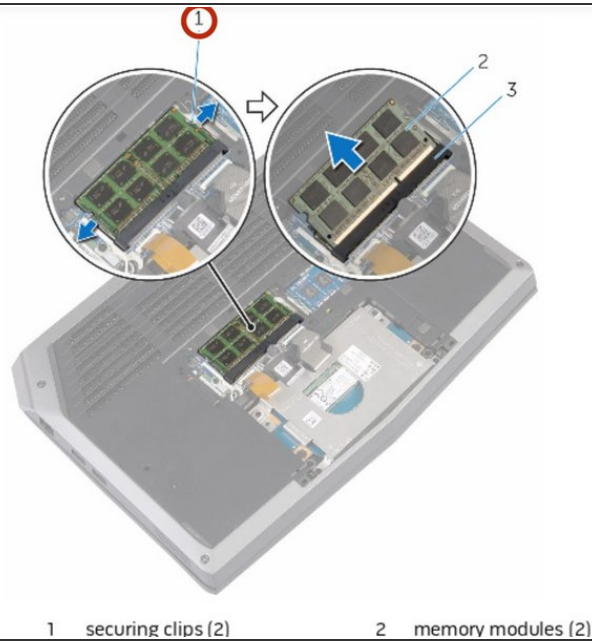

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).

- Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

Step 2 — Removing the Memory Module

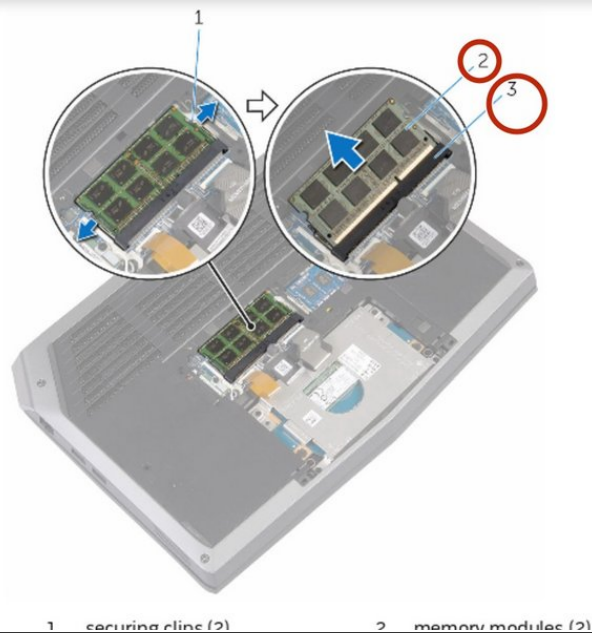



- Slide and remove the memory module from the memory-module slot.

Step 3 — Align the notches



- Using the new memory module, align the notch on the memory module with the tab on the memory-module slot.

Step 4 — Sliding the Memory Module

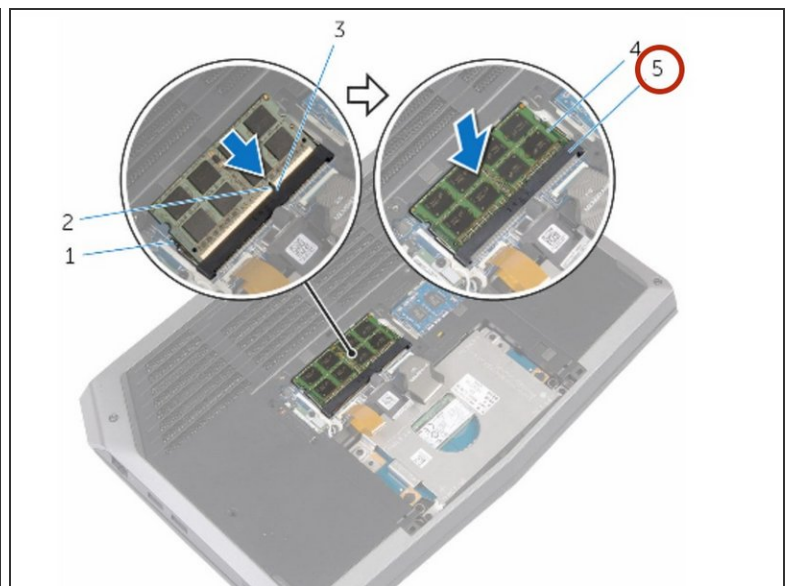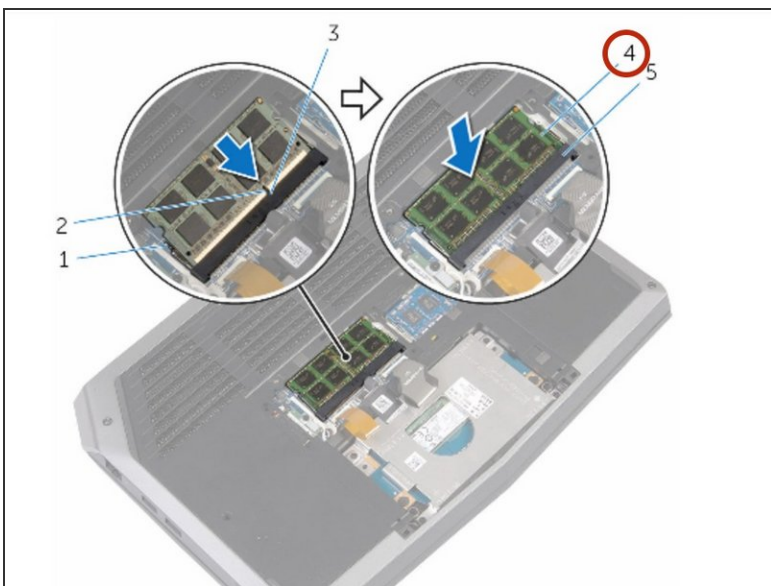

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-01-21 10:25:11 PM (MST).

