



Lenovo Touch Y70-70 Battery Replacement

This guide will illustrate the steps required to replace this Laptop's battery.

Written By: Brandon Munson



INTRODUCTION

This guide will solve issues involving a defective battery, such as: Unexpected Shutdown, Laptop not Charging, Laptop Shuts down when Unplugged.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [ESD Safe Tweezers Blunt Nose](#) (1)
-

Step 1 — Back Cover



- Flip the device so the back is facing you.
- Using the Phillips #0 screwdriver, unscrew the fourteen screws from the device.

Step 2




- Use the blue Opening Tool to pry-open the back cover.
- Slide it around the perimeter of the PC freeing the back cover.
- Remove the back cover from the device.

Step 3 — Battery



- Use the Phillips #0 screwdriver to unscrew the three screws holding the battery.

Step 4

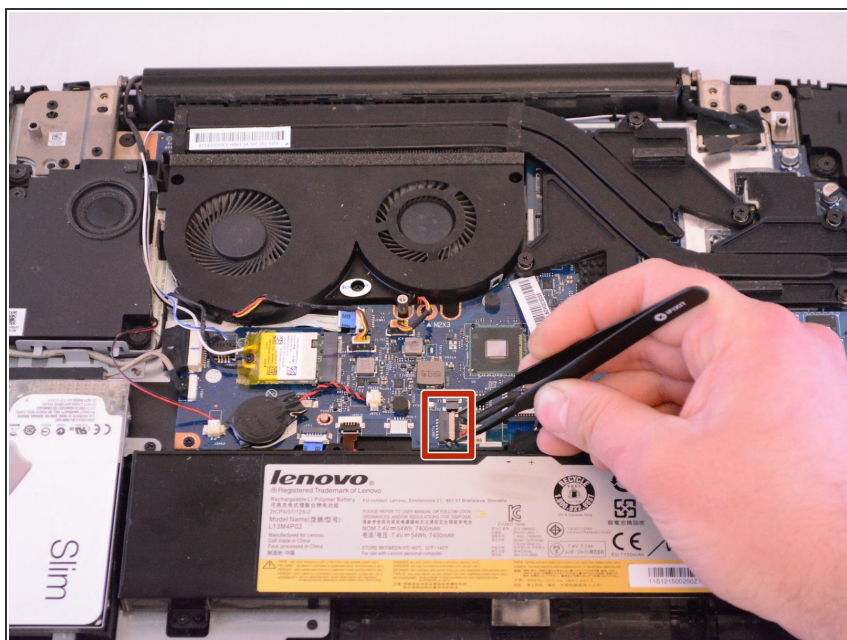

- Use the Blunt Tweezers from the Tool Kit to disconnect the battery connections from the motherboard.
- Remove the battery from the device.

To reassemble your device, follow the instructions on Step 3.