



# Toshiba Satellite P75-A7100 Fan Replacement

This guide is to help the user replace the fan in their laptop to prevent problems such as overheating.

Written By: Pria Dalrymple



## INTRODUCTION

Through this guide you will learn to replace the fan inside of your laptop. Make sure you have the proper tools in order to complete the repair. This kind of repair is usually done to fix the problem of your laptop overheating.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [2.5 mm Flathead Screwdriver](#) (1)
-

## Step 1 — Battery



- Slide the tabs apart from each other.

## Step 2



- Lift the battery upwards and remove it from the device.

### Step 3 — Wi-Fi Adapter




- Using a Phillips #1 screwdriver, remove the screw from the back cover.
- Remove the back cover from the device.

### Step 4



- Remove the optical drive from the device.

## Step 5

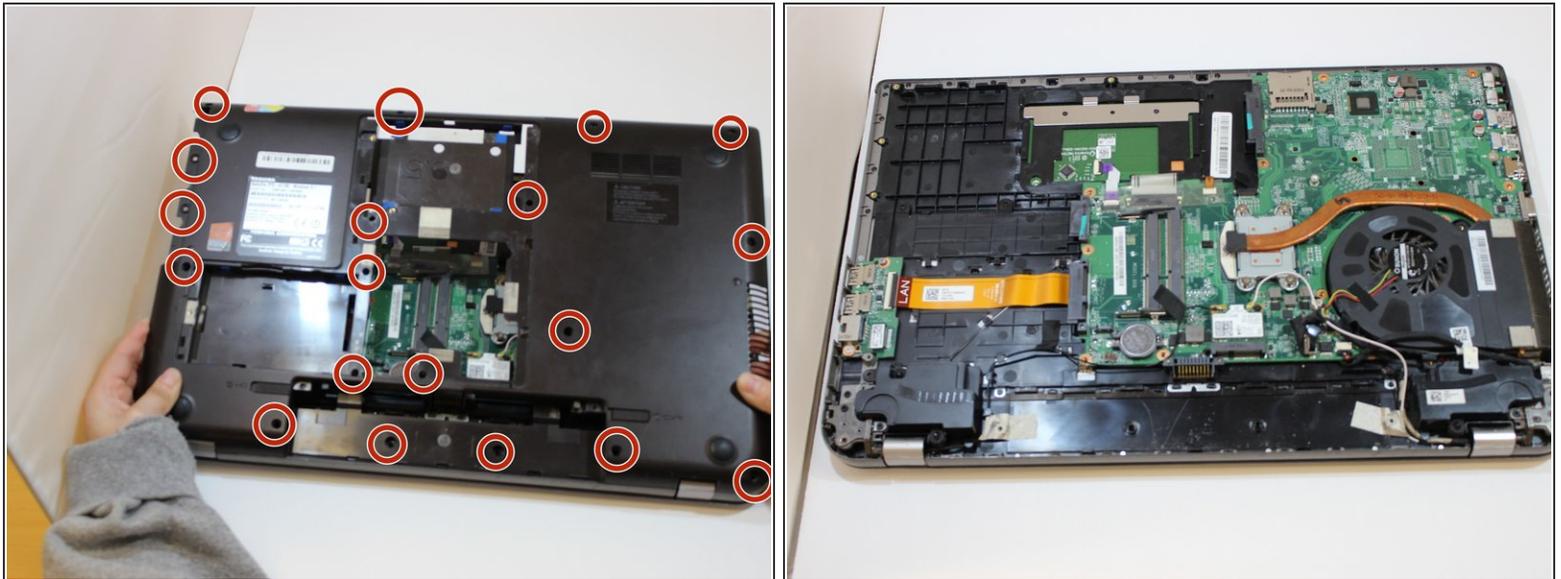



- Using a Phillips #1 screwdriver, unscrew the remaining screws that are visible on the laptop.
- Remove the back cover from your device.

## Step 6



- Using a Phillips #1 screwdriver, remove the screw connecting the Wi-Fi adapter to the motherboard.
- Remove the Wi-Fi adapter from the device.

## Step 7 — Fan

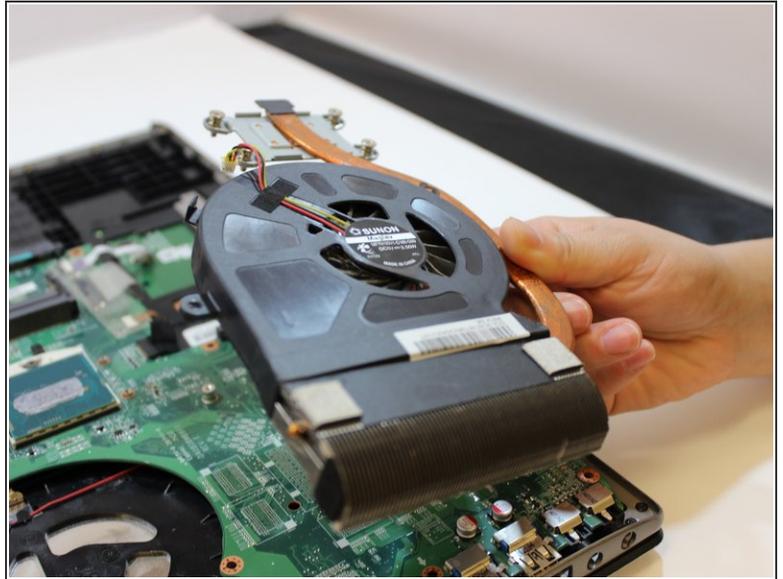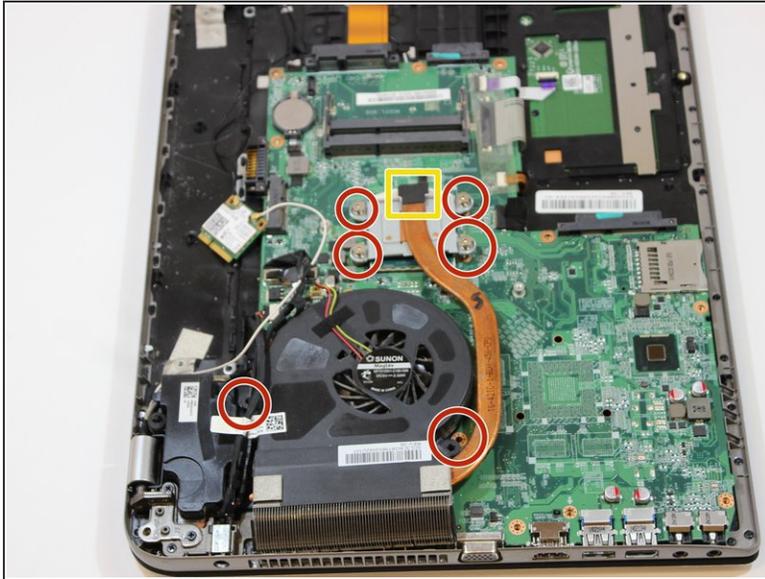

- Using a Phillips #1 screwdriver, unscrew the 6 remaining screws attached to the fan.
- Unplug the connector connecting the fan to the motherboard.
- Remove the fan from the device.

To reassemble your device, follow these instructions in reverse order.