



# HTC Rezound Screen Replacement

This guide will provide the steps for disassembling the HTC Rezound and removing the screen.

Written By: Bridgette Mellon



## INTRODUCTION

This guide will be detailing the steps necessary to fix a number of common issues with the screen of an HTC Rezound. Please keep in mind that the display and the screen of your Rezound may be fused. That means that to replace one you'll need to replace both. Other than that, the adhesive tape on the display is tricky, so take your time! Have fun fixing your tech!



### TOOLS:


- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [T7 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Battery




- Use a plastic opening tool or your fingers to get into the groove between the cover and case. Remove the back covering so that the red battery is visible.

## Step 2

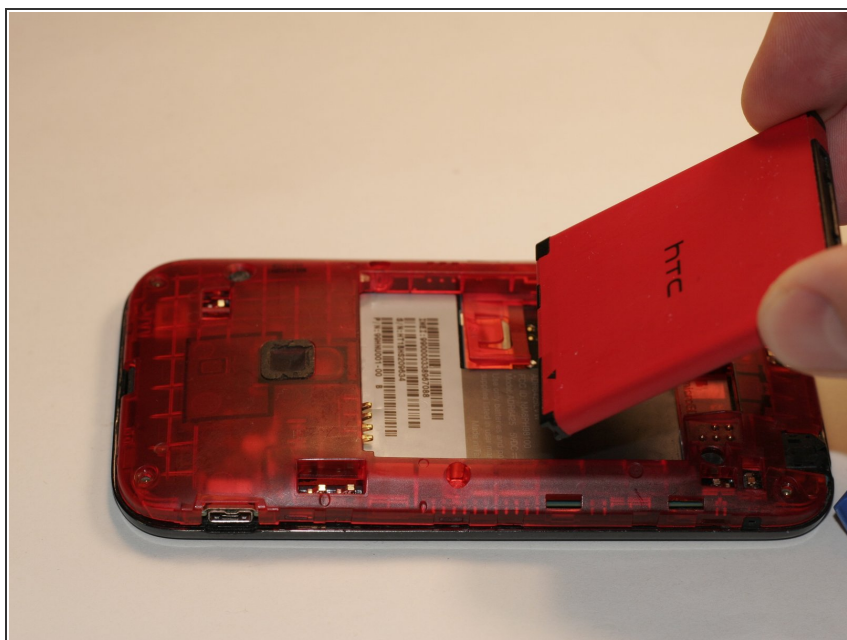


- Remove the red battery to replace.

## Step 3 — Screen

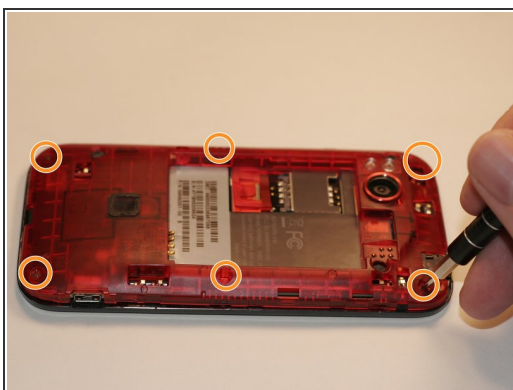

- Unscrew the six screws (Torx T4 size) shown in the photo.
- Use the spudger to pry the casing off of the phone.


## Step 4

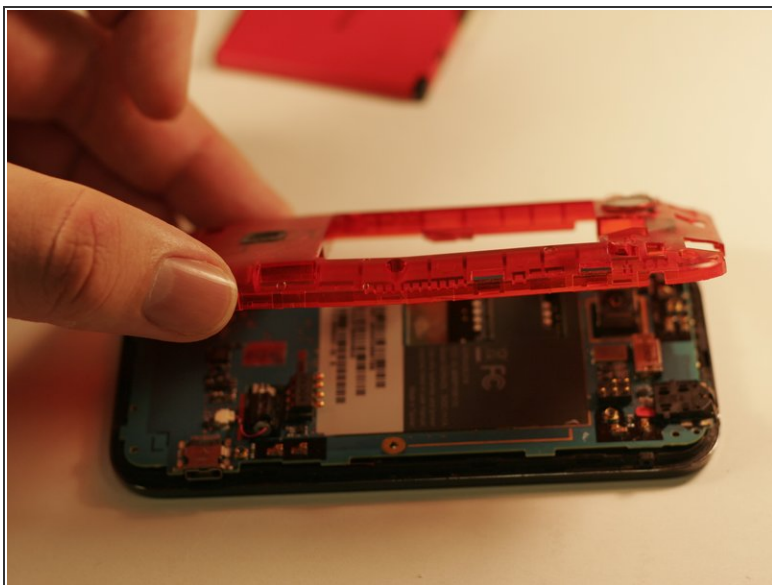

- Gently remove the casing from the phone.





## Step 5

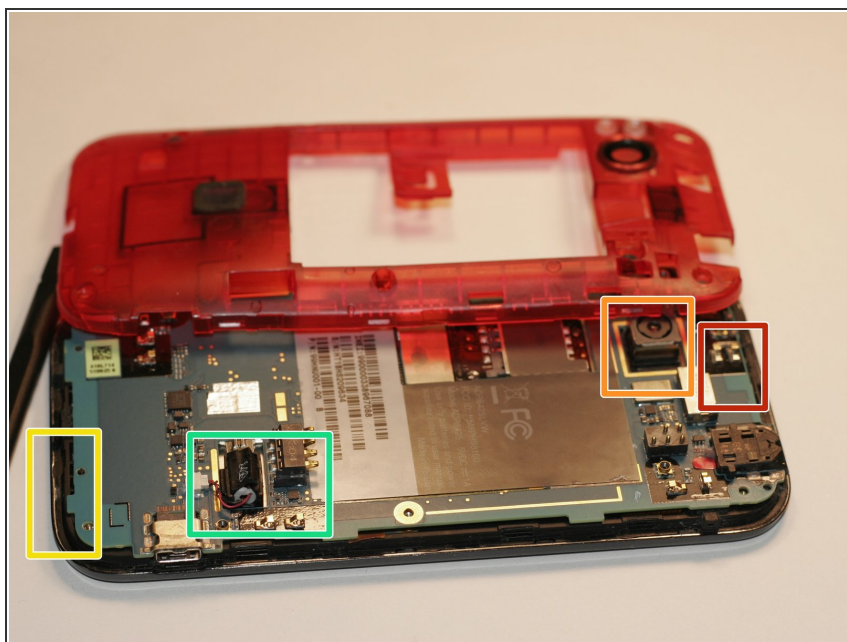

● After the red casing is removed, the following components should be visible:


- Main Camera
- Headphone Jack
- Vibration moter

## Step 6

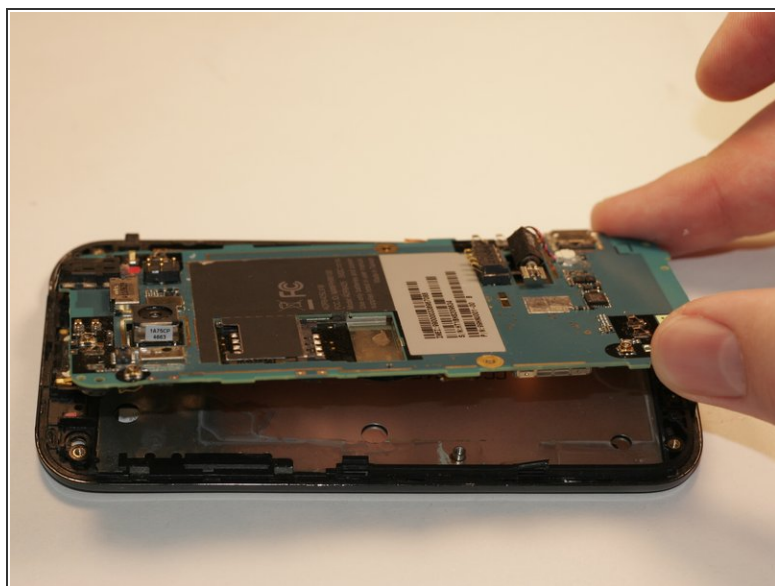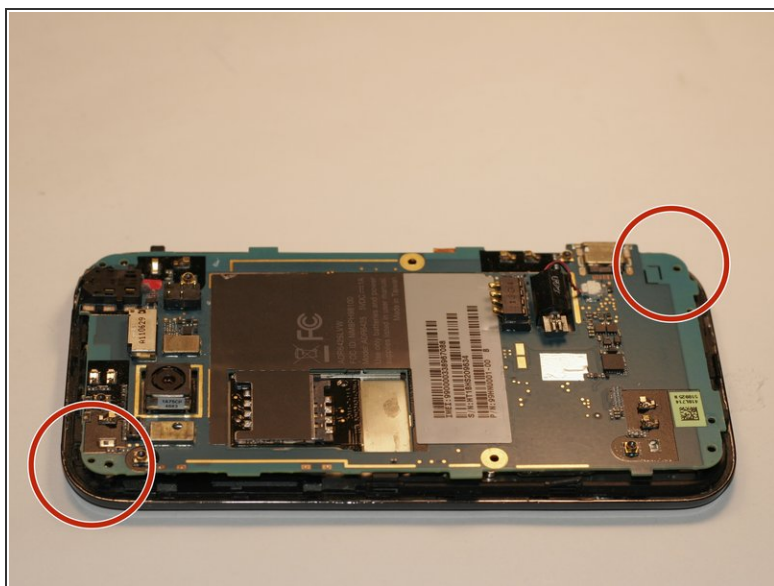

- Remove the 2 screws (Torx T7 size), which are located on the upper left and lower right sides of the device.

## Step 7

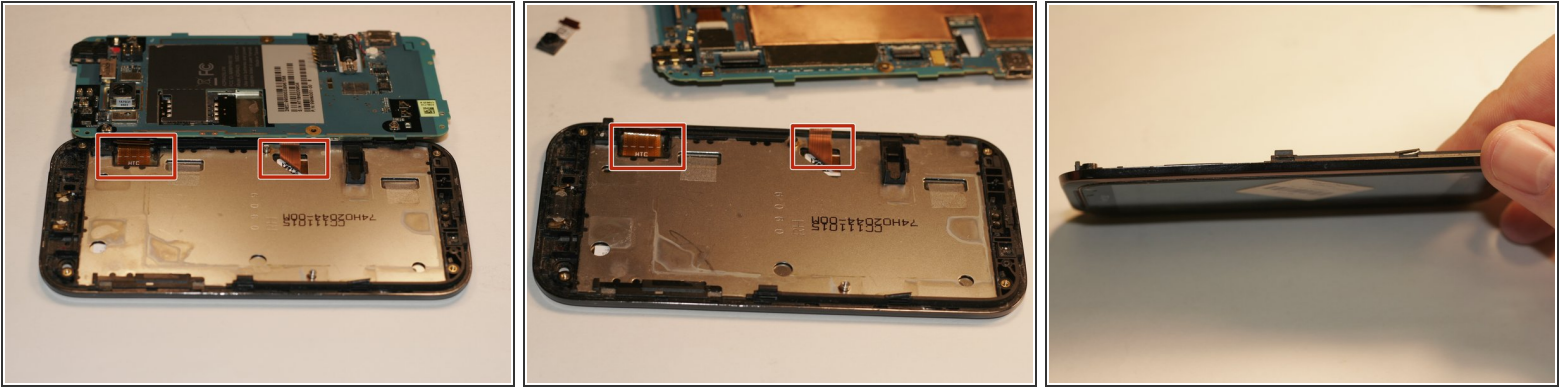

- Using tweezers, flip the latch on the ribbon cables connecting the logic board to the screen and display. The screen and display for the HTC Rezound are likely fused to one another, so if you are replacing one you will likely need to replace both of them.
- At this point all that's left is to insert the ribbon cables of your replacement into the same slot on the motherboard!

To reassemble your device, follow these instructions in reverse order.