


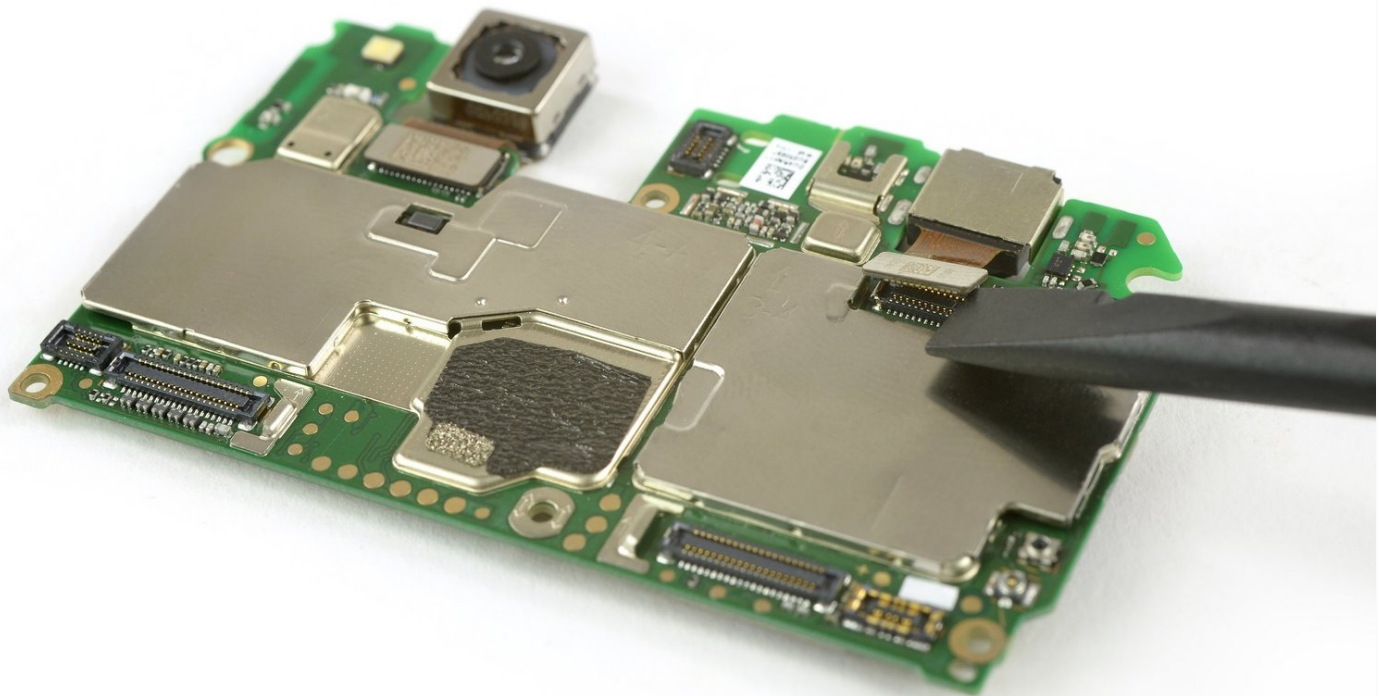

# Huawei P10 Lite Front Facing Camera Replacement

Use this guide to replace the front facing...

Written By: Dominik Schnabelrauch



# INTRODUCTION

Use this guide to replace the front facing camera in your Huawei P10 smartphone. When reassembling your phone apply new adhesive where it is necessary.

---

## TOOLS:

[iFixit Opening Picks \(Set of 6\)](#) (1)

[iFlex Opening Tool](#) (1)

[Tweezers](#) (1)

---

### Step 1 — Back cover




- Insert the tip of an opening pick between the back cover and the mid frame and slide it around the phone, to cut the adhesive.
  - Using a suction handle to lift the back cover may help to get an initial gap for the opening pick to put in.
- ⓘ If the adhesive is hard to cut, [use an iOpener](#) to loosen it.

## Step 2




- After you cut the adhesive on every edge, twist your opening pick, to separate the rear cover from the phone.
- Flip the rear cover over to the right side of the phone.

## Step 3

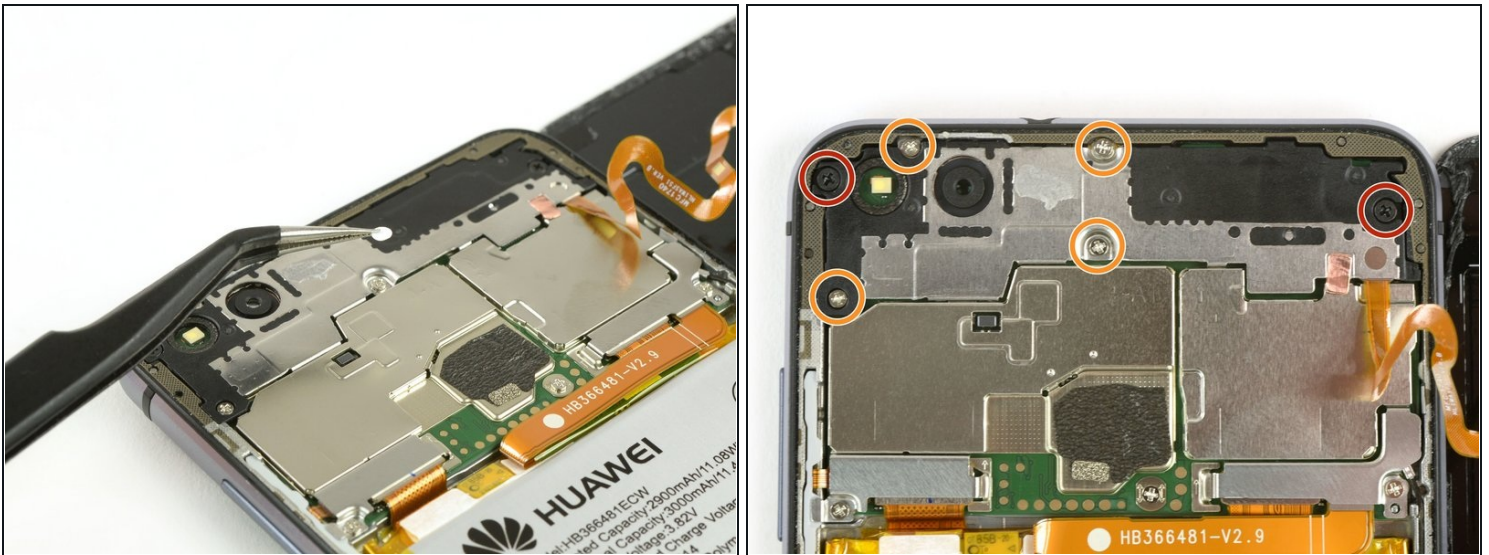

- Use a pair of [tweezers](#) to remove the sticker.
- Remove the two Phillips #00 screws.
- Remove the four 2.5 mm Phillips #00 screws.

## Step 4

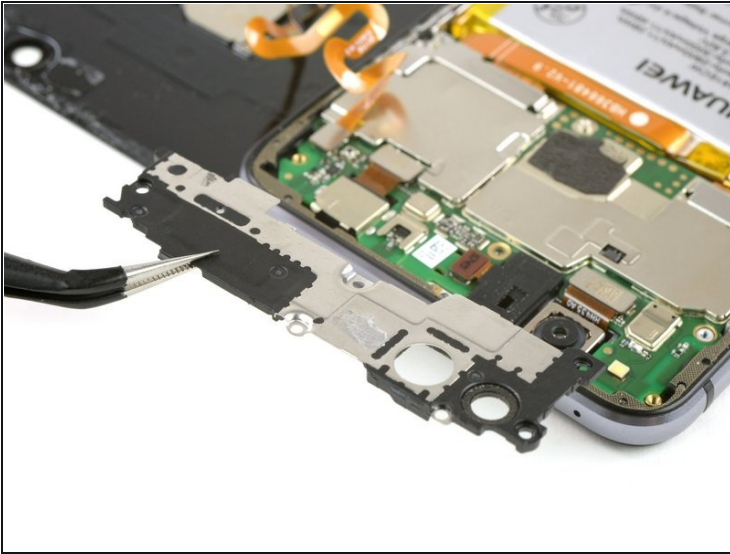

- Use tweezers to remove the mainboard shield.
- Use the flat end of a spudger to disconnect the finger print sensor flex cable.
  - ❗ When reassembling apply new adhesive where it is necessary.

## Step 5 — Motherboard



- Remove the three Phillips #000 screws.
- Use [tweezers](#) to remove the two metal shields which cover the flex cables on the mainboard.

## Step 6




- Use the flat end of a spudger to disconnect the volume and power button, the display and the main flex cable.

## Step 7



- Disconnect the battery flex cable with a spudger.
- Unplug the antenna cable with tweezers.

## Step 8

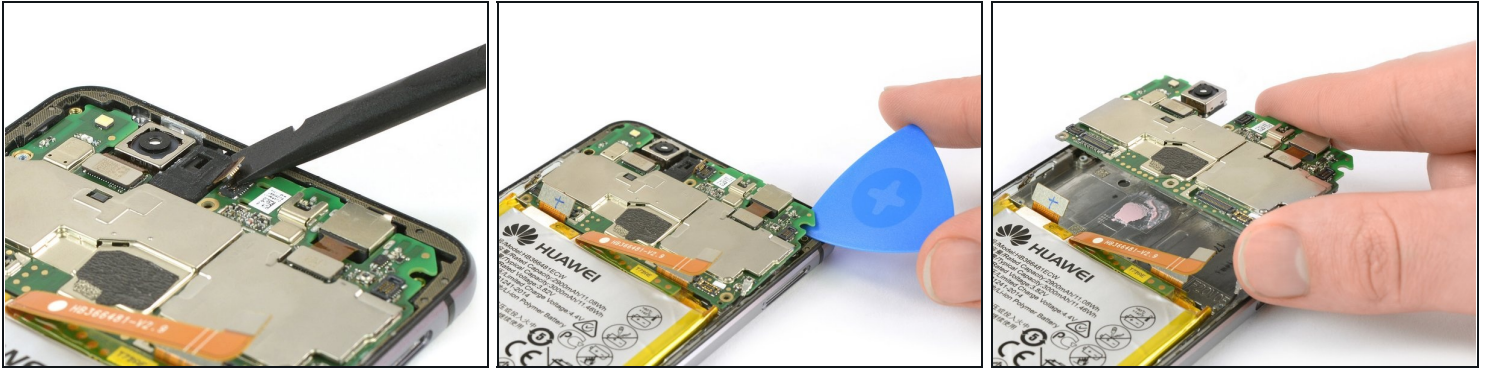


- Disconnect the headphone jack flex cable with the flat end of a spudger.
- Use an opening pick to pry out the motherboard until you can get a good grip.

⚠ Both camera are still attached to the motherboard. Don't damage them while you remove it.

- Remove the motherboard.
  - ⓘ If you want to replace your motherboard you need to disconnect both cameras and transfer them to your spare part.
- ☑ On the back of the motherboard there are thermal pads (pink rubber-like gobs) for heat dissipation. If these thermal pads broke or are too dried out you might need to [apply new thermal pads](#) on the new display assembly or the motherboard.

## Step 9 — Front Facing Camera

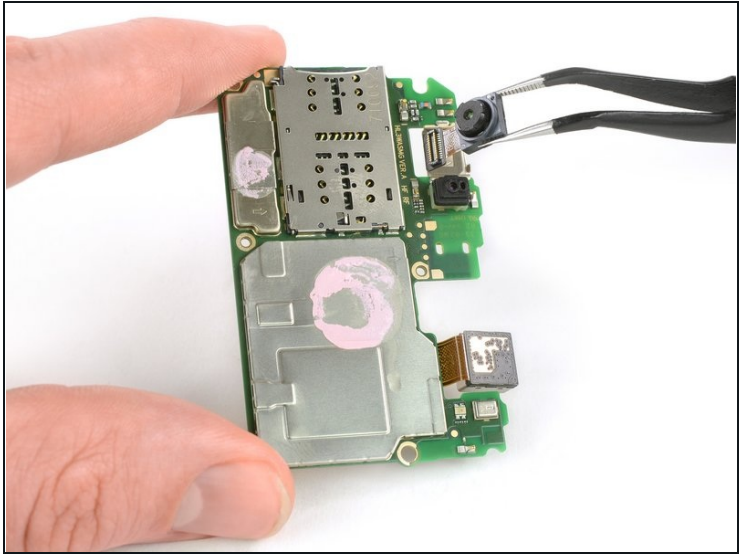

- Disconnect the flex cable of the front facing camera with a spudger.
- Flip the motherboard and grab the front facing camera with [tweezers](#). Thread the flex cable through the gap in the motherboard.
- Remove the front facing camera.

---

To reassemble your device, follow these instructions in reverse order. When reassembling your phone apply new adhesive where it is necessary.