



Toshiba Satellite C50D-A Power Jack Replacement

In this guide, we will show you how to replace the power cable in your device.

Written By: Amber van Solingen



INTRODUCTION

In this guide, you will use a pry tool and a Phillips screwdriver to get to the power jack in order to replace or clean it. Should your power jack be defective or damaged, you can replace it with a new one.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery





- Click button 1 to the unlocked position.
- ⓘ This button will have a 1 by it.

Step 2

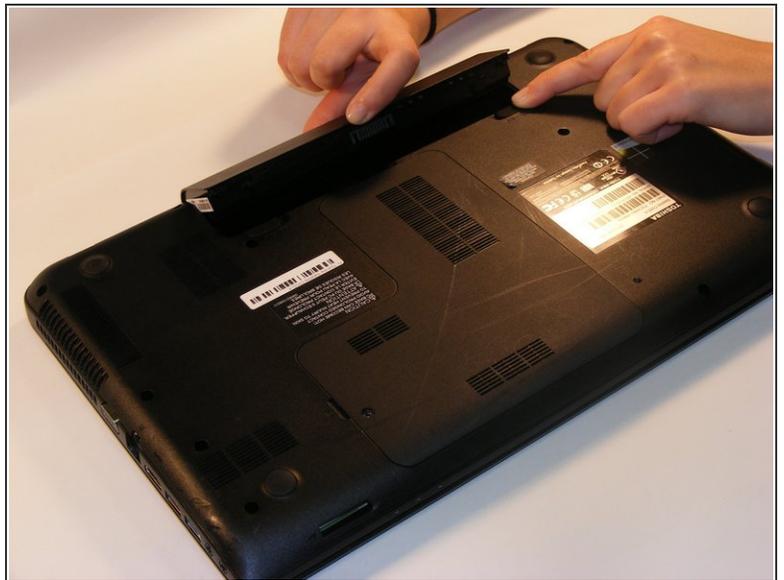


- Push and hold button 2 to the left.
- As you push button 2 to the left position, simultaneously lift up the battery pack.
- ⓘ This button will have a 2 by it.

Step 3 — Lower Case

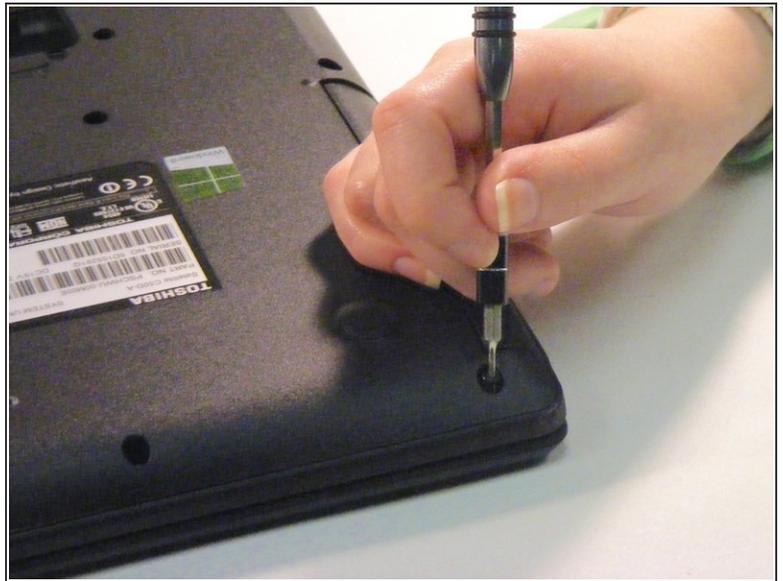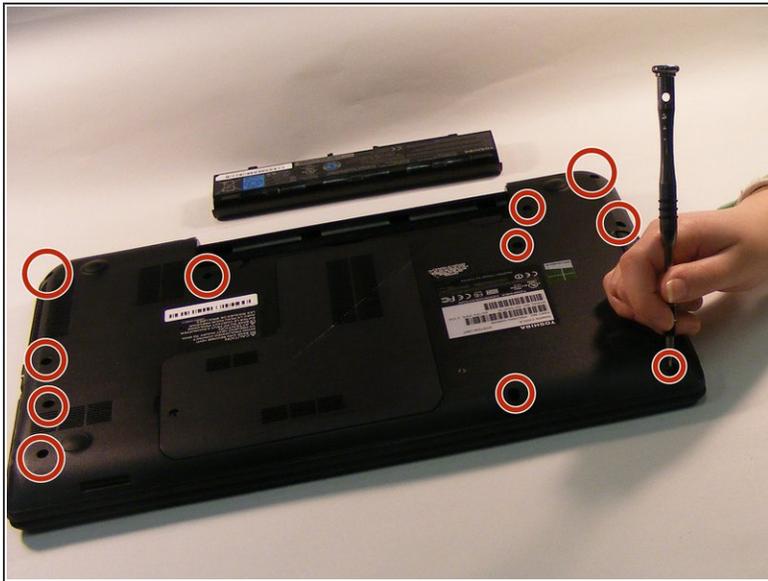

- Using the Phillips #1 screwdriver, remove the eleven 2.5mm screws.

Step 4

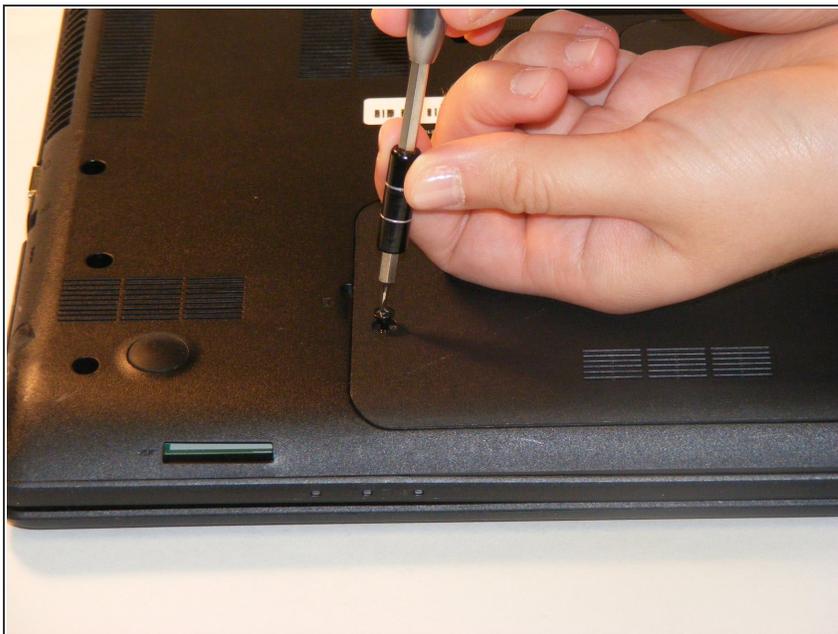


- Remove the one 2.5mm Phillips #1 middle plate screw.

Step 5



- Lift up the middle vent panel.
- Set the panel to the side.

Step 6

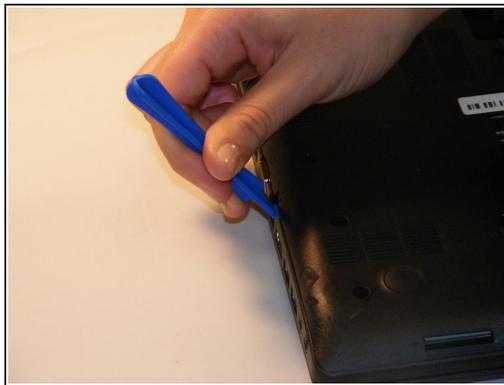

- Using the plastic opening tool, remove the outer panel and set to the side.


 Be careful not to break the back of the computer.

Step 7 — Power Jack



- Locate the power jack at the back, right-hand side next to the USB port.

Step 8

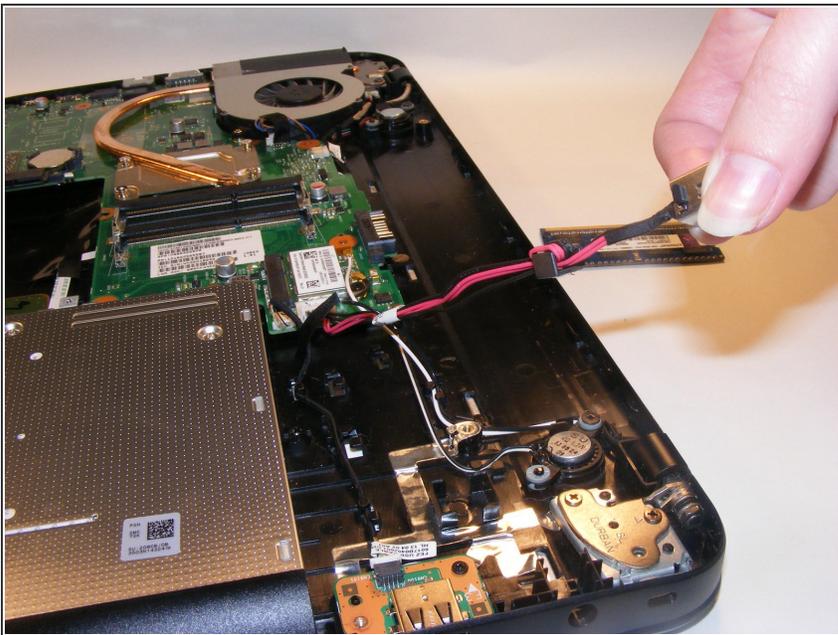

- Carefully unhook it from the attachment sites.

To reassemble your device, follow these instructions in reverse order.