



HP 15-f009wm Battery Replacement

Replace your dead battery in an HP 15-f009wm notebook computer.

Written By: Alex Birchler



INTRODUCTION


Use this guide if your battery in your HP 15-009wm is not working and needs to be replaced. To reduce the risk of electric shock, the battery should be removed before any other repairs are made.

Step 1 — Battery



- Turn laptop upside down.
- Flip the lock switch to the unlocked setting.

Step 2

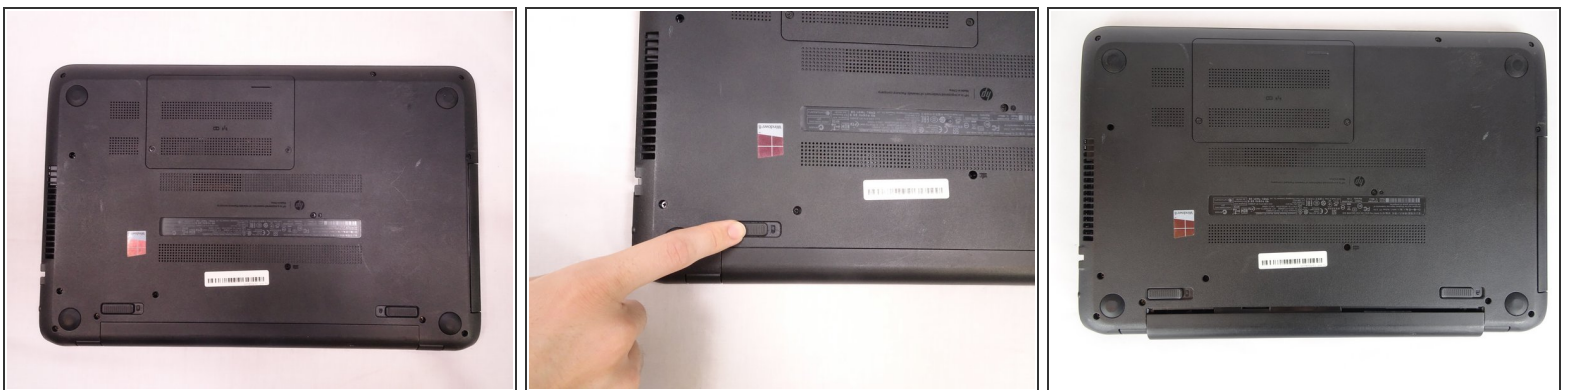

- Flip the release switch.
- Once the flip is switched, the battery should pop out.

Step 3



- Slide the battery out.

To reassemble your device, follow these instructions in reverse order.