


Dell Vostro 5480 Base Cover Replacement


Written By: Johnathan Hammond



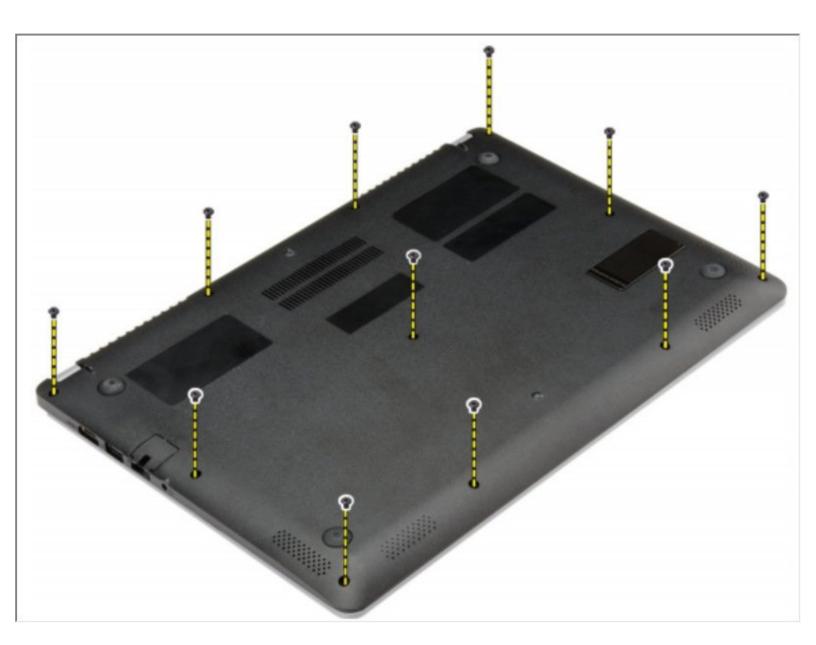


• Phillips #0 Screwdriver (1)

Step 1 — Remove the Screws

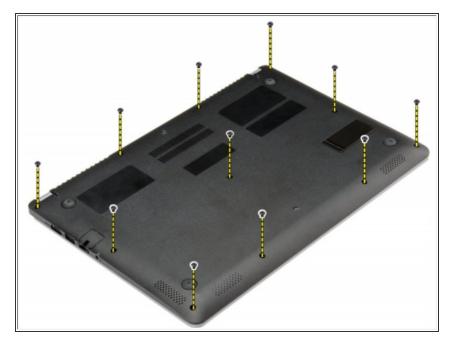

 Remove the screws that secure the base cover to the computer.

Step 2 — Pry the Cover

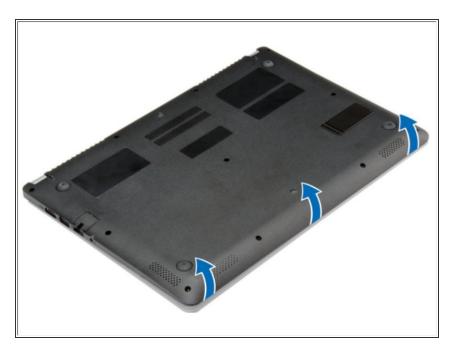

 Pry the base cover along the edges to loosen it.

Step 3 — Removing the Base Cover



- Lift and remove the base cover from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

To reassemble your device, follow these instructions in reverse order.