


Dell Vostro 3750 Hard Drive Replacement

In this guide, we will be showing you how to...

Written By: Johnathan Hammond

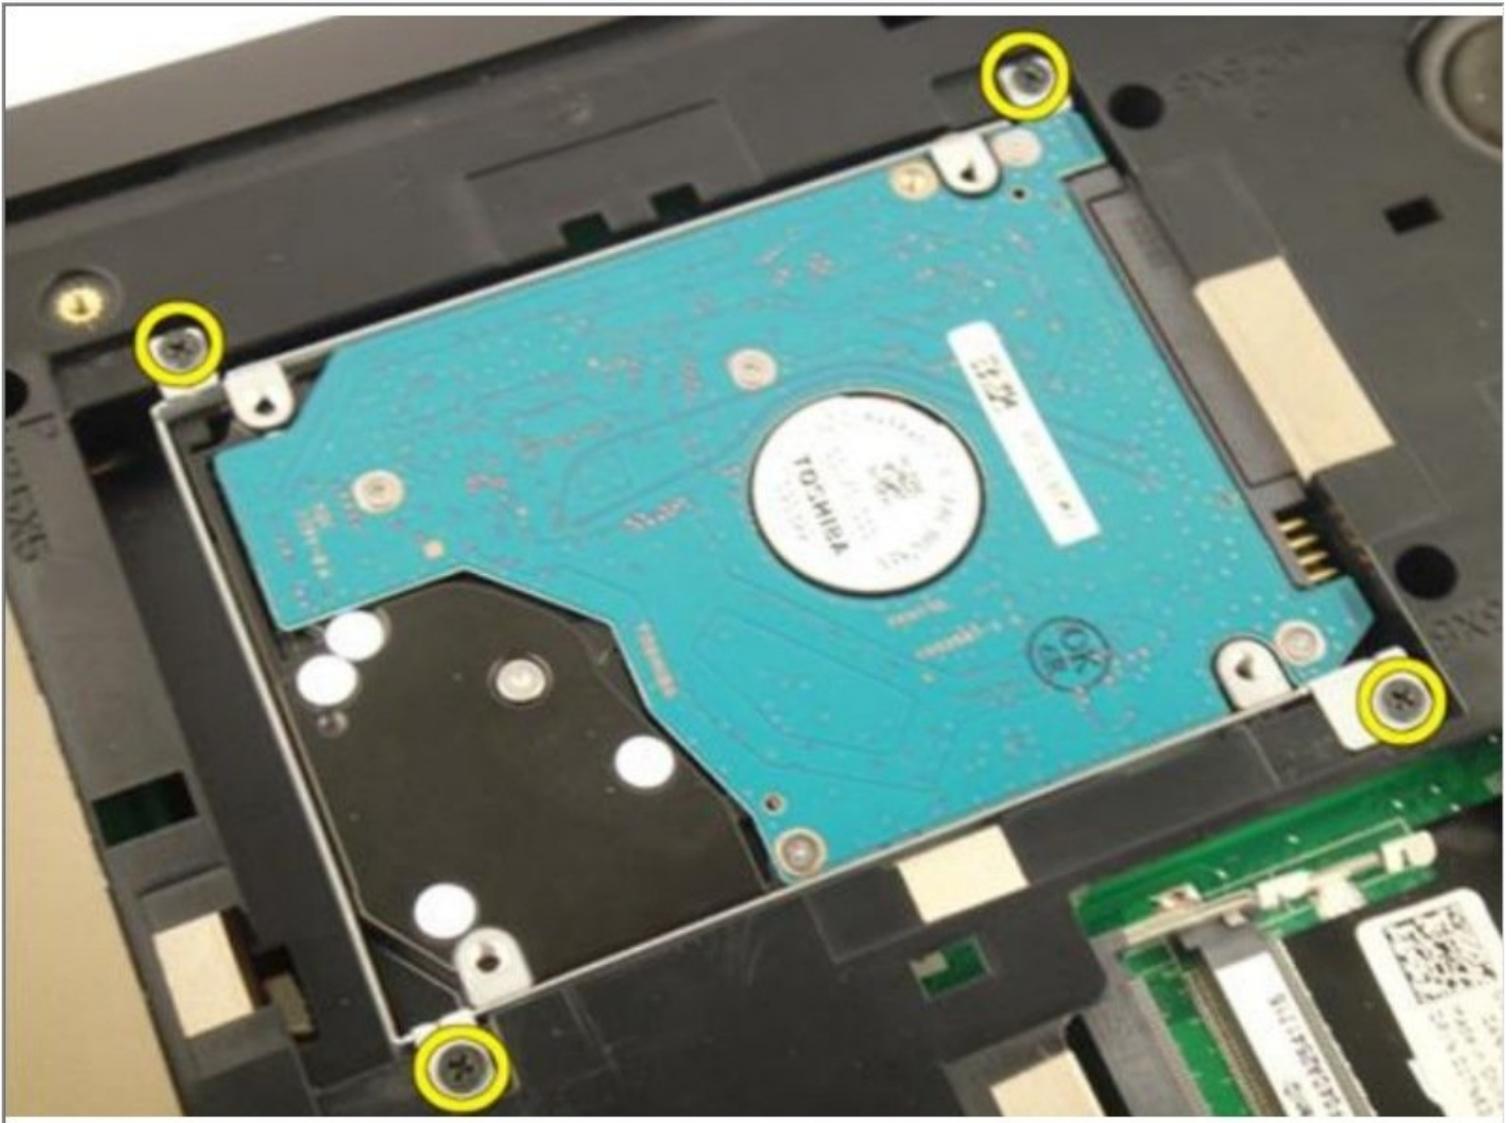

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard Drive.

TOOLS:


Phillips #0 Screwdriver (1)

Step 1 — Unlocking the Battery



- Slide the release latches to unlock the battery.

Step 2 — Removing the Battery

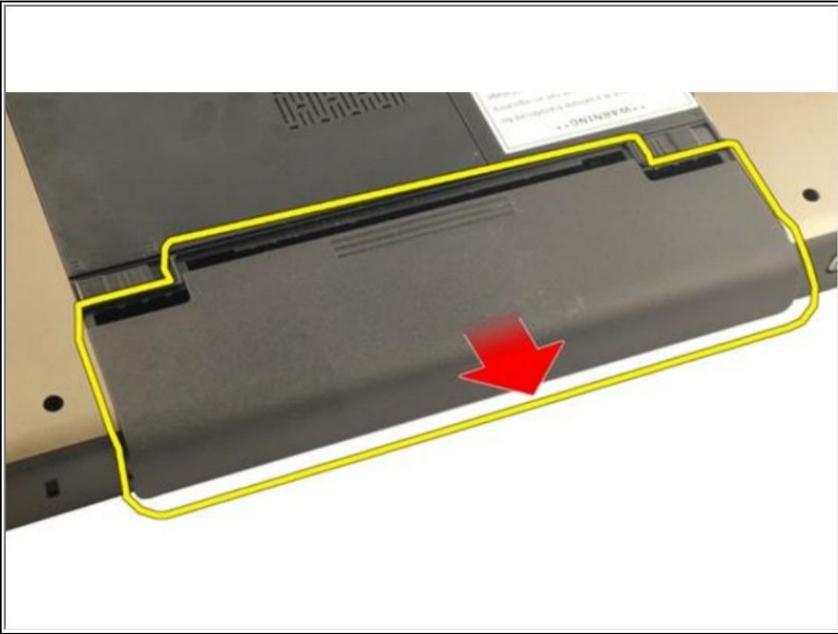


- Slide the battery out of the chassis and remove it from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 3 — Loosen the Screws




- Loosen the screws that secure the memory door.

Step 4 — Removing the Memory Door

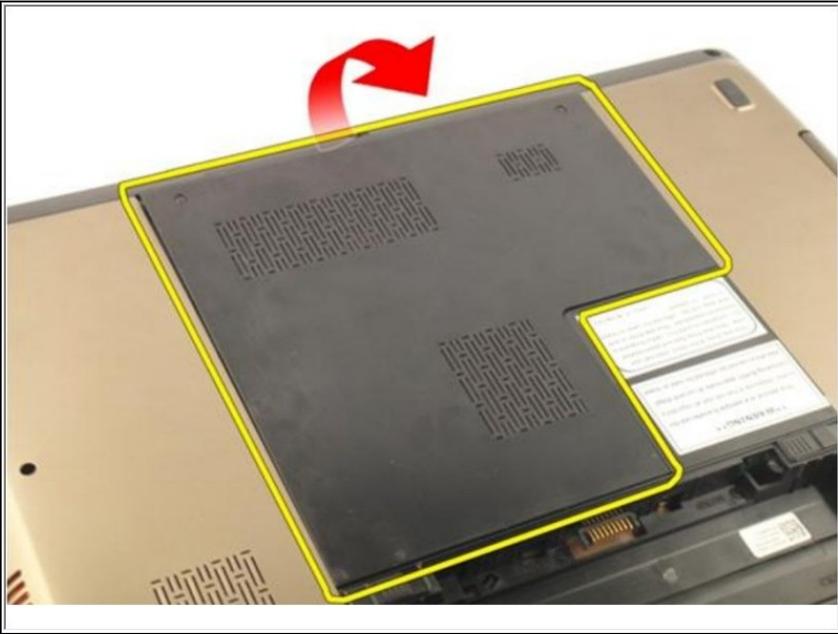


- Pry up the memory door near the screw hole, lift, and remove it
- ☒ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 5 — Remove the Screws

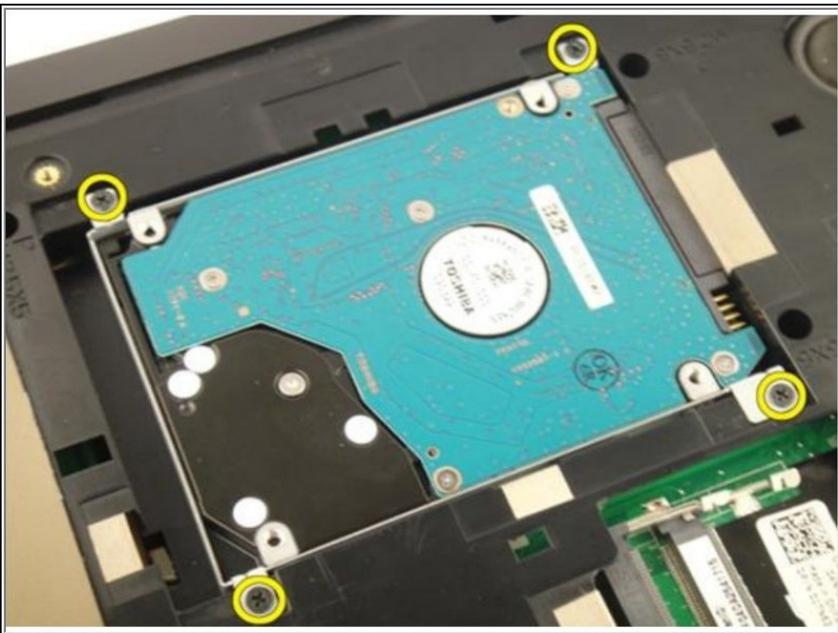


- Remove the screws that secure the hard-drive bracket.

Step 6 — Sliding the Module

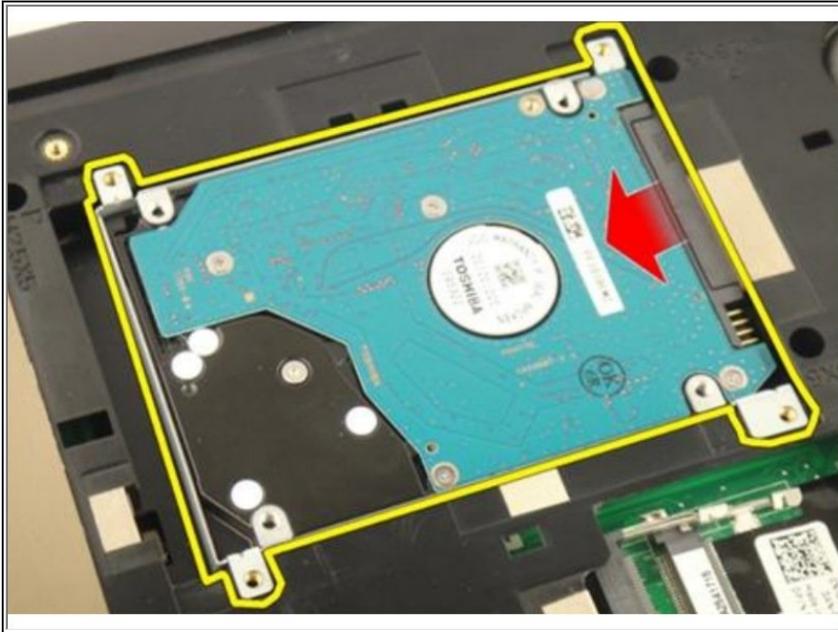


- Slide the hard drive module in the direction shown in the image below.

Step 7 — Remove the Hard Drive Module

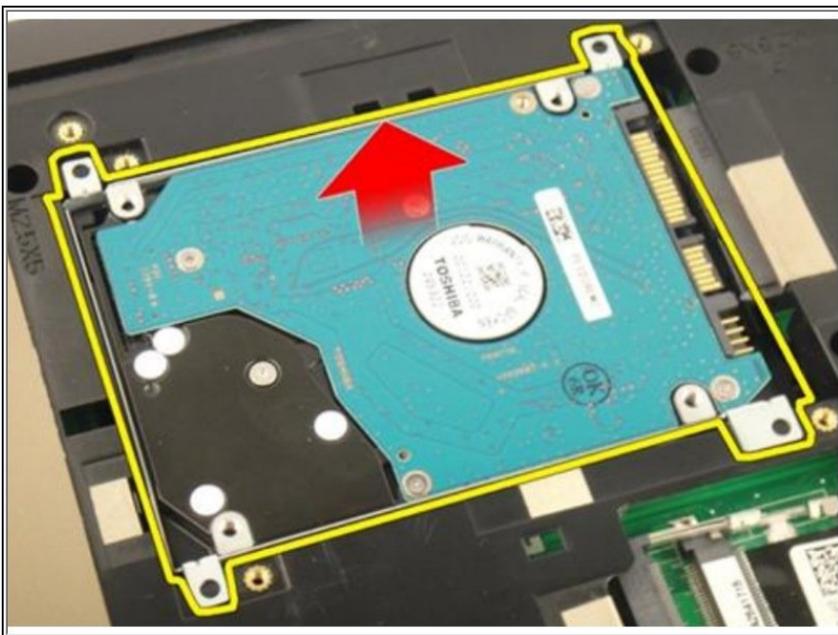


- Remove the hard drive module from the system board.

Step 8 — Remove the Screws

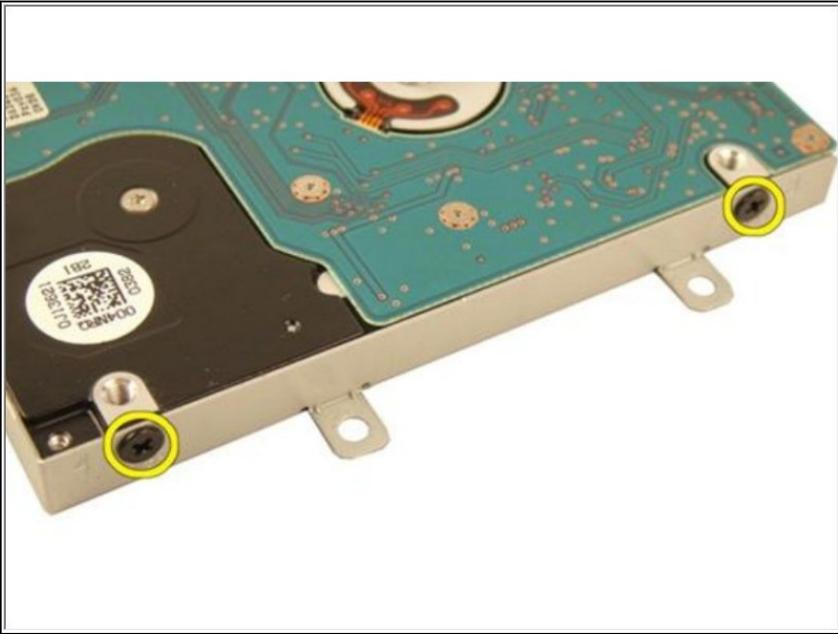

- Remove the screws that secure the hard-drive bracket.

Step 9 — Sliding the Hard Drive

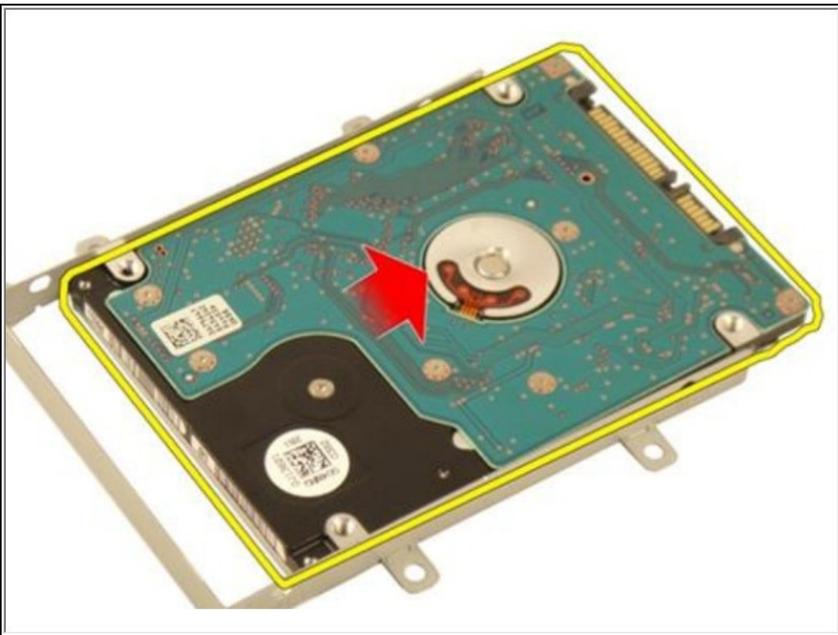

- Slide the hard drive from the hard-drive bracket.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.