


Dell Vostro 3460 Hard Drive Replacement

Written By: Johnathan Hammond

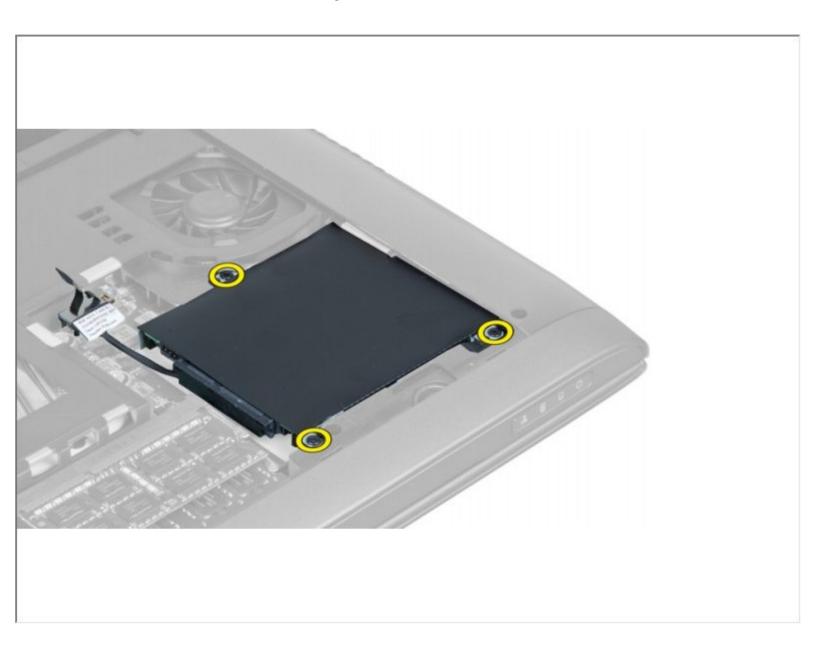

INTRODUCTION


In this guide, we will show you how to remove and replace the Hard Drive.



TOOLS:

• Phillips #0 Screwdriver (1)

Step 1 — Releasing the Battery

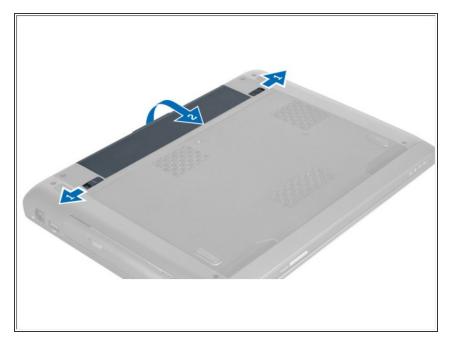

 Slide the battery latches to release the battery.

Step 2 — Removing the Battery



 Lift and remove the battery from the computer.

Step 3 — Remove the Screws




 Remove the screw(s) that secures the cover to the computer. Lift the cover upwards.

Step 4 — Sliding the Cover




 Slide the cover outwards to release it from the notches on the computer.

Step 5 — Lifiting the Cover

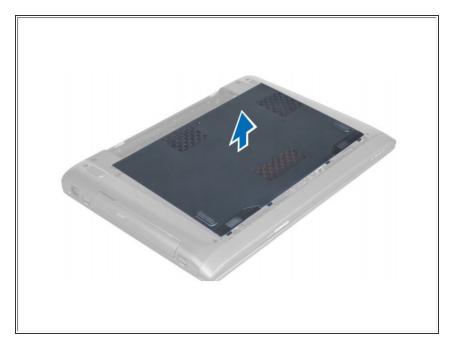


 Lift the cover upwards and away from the computer.

Step 6 — Remove the Screws

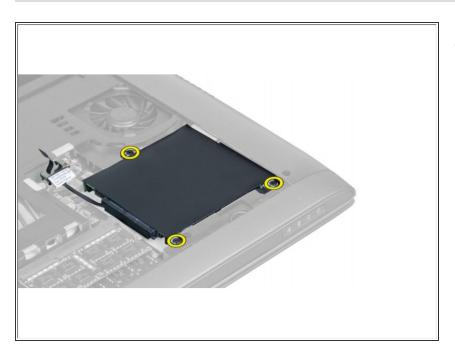


 Remove the screws that secure the hard drive to the computer.

Step 7 — **Disconnecting the Hard-Drive**

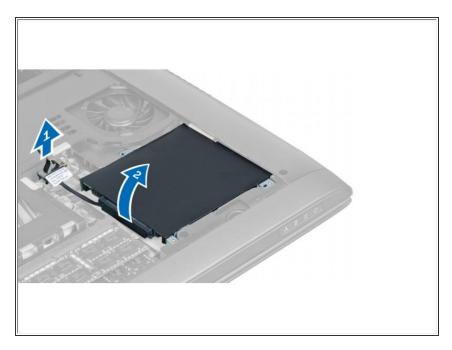


 Lift the tab to disconnect the harddrive cable from the system board.
Lift the hard drive to loosen it from the chassis.

Step 8 — Removing the Hard Drive

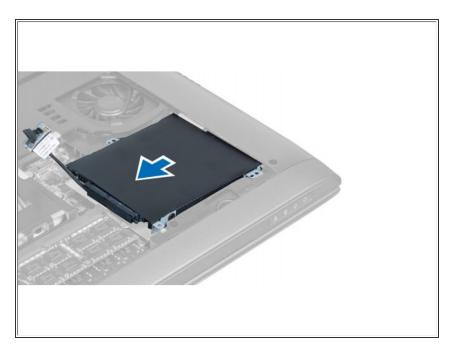

 Slide and remove the hard drive from the computer.

Step 9 — Removing the Screws

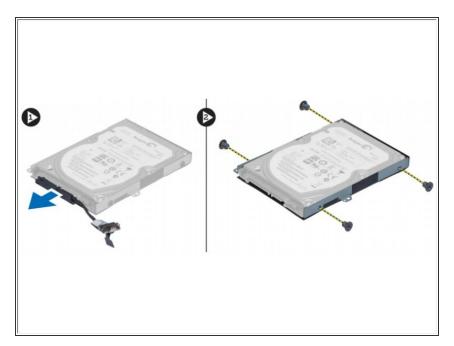

Disconnect the hard-drive cable.
Remove the screws securing the hard drive to hard-drive bracket. Lift the hard drive from the bracket.

To reassemble your device, follow these instructions in reverse order.