



Dell Vostro 3450 Keyboard Replacement

In this guide, we will show you how to remove...

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will show you how to remove and replace the Keyboard.



TOOLS:

Spudger (1)

Step 1 — Unlocking the Battery



- Slide the left and the right battery release latches to the unlock position.

Step 2 — Removing the Battery



- Slide the battery and remove it from the computer.

Step 3 — Prying the Keyboard



- Press the keyboard down. Pry the keyboard with the use of a flat-head screwdriver towards the display to reveal the first keyboard retainer.

Step 4 — Prying the Keyboard retainer



- Pry up the second keyboard retainer.

Step 5 — Pry up the Keyboard Retainer



- Pry up the third keyboard retainer.

Step 6 — Prying the Retainer




- Pry up the fourth keyboard retainer.

Step 7 — Pull up the Keyboard



- Pull up the keyboard from the palm rest.

Step 8 — Release the Latch

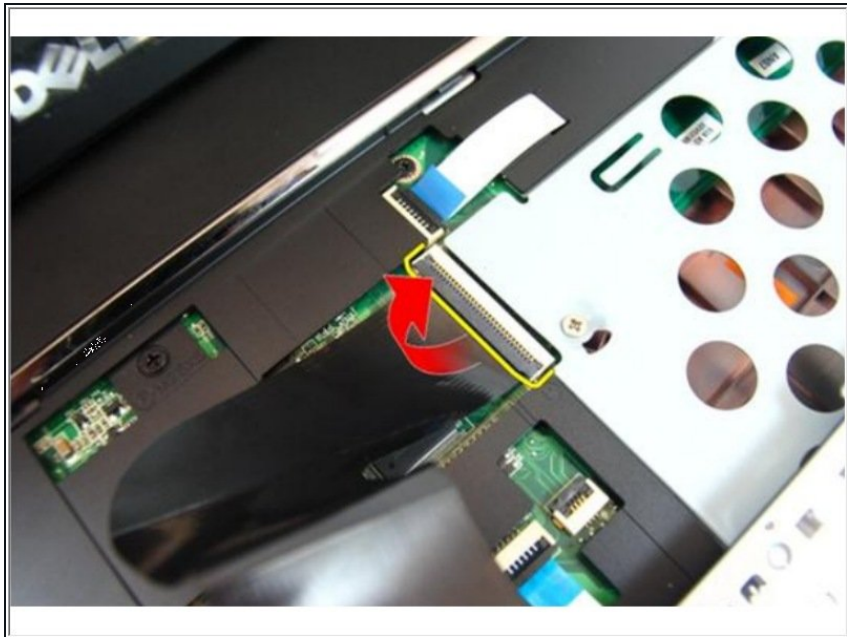

- Release the latch on the system board connector, then disconnect the keyboard cable.
- ★ If this is all you are doing Follow Step In Reverse if not Go to Next Step.