



# Lenovo Edge Thinkpad E431 Screen Replacement

This guide will display the steps on how to change the 14.0 inch LCD screen on the Lenovo Thinkpad Edge E431.

Written By: Abdullah Muhammad Ashfaq Nadir



# INTRODUCTION

This guide will show you how to replace the screen on a Lenovo ThinkPad Edge E431 laptop.

---

## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Magnetic Project Mat](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Remove the 2mm Phillips #00 screw from the battery cover.
- Lift the battery cover out of its slot.


## Step 2

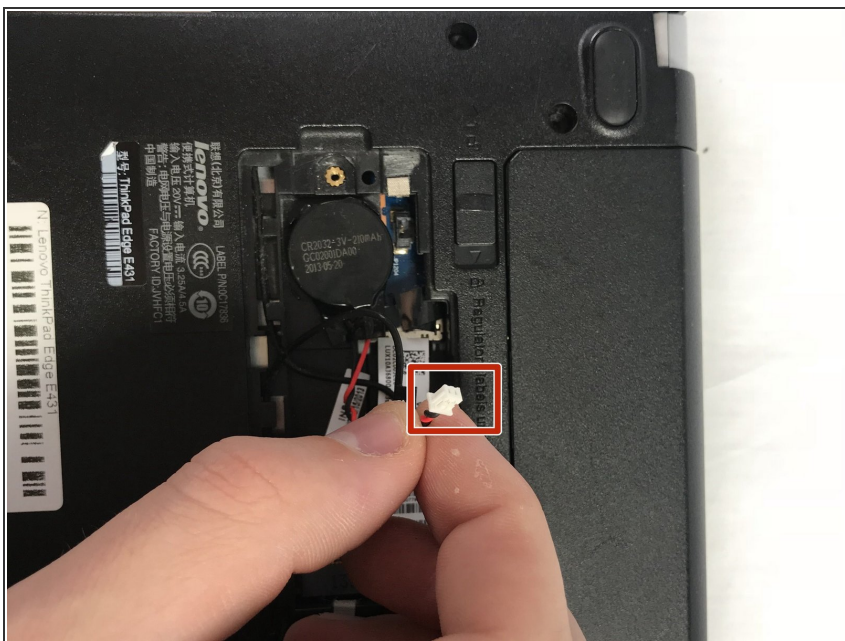

- Disconnect the battery cable.




## Step 3 — Screen

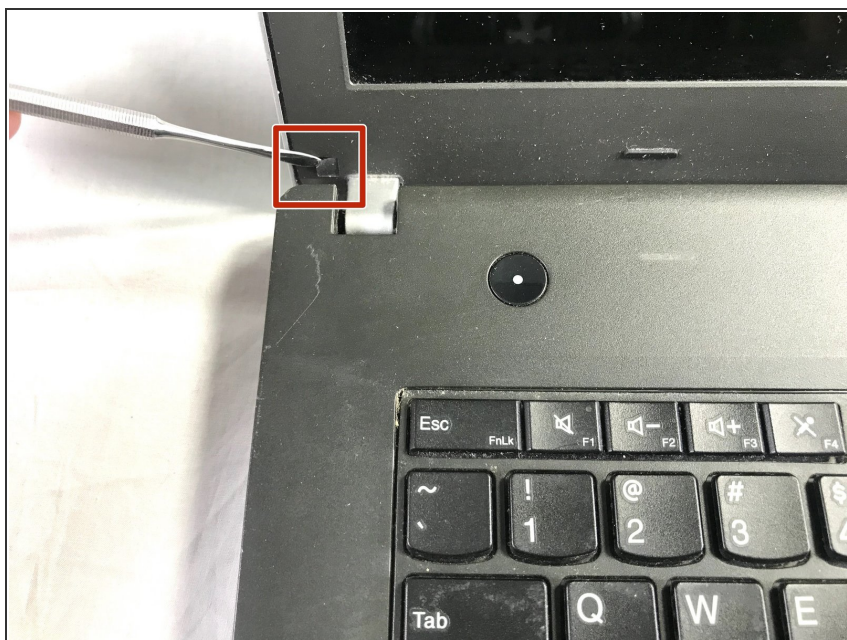


- Use the pointed end of a spudger to remove the two screw covers from the bottom corners of the display.

## Step 4

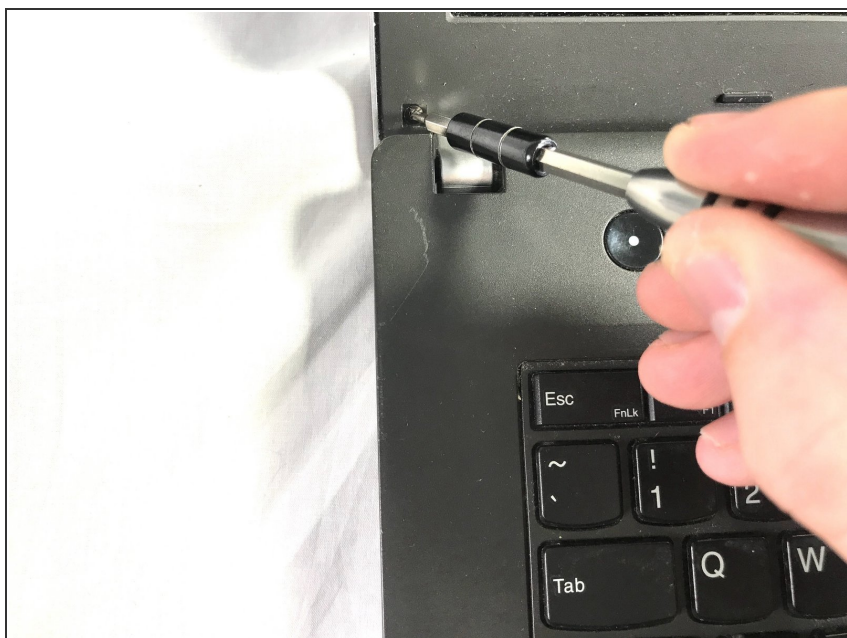

- Remove the two 2mm Phillips #00 screws found at the bottom corners of the display.

## Step 5

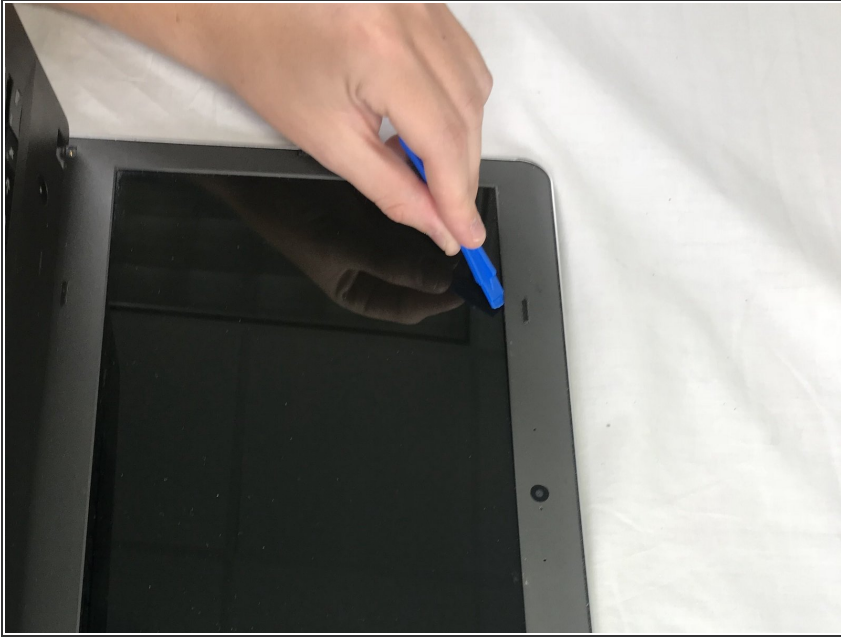

- Separate the front bezel from the display using the plastic opening tool.

## Step 6




- Remove the four 2mm Phillips #00 screws from the screen.

## Step 7



- Lay the screen flat on top of the keyboard.

## Step 8

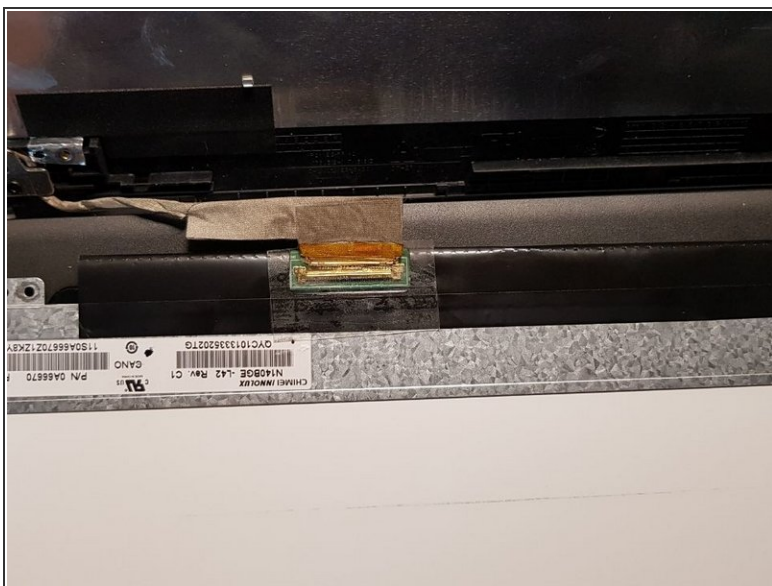

- Peel up the adhesive tape to unlatch the metal retaining bracket on the display cable.

To reassemble your device, follow these instructions in reverse order.