


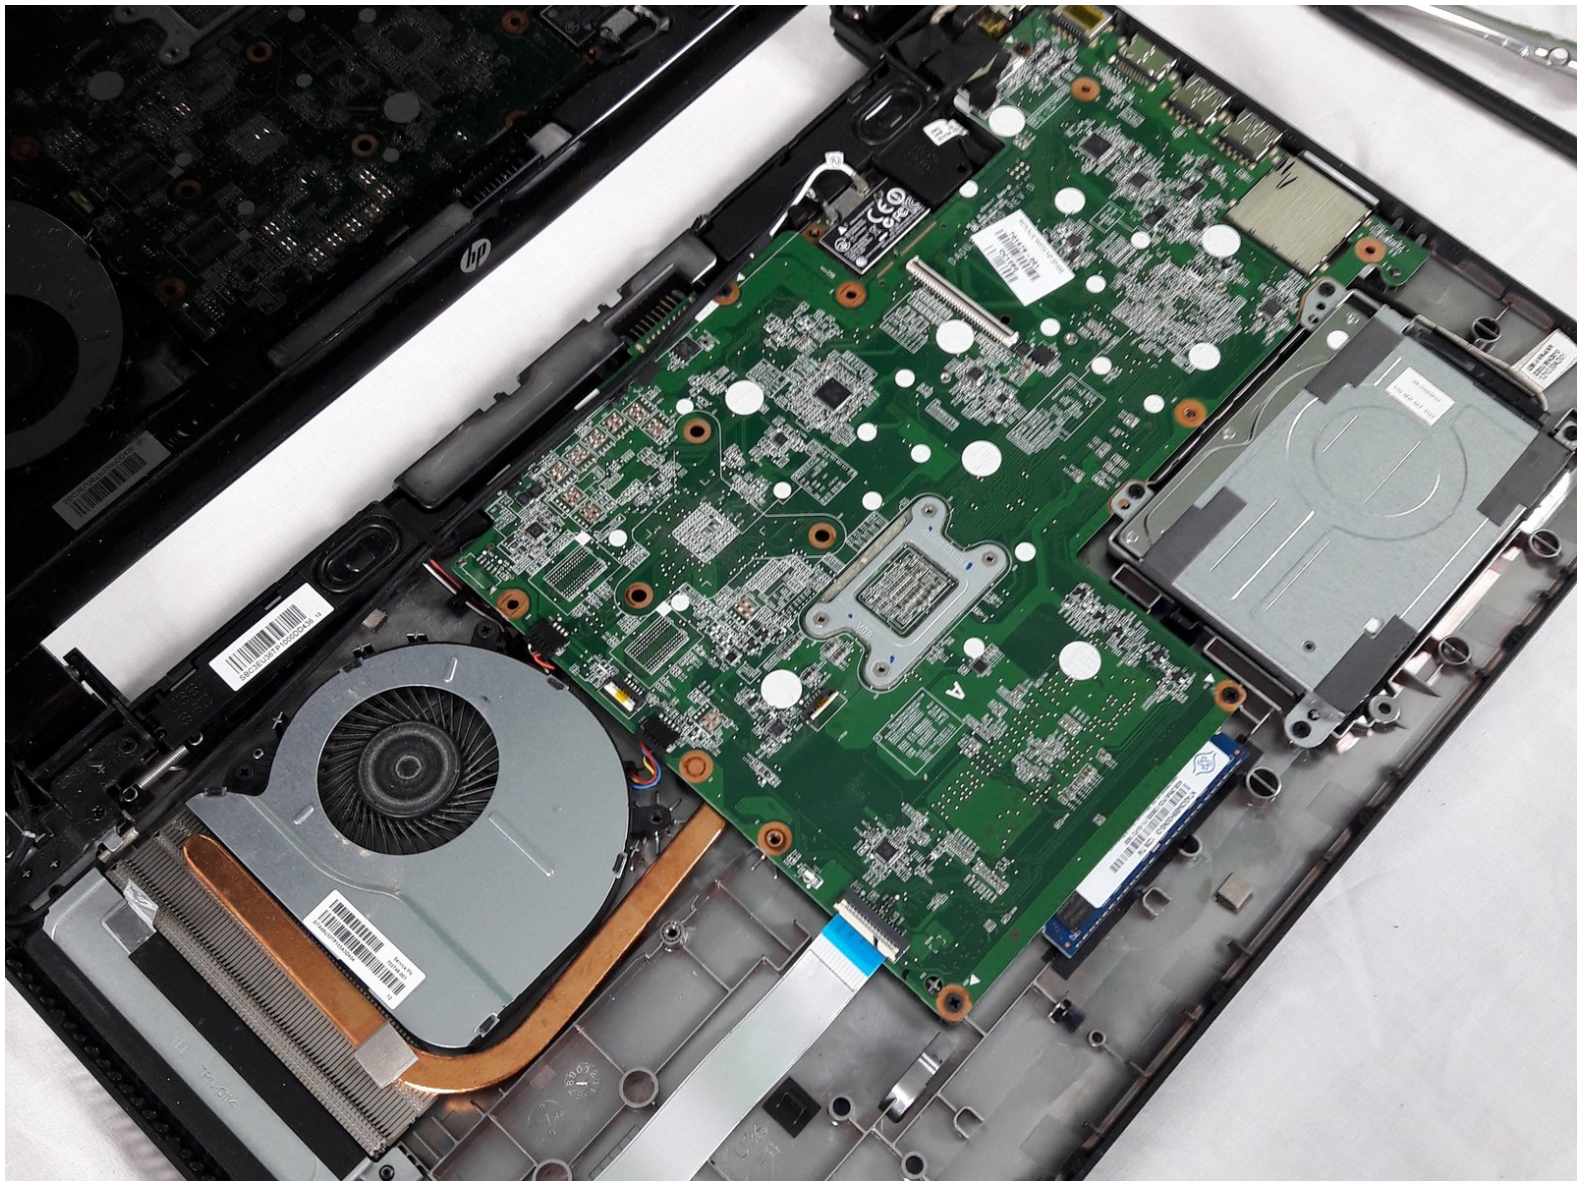

HP Pavilion Sleekbook 15-b000 Case Replacement

A guide on how to open up the laptop to access various internal components.

Written By: Shaw Bacon Graveline



INTRODUCTION

The case contains all the internal parts of the laptop. It will need to be opened to replace these parts. This guide will serve as a general procedure on how to open up the laptop case in order to perform the other replacement guides.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Unplug laptop from adapter and all other devices.

Step 2



- Flip the laptop over with battery facing you.

Step 3



- Slide the battery lock on the right side open.
- Slide the Battery release latch on the left side.

Step 4



- Pull battery out.

Step 5 — Keyboard



- Remove the two 6.5mm Phillips #1 keyboard screws from bottom of laptop.

Step 6



- Push screwdriver through screw hole top pop the keyboard.
- ⓘ Make sure the screen is open.

Step 7




- Pry up the keyboard.
- ⓘ The keyboard is still attached by it's ribbon.

Step 8



- Remove keyboard wire by popping latch under blue plastic

Step 9 — Case

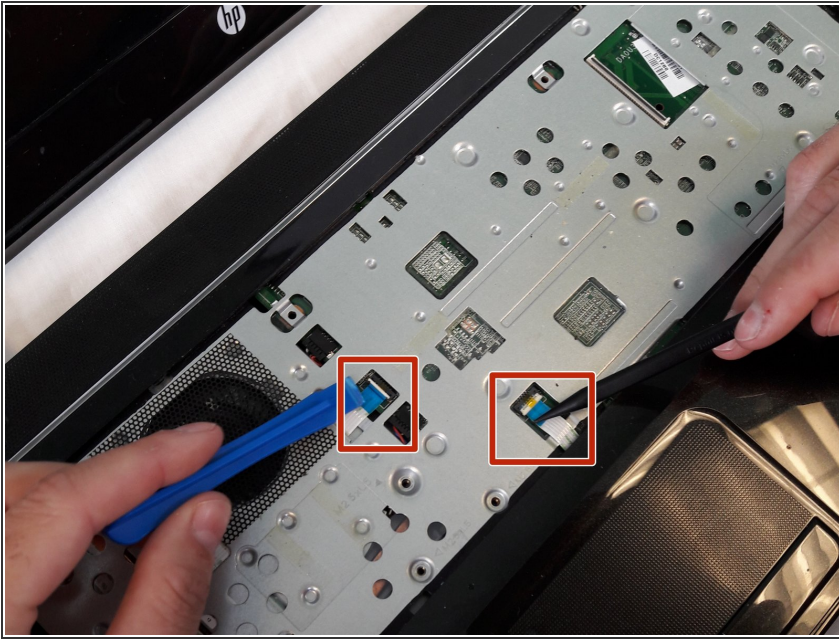

- Using the spudger to lift up on the white tabs
- Pull horizontally on the blue ribbon to disconnect the cables

Step 10



- Remove the five 5.5mm Phillips #1 screws from the case

Step 11



- Remove eight 6.5mm Phillips #1 screws from the back cover

Step 12



- Starting at a top corner, use the pry tool to split the case.
- Slowly work around the case, pulling up gently to release the clips.

To reassemble your device, follow these instructions in reverse order.