




HP Pavilion Sleekbook 15-b000 Speaker Replacement

Remove the speaker for future repairs or replace the speaker if damaged.

Written By: Sam Barkley

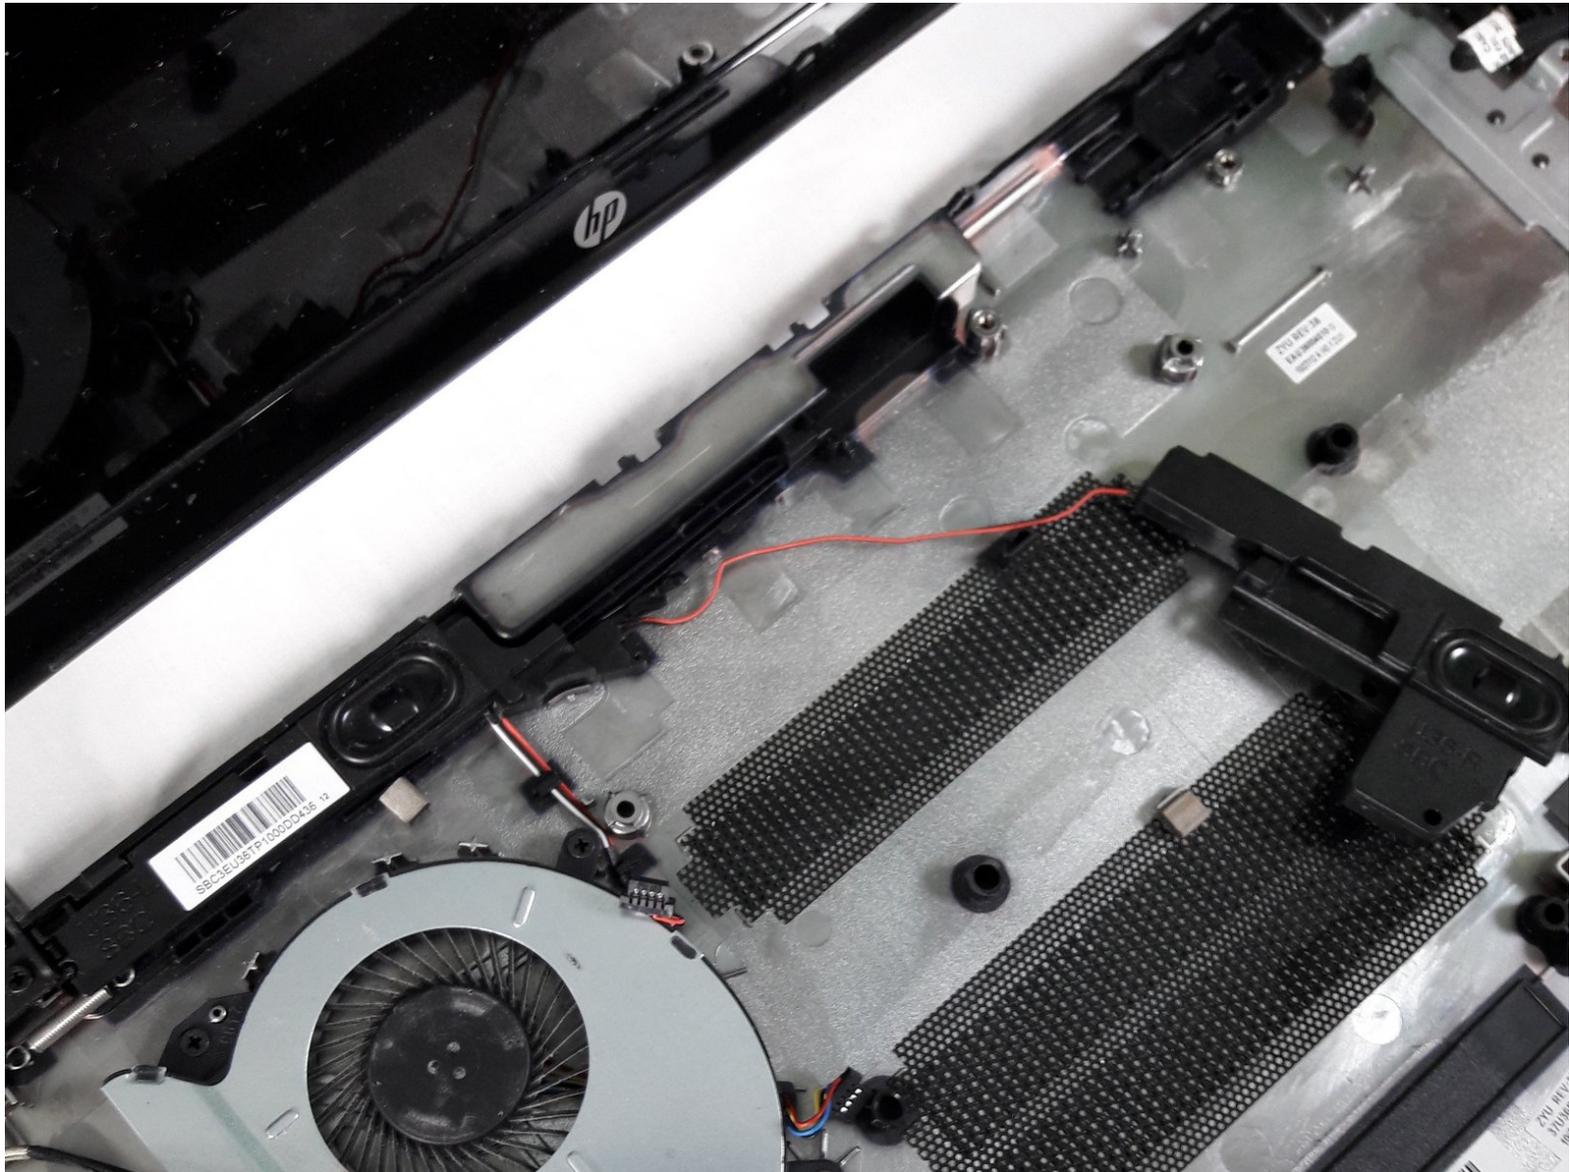

INTRODUCTION

This guide will go through the steps to replace the speakers if the audio is distorted or the sounds is not working.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Unplug laptop from adapter and all other devices.

Step 2



- Flip the laptop over with battery facing you.

Step 3



- Slide the battery lock on the right side open.
- Slide the Battery release latch on the left side.

Step 4



- Pull battery out.

Step 5 — Keyboard



- Remove the two 6.5mm Phillips #1 keyboard screws from bottom of laptop.

Step 6




- Push screwdriver through screw hole top pop the keyboard.
- ⓘ Make sure the screen is open.

Step 7




- Pry up the keyboard.
- ⓘ The keyboard is still attached by its ribbon.

Step 8

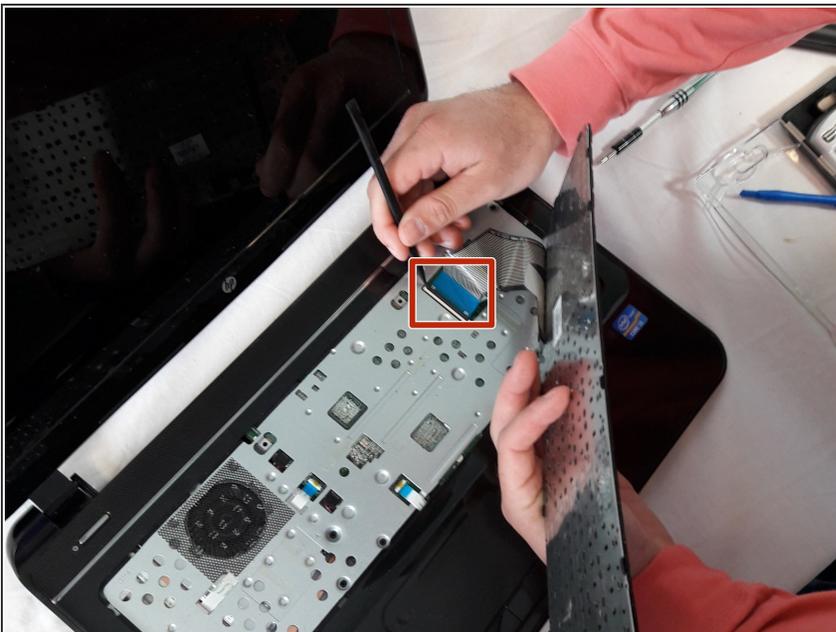

- Remove keyboard wire by popping latch under blue plastic

Step 9 — Case

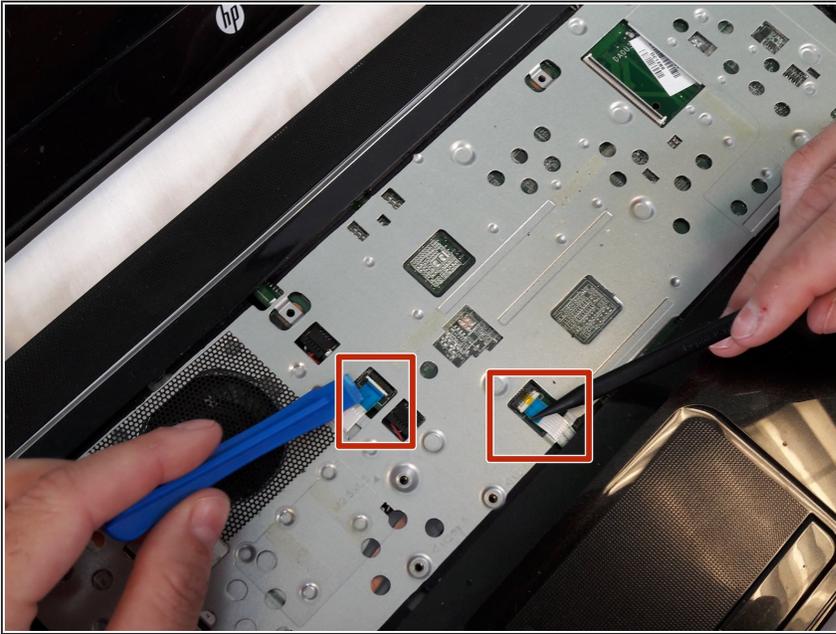

- Using the spudger to lift up on the white tabs
- Pull horizontally on the blue ribbon to disconnect the cables

Step 10



- Remove the five 5.5mm Phillips #1 screws from the case

Step 11




- Remove eight 6.5mm Phillips #1 screws from the back cover

Step 12




- Starting at a top corner, use the pry tool to split the case.
- Slowly work around the case, pulling up gently to release the clips.

Step 13 — Motherboard

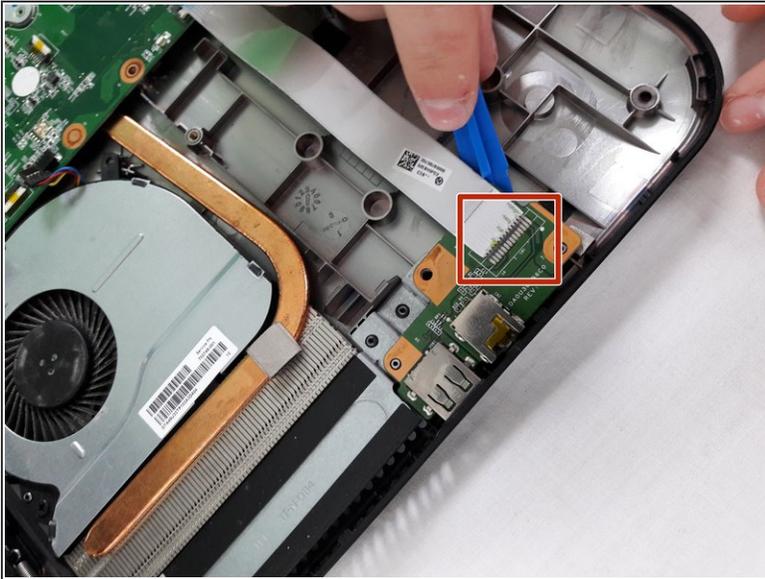


- Disconnect motherboard cable from left side USB and jacks

Step 14

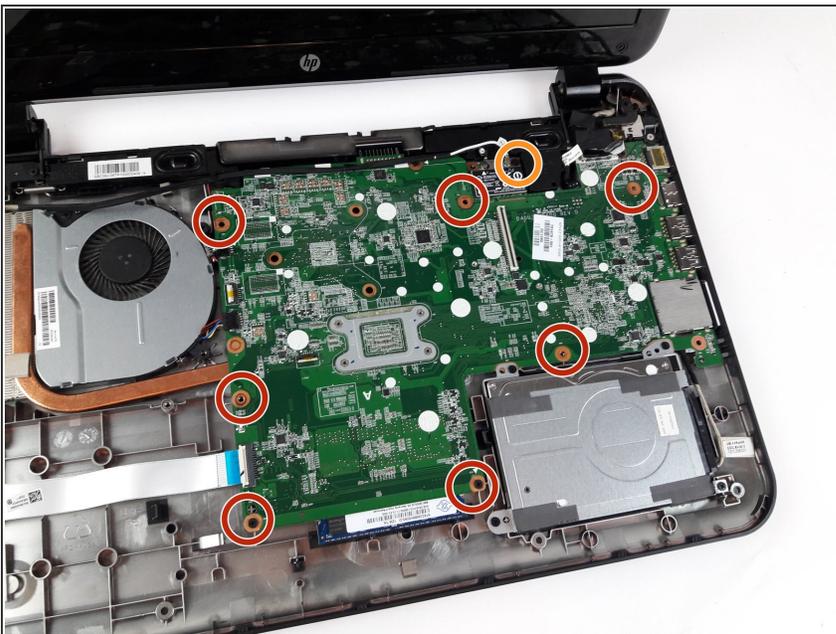


- Remove the six 5.5mm Phillips #1 motherboard screws
- Remove the one 3.5mm Phillips #1 screw from the WiFi chip

Step 15

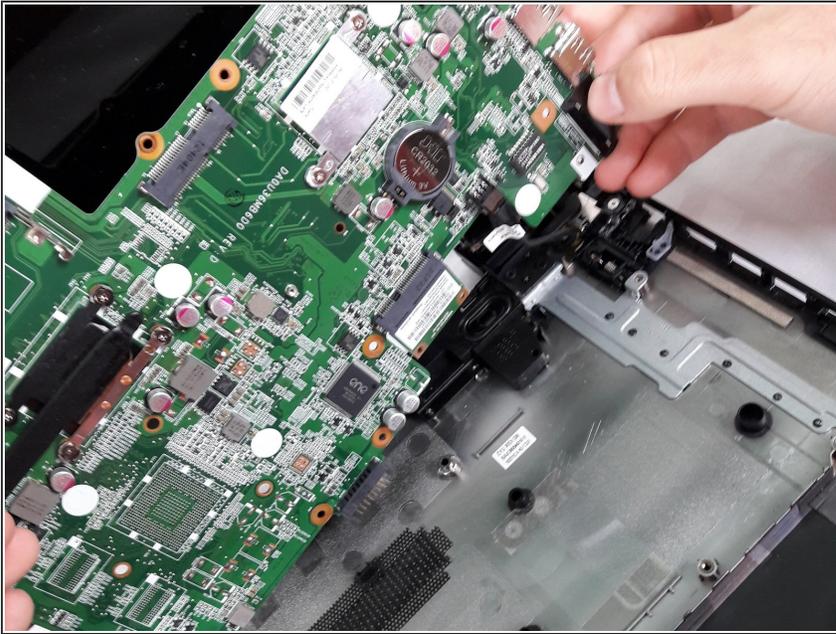

- Remove motherboard.

Step 16 — Speaker

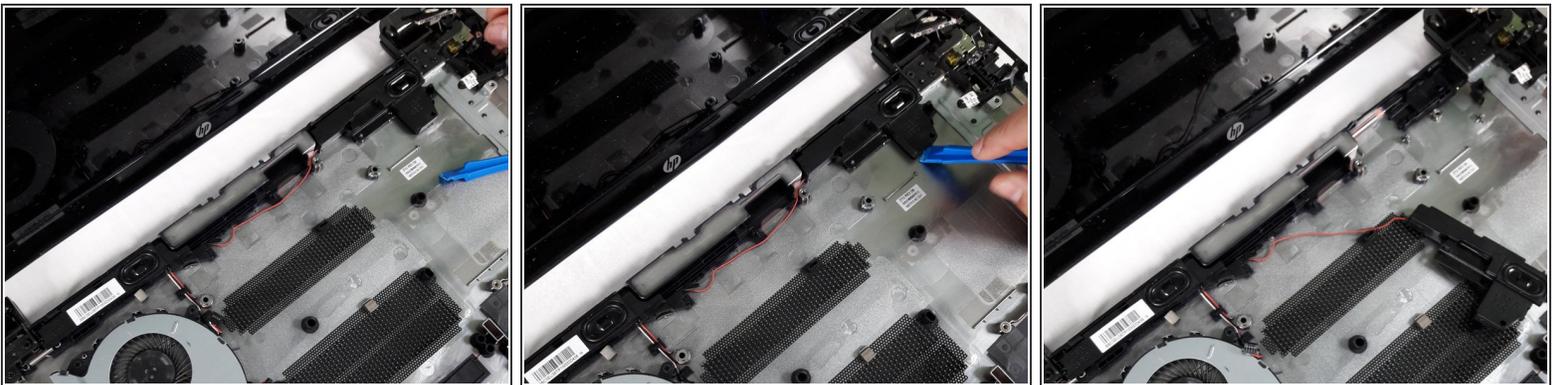

- Use a plastic opening tool to carefully remove the right speaker.
- Repeat this step for the left speaker.

To reassemble your device, follow these instructions in reverse order.