


## **Dell Vostro 3446 Access Panel Replacement**

Written By: Johnathan Hammond

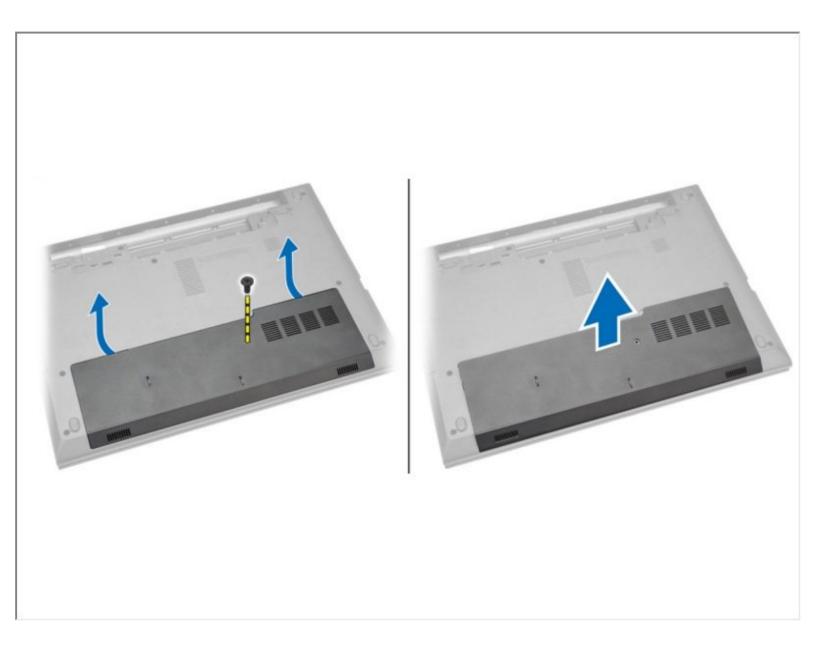


This document was generated on 2021-01-03 07:54:12 PM (MST).

## F TOOLS:

• Phillips #0 Screwdriver (1)


This document was generated on 2021-01-03 07:54:12 PM (MST).

## Step 1 — Unlocking the Battery

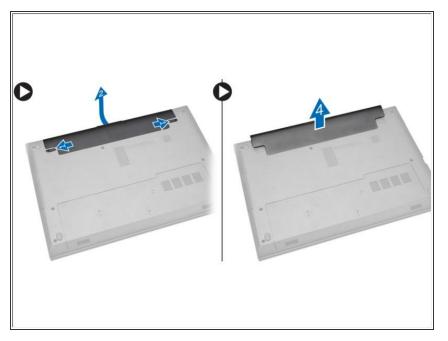

 Slide the release latches outwards to unlock the battery and lift the battery to remove it from the computer

## Step 2 — Access Panel

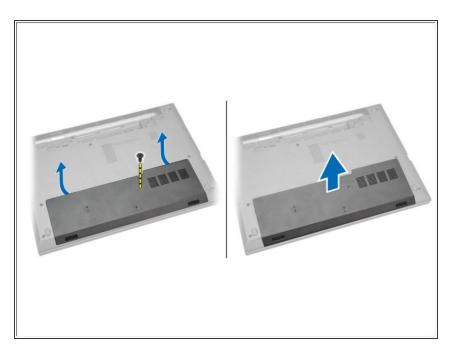

• Loosen the screw and lift the access panel off the computer.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-01-03 07:54:12 PM (MST).