



# Dell Vostro 3400 Base Cover Replacement

Written By: Johnathan Hammond



---

## INTRODUCTION

In this guide, we will show you how to remove and replace the Base Cover.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Sliding the Battery Release Latch



- Slide the battery release latch to the unlock position.

## Step 2 — Sliding the Battery Release Latch



- Slide the other battery release latch to the unlock position.

### Step 3 — Sliding the Battery




- Slide the battery and remove it from the computer.

### Step 4 — Remove the Screws



- Remove the screws that secure the base cover to the computer.

## Step 5 — Lifting the Base Cover

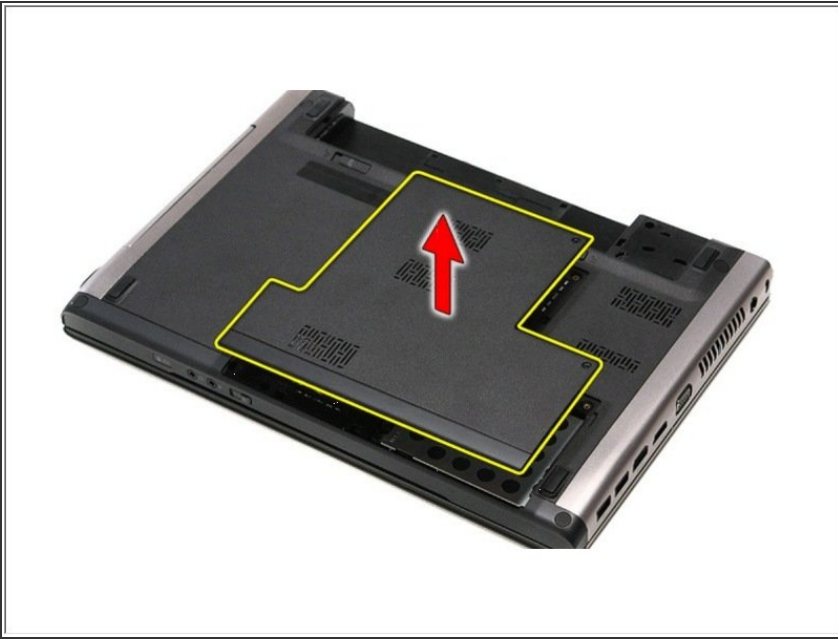

- Lift up the base cover and remove it from the computer.