




# Dell Vostro 1710 Battery Replacement

When the battery is not holding charge or the laptop will not respond or show any sign of powering up.

Written By: Tangxiao Sun

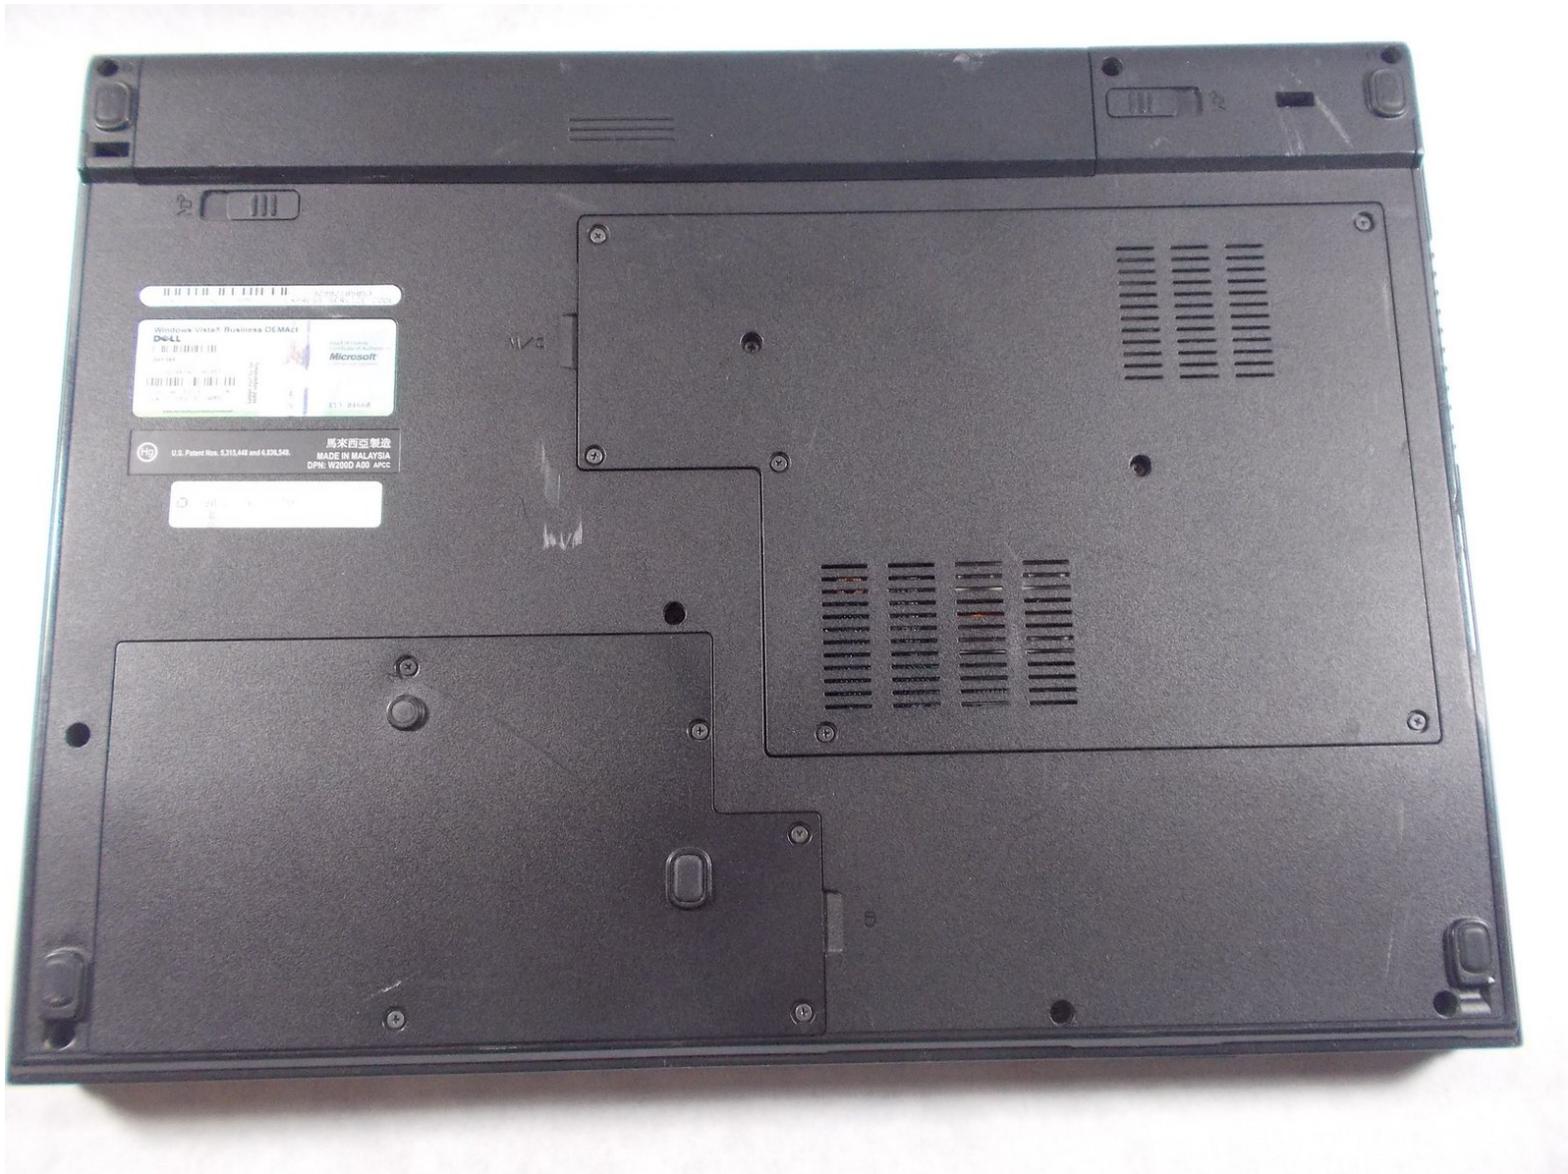

## INTRODUCTION

The battery gives power to the laptop so if your computer is not powering up you will need to replace the battery. This guide will show you how to replace the battery but be careful when replacing it because it can still hold a charge.

## Step 1 — Battery




- ⓘ Make certain that the power to your laptop is off.
- Press and slide the two buttons outwards and away from the battery.

## Step 2



- Slide the battery away and parallel from the laptop.

## Step 3

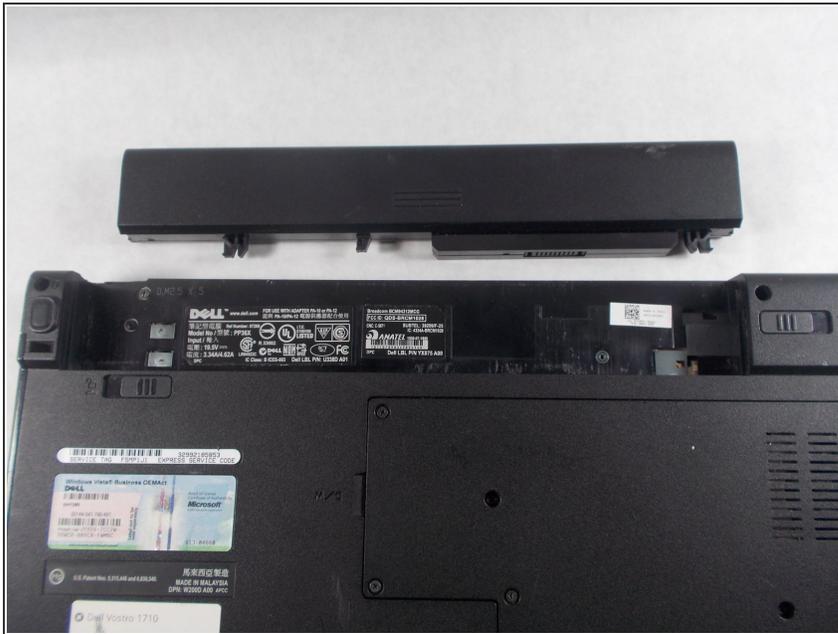

- Remove the battery from the slot.

To reassemble your device, follow these instructions in reverse order.