


## **Dell Vostro 15 3568 KeyBoard Replacement**


Written By: Johnathan Hammond



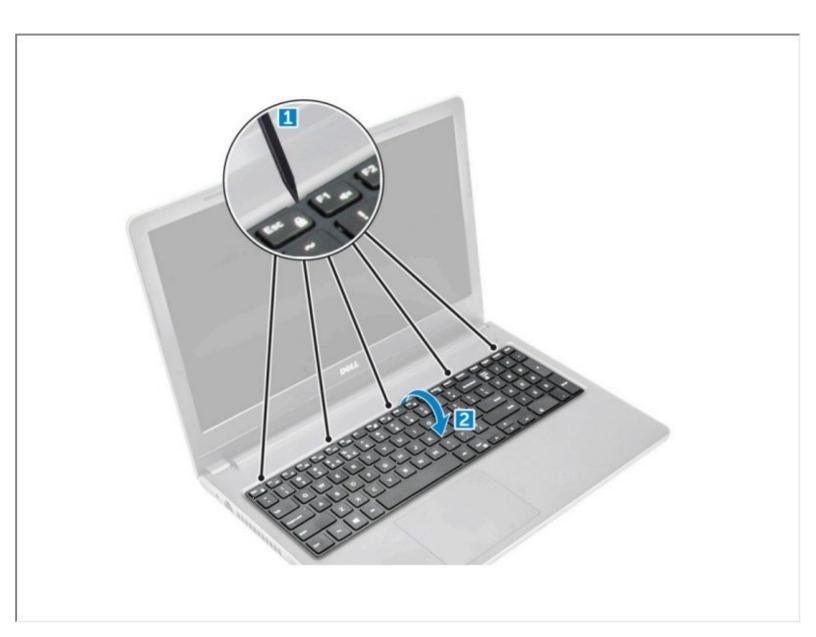


- Spudger (1)
- Phillips #0 Screwdriver (1)

## Step 1 — Battery

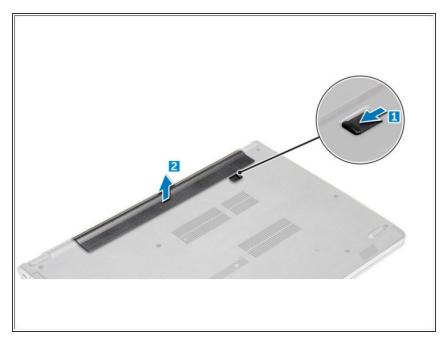

- Slide the release latch to release the battery [1].
  - Remove the battery from the computer [2].

## Step 2 — KeyBoard

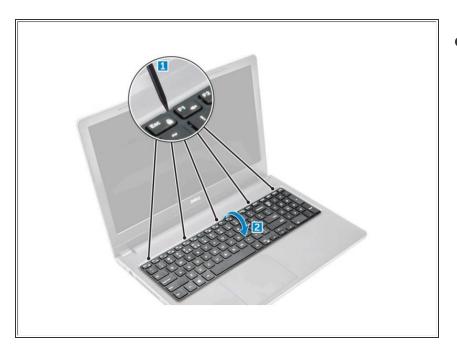

- Release the keyboard by prying on the keyboard release tabs using a plastic scribe [1].
  - Slide and lift the keyboard to access the keyboard connector cable under the keyboard [2].

## Step 3



- Disconnect the keyboard cable from the system board.
  - Lift the keyboard cable to remove it from the computer.

To reassemble your device, follow these instructions in reverse order.