




HP ProBook 455 G1 Hard Drive Replacement

Use this guide to replace the hard drive in you HP ProBook 455 G1 device.

Written By: Bailey Brammer

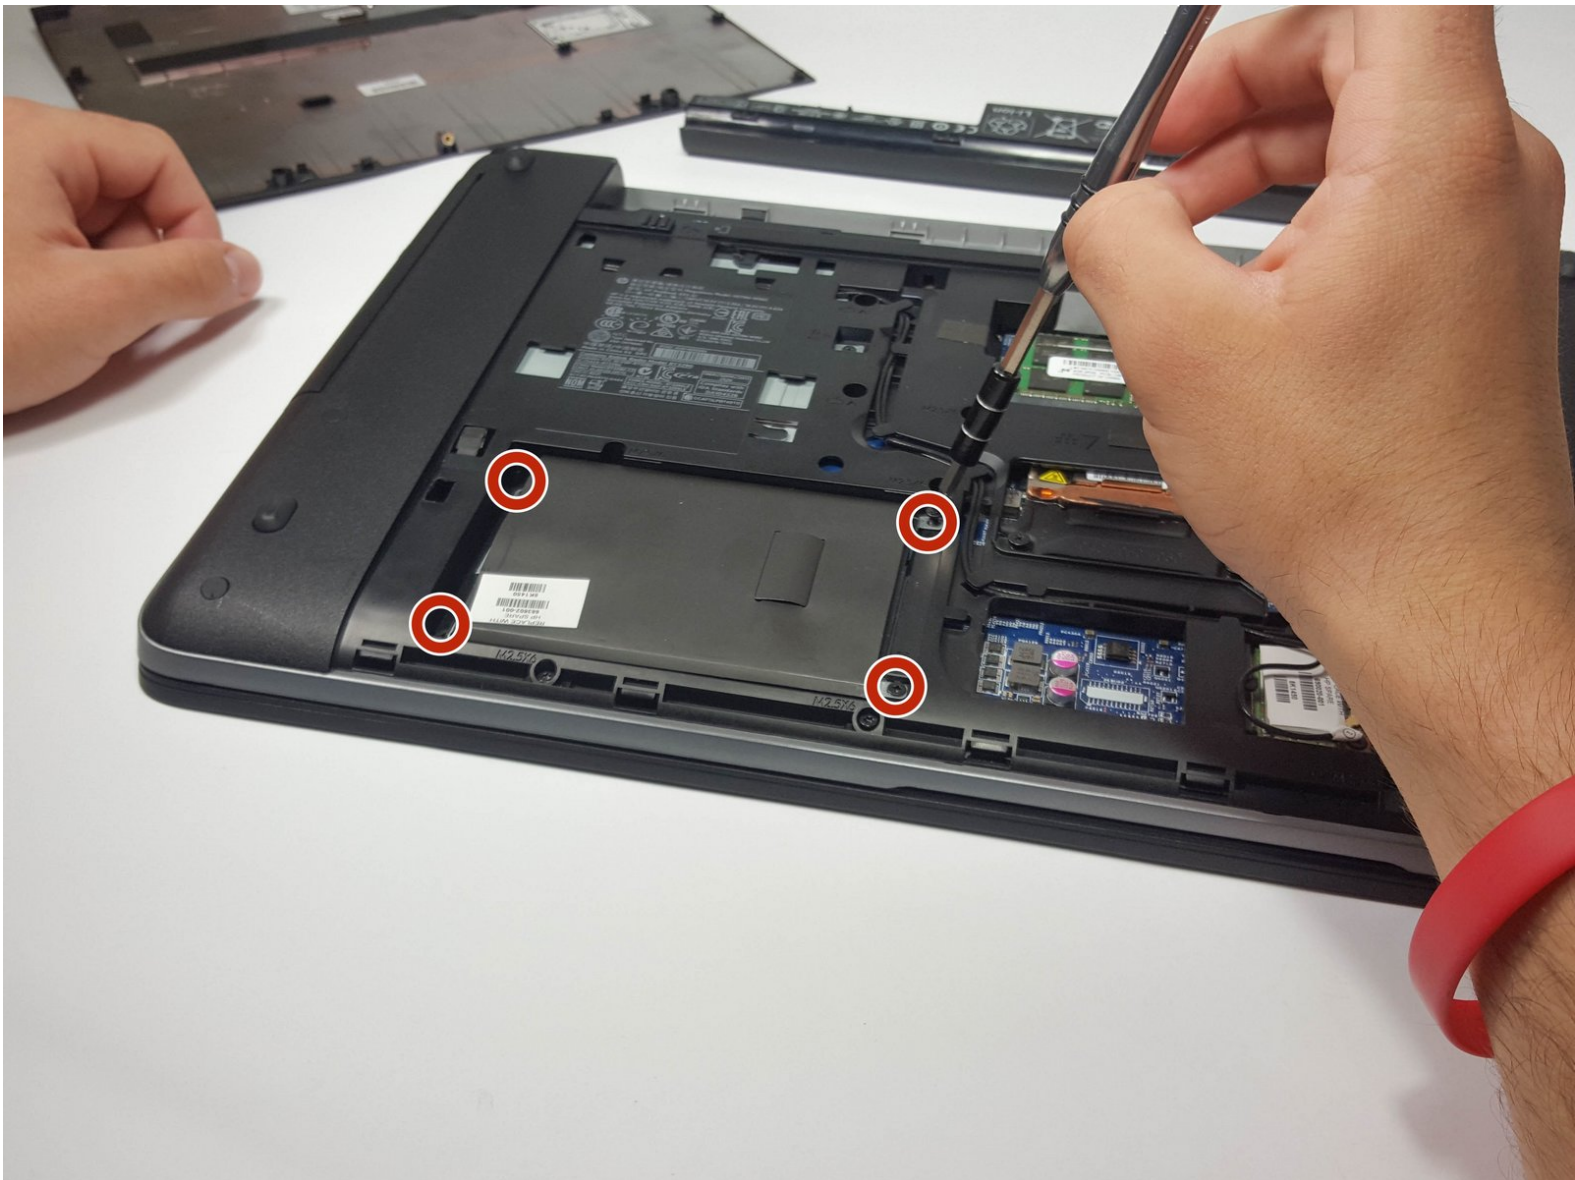

INTRODUCTION

Your computer's hard drive may become damaged after prolonged use or age. One of the ways you can fix this is by replacing the drive itself. This guide is designed to help you safely and properly remove your computer's hard drive, no matter what the reason may be.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)




PARTS:

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Battery



- Turn the computer upside down on a flat side, so that you are seeing the underside of the laptop.

 Before removing the battery, make sure that the computer is turned off and that the power cord is not plugged into the computer.

Step 2



- Slide the two battery release latches towards the center of the laptop to release the battery.

Step 3



- Tilt the battery upward.
- Remove it from the laptop.

Step 4 — Service Panel




- Slide the two release latches that were mentioned in the battery removal process to release the service panel.

Step 5



- Slide the service panel toward you using your thumbs.
- Lift it to remove the panel and reveal inner components of the computer.

Step 6 — Hard Drive

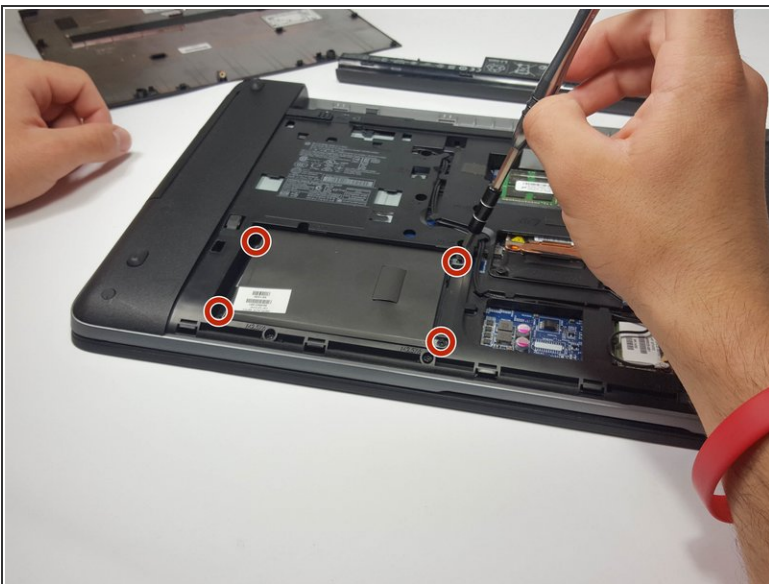

- Using a Phillips #0 Screwdriver, remove the four Phillips 3 mm screws that secure the hard drive into the computer.

Step 7



- Pull the hard drive cover tab to the left in order to disconnect the hard drive from the computer.

Step 8



- Finally, using the same tab, lift the hard drive out of the hard drive port.

To reassemble your device, follow these instructions in reverse order.