




Dell Chromebook 11 3189 Battery Replacement

Written By: Terrence15

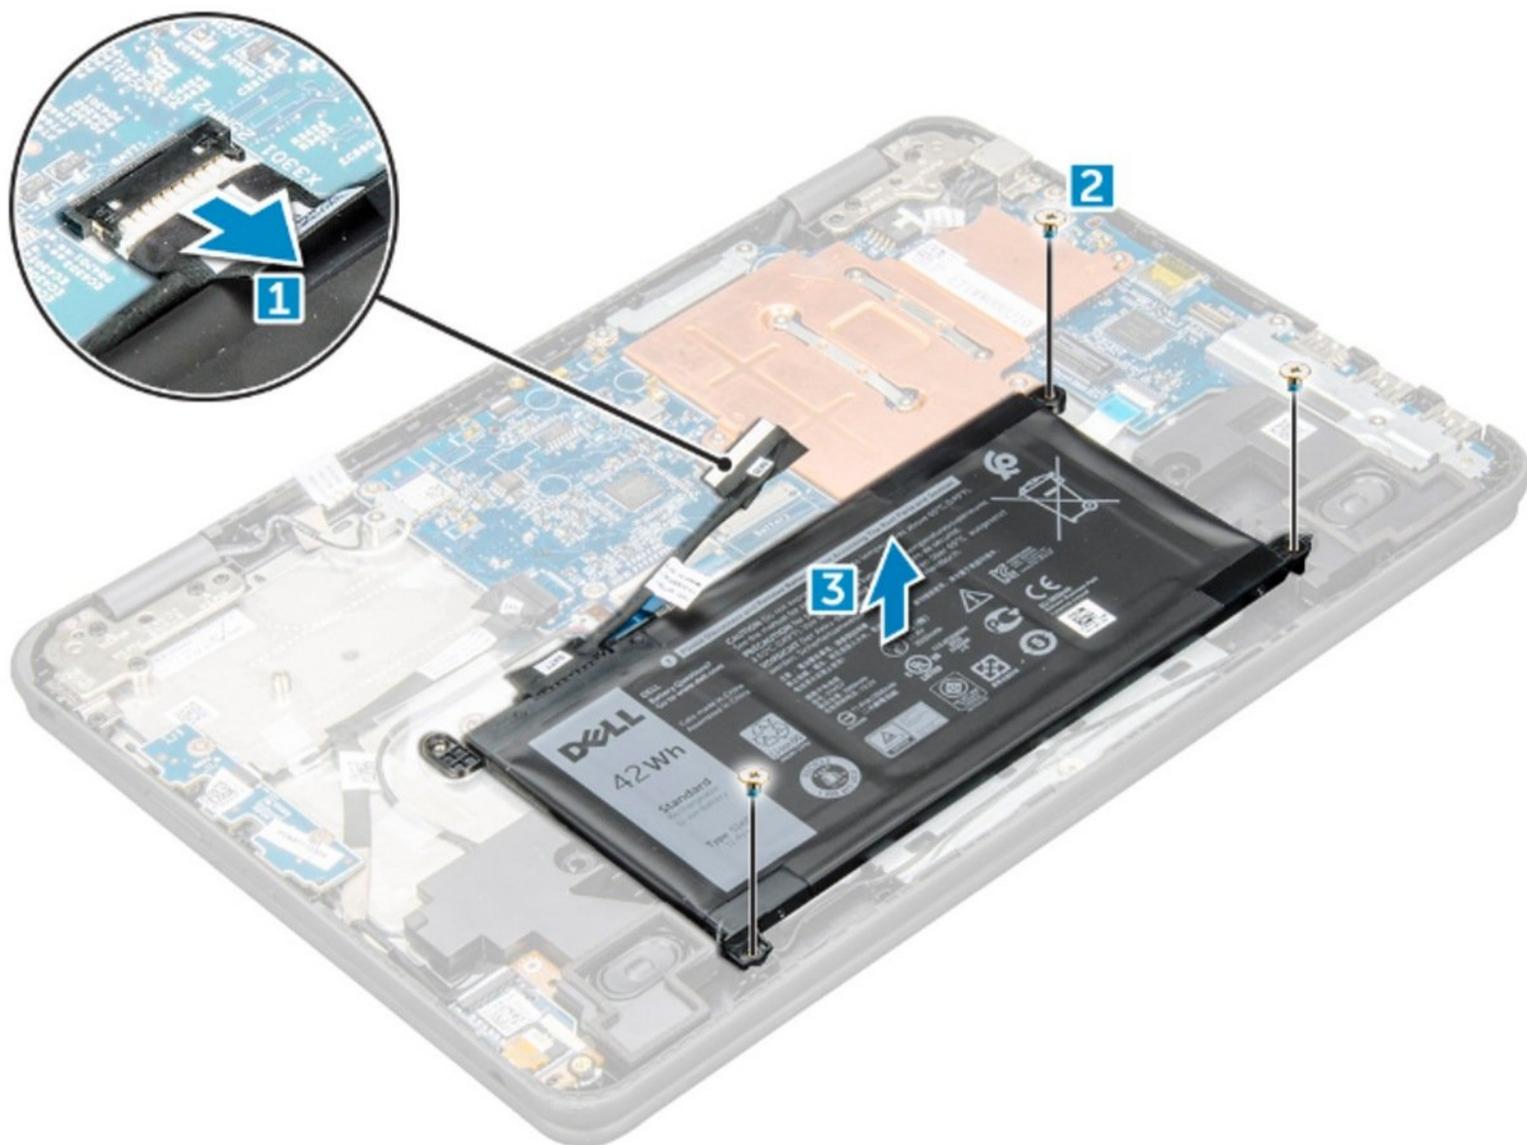


INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Disconnecting the Battery Cable

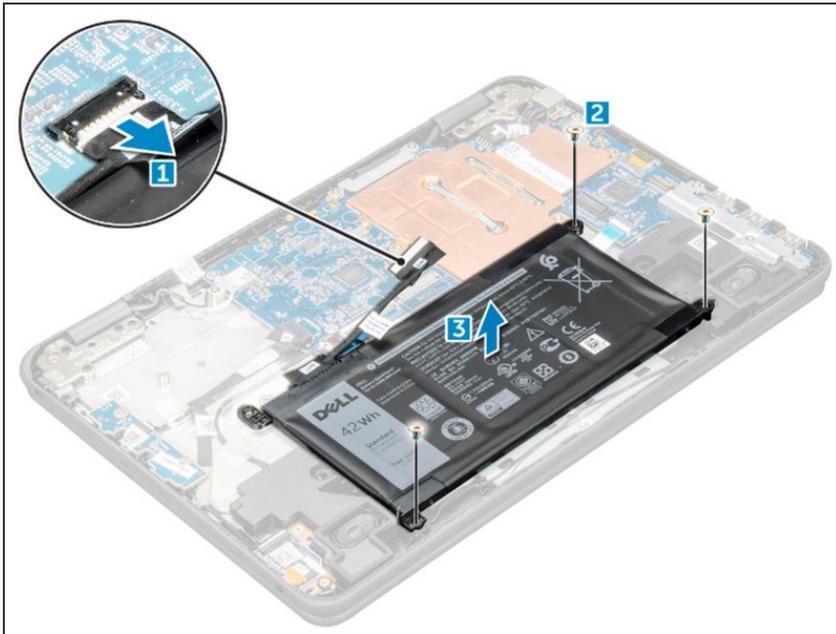

! Follow the procedure in [Before Working Inside Your Computer](#).


- Disconnect the battery cable from the connector on the system board.

Step 2 — Remove the Screws

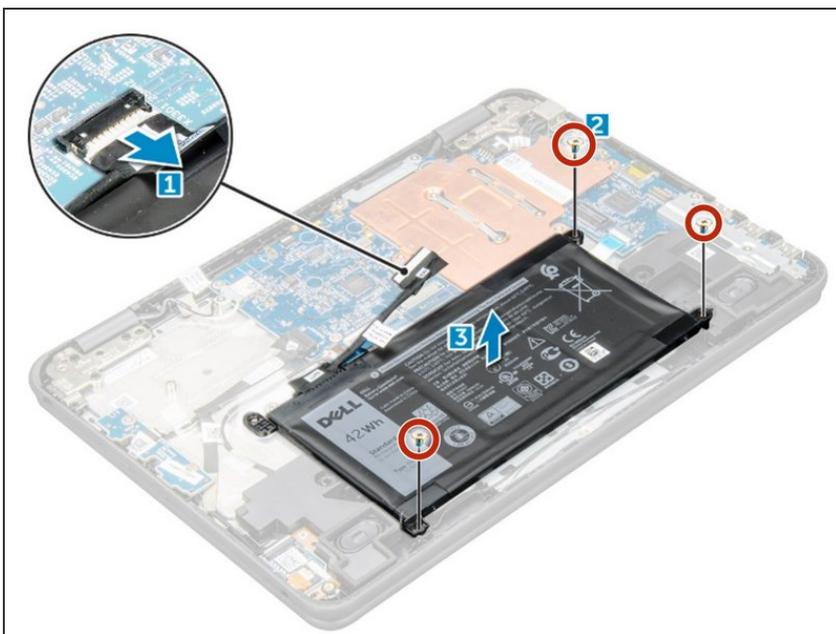


- Remove the M2.0x3.0 screws that secure the battery to the computer.

Step 3 — Lifting the Battery

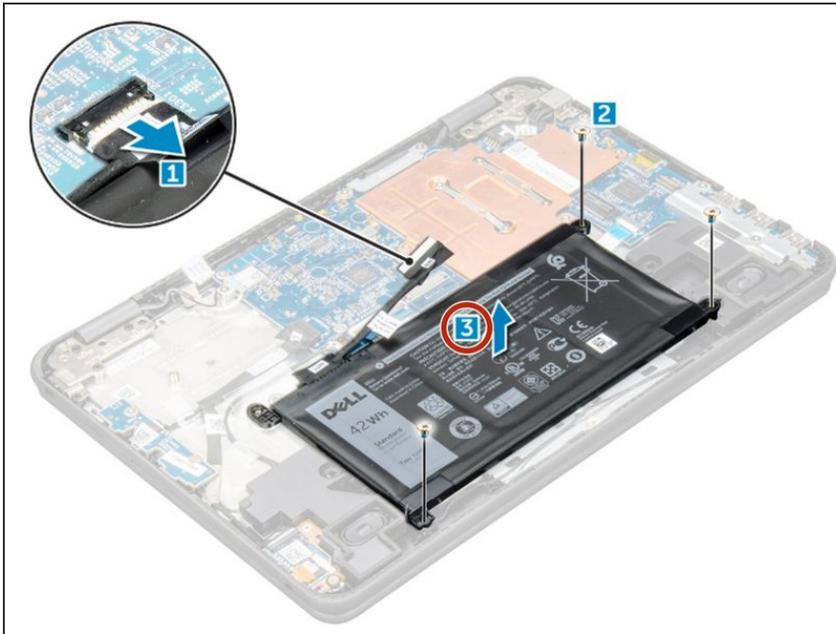


- Lift the battery away from the computer.

Step 4 — Insert the Battery

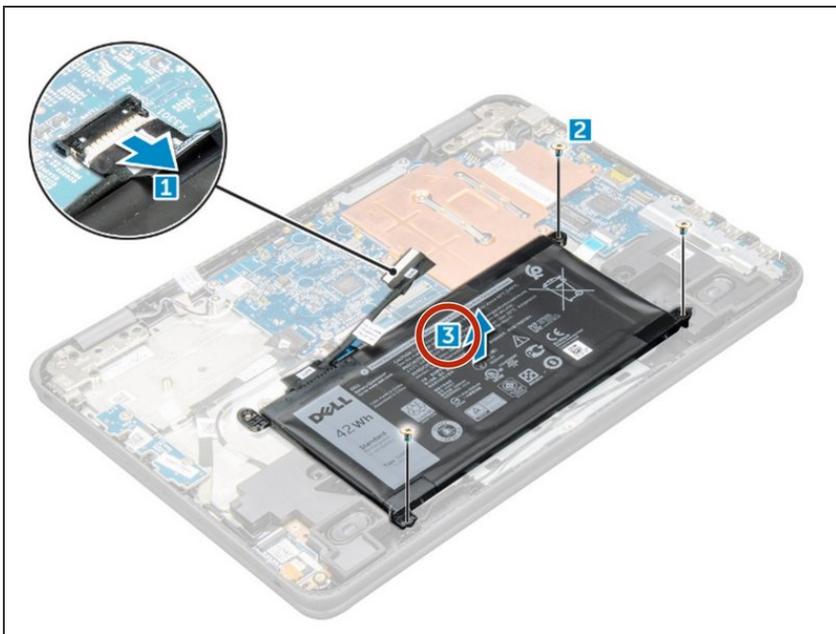


- Insert the **NEW** battery into the slot on the computer.

Step 5 — Connect the Battery Cable

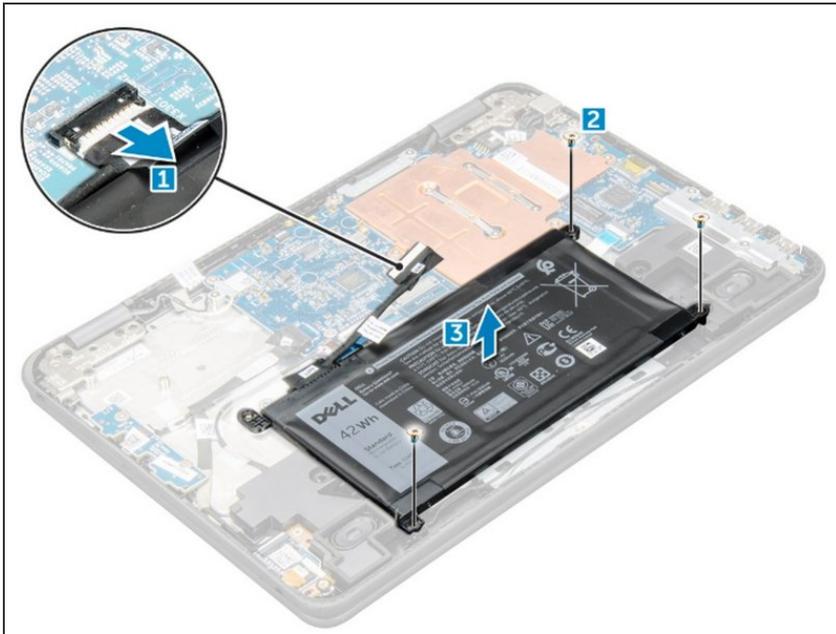

- Connect the battery cable to the connector on the battery.

Step 6 — Replace the Screws

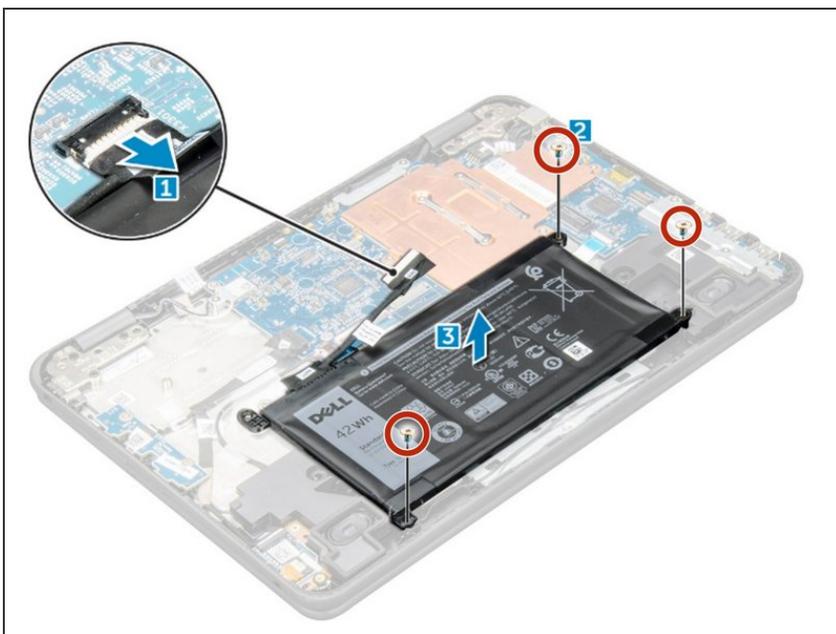

- Replace the M2.0x3.0 screws to secure the battery to the computer.

To reassemble your device, follow these instructions in reverse order.