



Razer Blackwidow Tournament Edition Chroma Front Panel Replacement

This iFixit guide will teach you how to safely...

Written By: Jonathan Stewart



INTRODUCTION



This IFIXIT guide will teach you how to safely remove the front panel of the Razer Blackwidow Tournament Edition Chroma. Removal will allow you to replace, repair, and clean the internals of your keyboard. You won't need many tools for this project but it is important that the correct tools are used as it is possible to pinch your finders or do damage to the keyboard itself. With this guide you will be able to remove the front panel successfully.

TOOLS:

[iFixit Opening Tool](#) (1)


[Phillips #1 Screwdriver](#) (1)

Step 1 — Rubber Feet

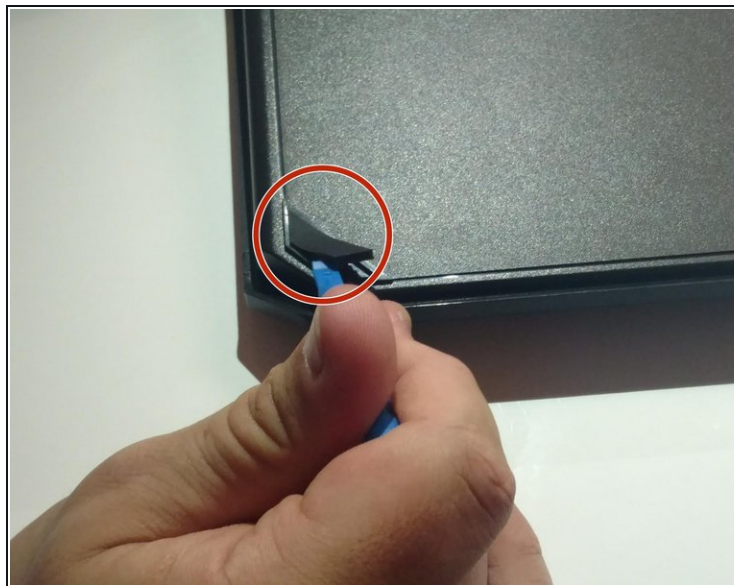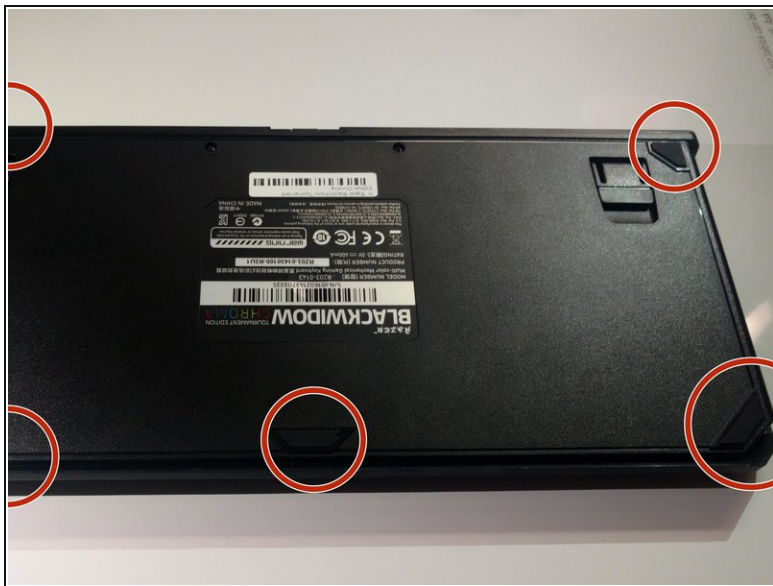

- Turn the keyboard over so that it is lying flat on its face.
- Use the iFixit opening tool to pry the rubber feet off the keyboard.

Step 2 — Front Panel

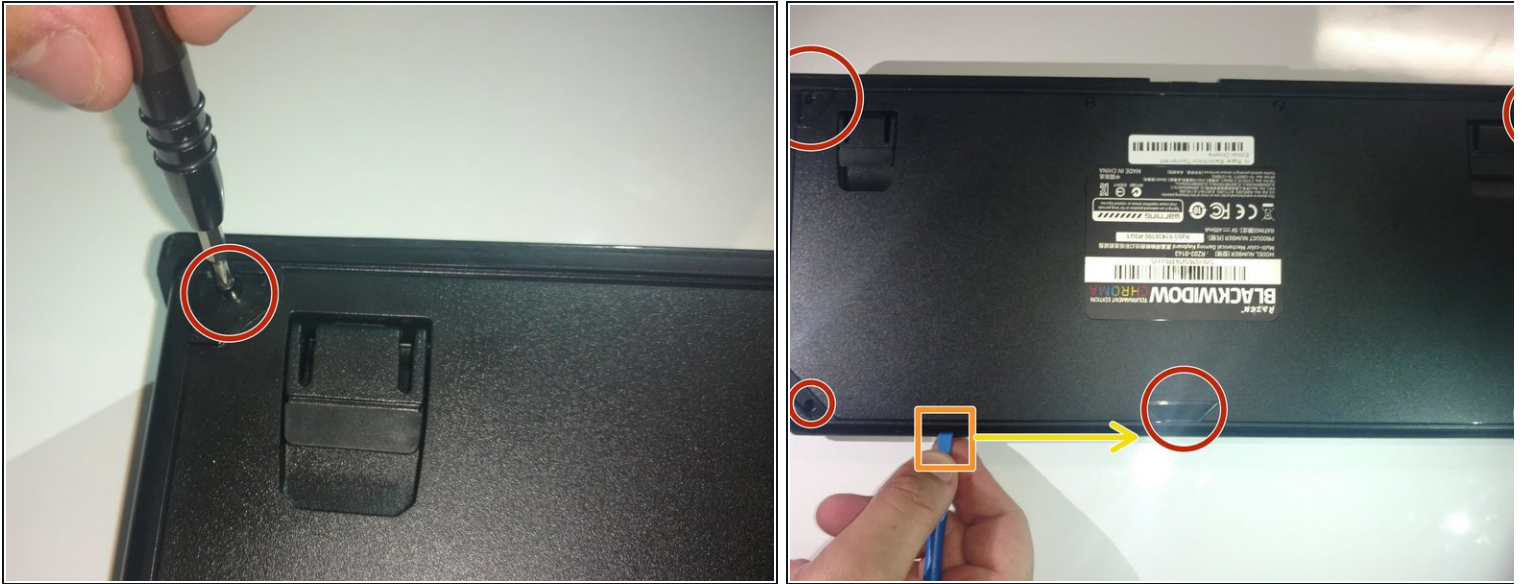

- Use a Phillips #1 screwdriver to remove the six screws on the back of the keyboard.
- Use an opening tool as a wedge between the front and back panel to pry open the front panel.
 - ⚠ If the front and back panel won't separate, **DO NOT** use excessive force. This may result in damaging the keyboard.
 - Instead, slide the opening tool across the keyboard in between the front and back panel. Go around the edges of the keyboard until the panels disconnect.
- Flip the keyboard over so the keys are facing up.
- Grabbing the left and right lips of the front panel, lift both ends up, removing the front panel.

To reassemble your device, follow these instructions in reverse order.