



## **Dell Vostro 1310 Battery Replacement**

Written By: Johnathan Hammond

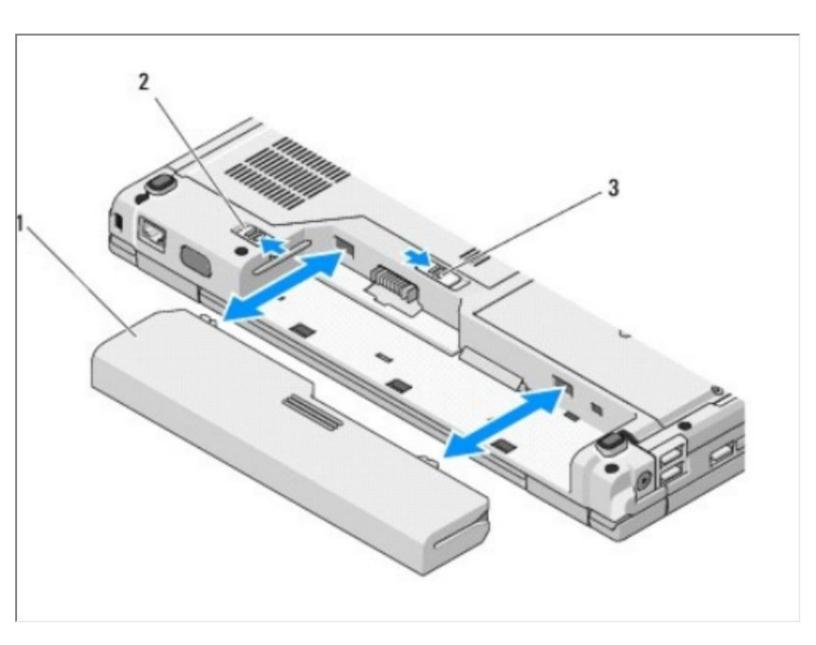

## Step 1 — Battery

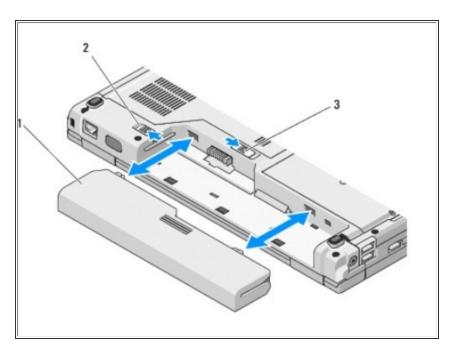

- Slide the battery lock to the open position. {2}
  - Slide the battery latch release to the open position. (You may need to hold the latch release in the open position while removing the battery.){3}
    - Slide the battery out of the battery bay. {1}

To reassemble your device, follow these instructions in reverse order.