


# **Dell Vostro 1310 Hard Drive Replacement**


Written By: Johnathan Hammond

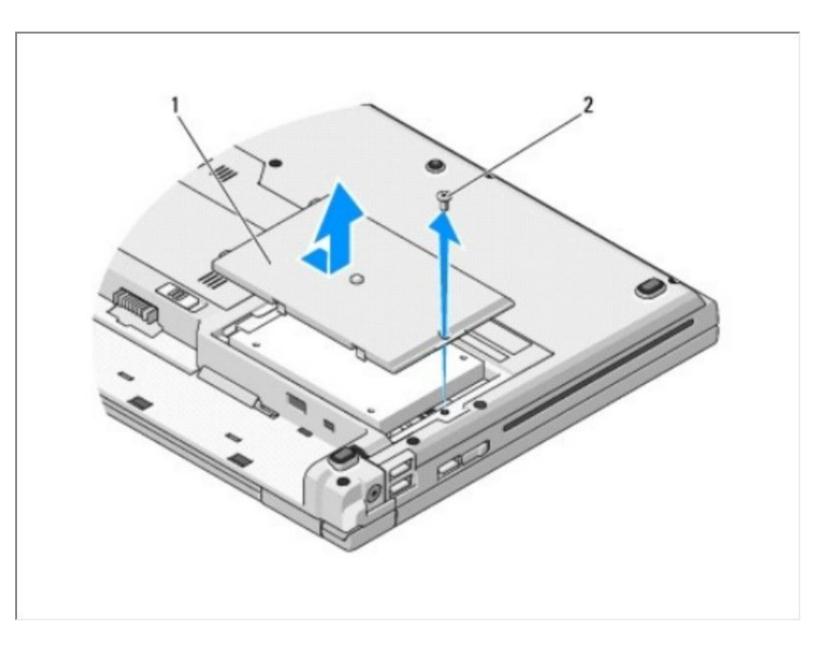

## F TOOLS:


• Phillips #0 Screwdriver (1)

### Step 1 — Battery

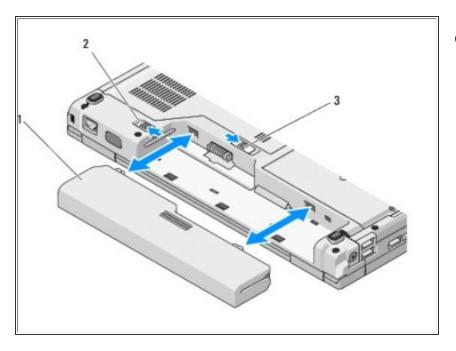


- Slide the battery lock to the open position. {2}
  - Slide the battery latch release to the open position. (You may need to hold the latch release in the open position while removing the battery.){3}
    - Slide the battery out of the battery bay. {1}

### Step 2 — Hard Drive

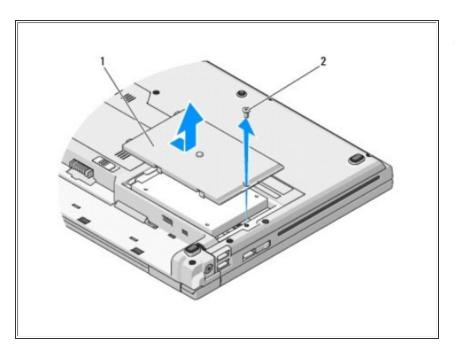

- Remove the M2.5 x 5-mm screw that secures the hard-drive compartment cover. {2}
  - Remove the cover and set it aside.{1}

#### Step 3

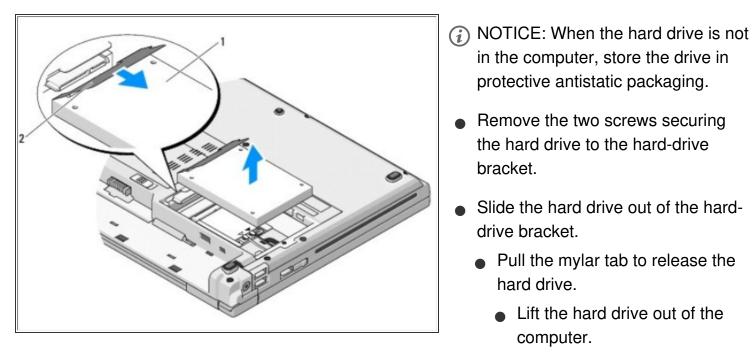

To reassemble your device, follow these instructions in reverse order.