




Dell Inspiron 11z 1110 Memory Module Replacement

Written By: Terrence15

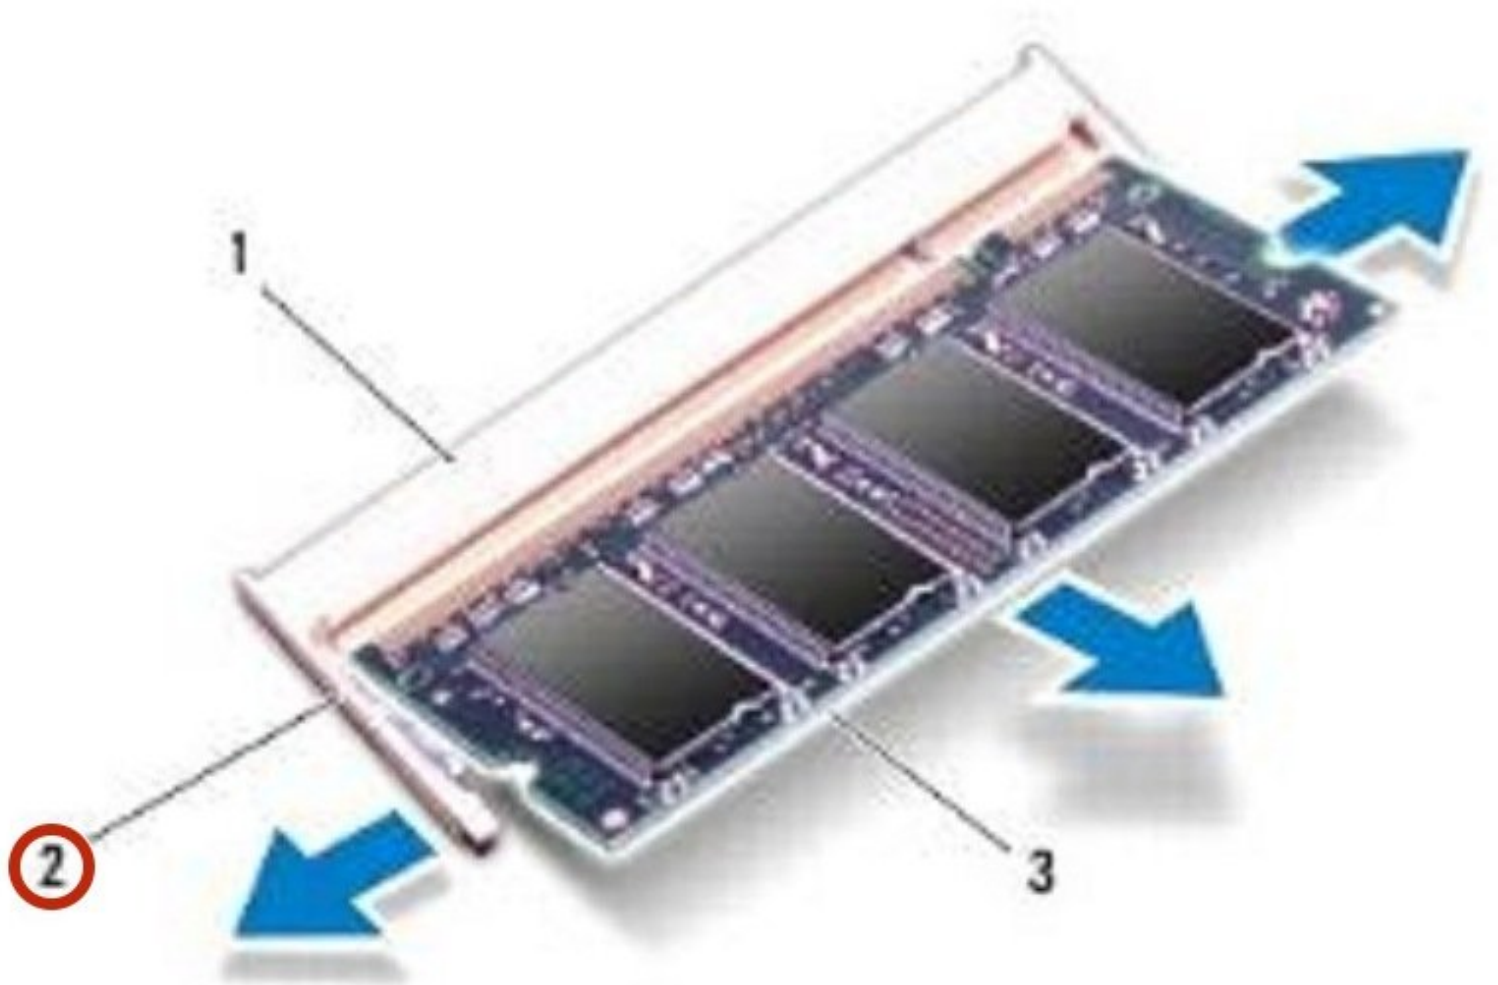

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Memory Module.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Popping up the Memory Module


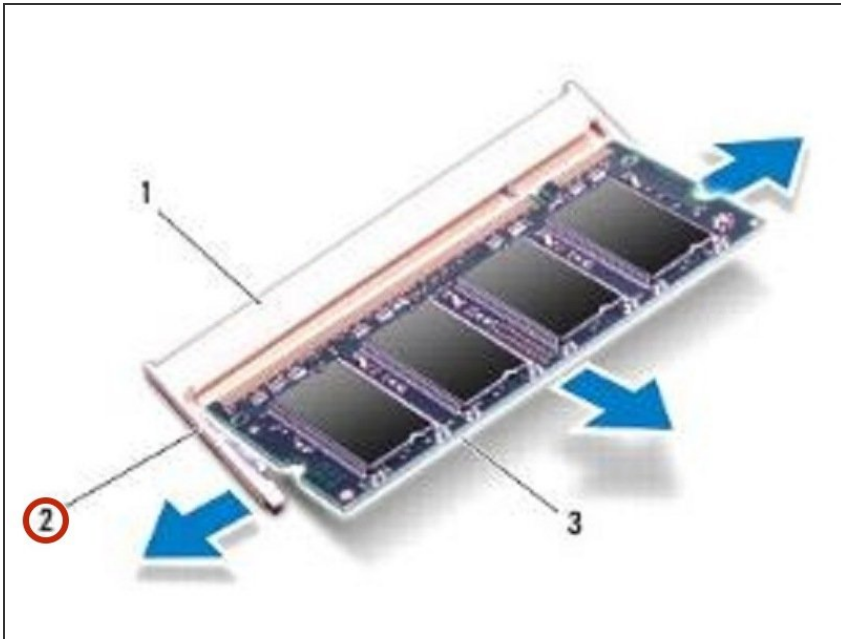


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

⚠ CAUTION: To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.


- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the memory module pops up.

Step 2 — Removing the Memory Module

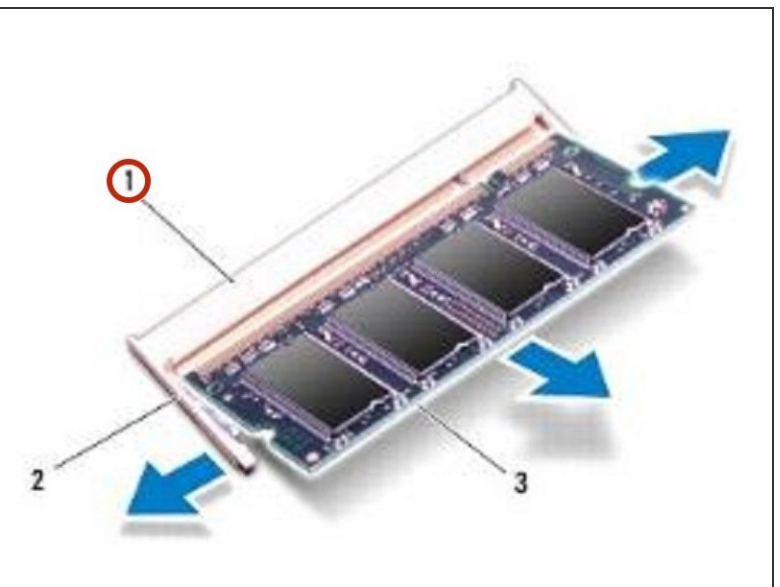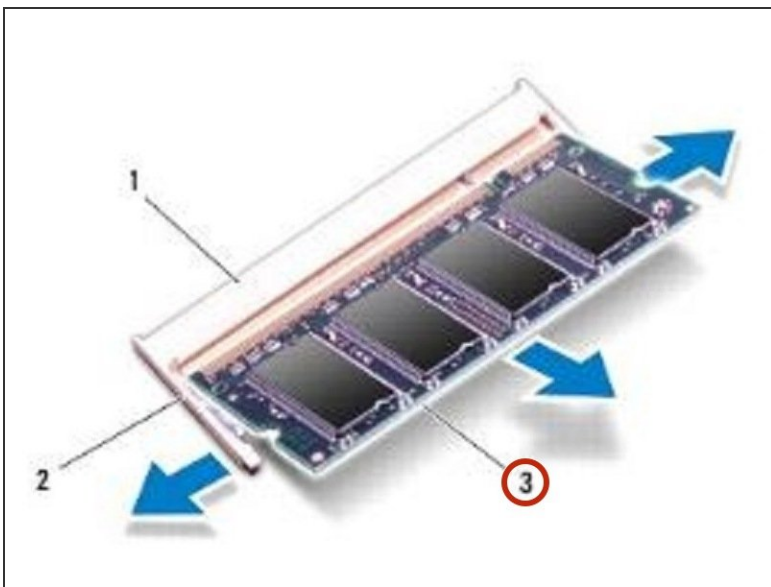


- Remove the memory module from the memory module connector.

Step 3 — Align the Notch

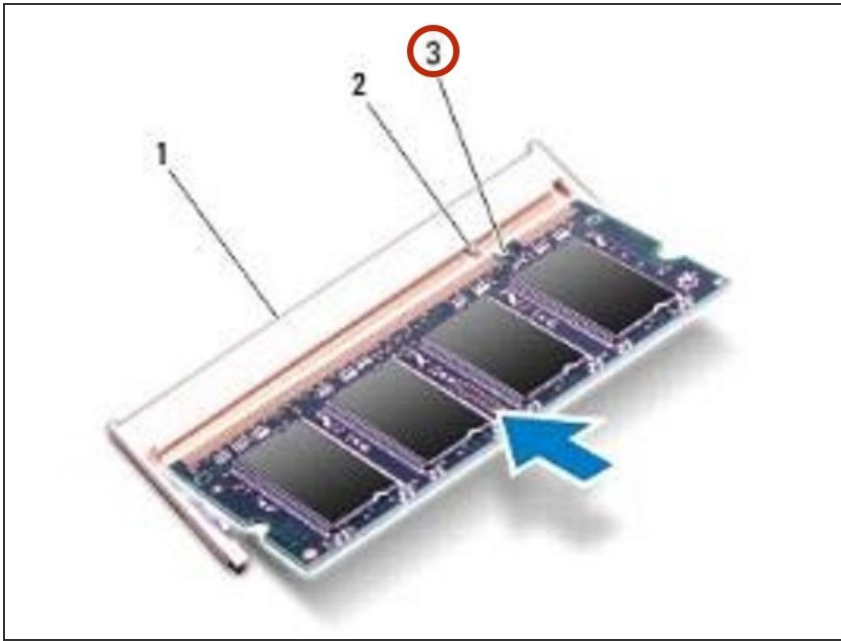

- Align the notch in the **NEW** memory module with the tab in the memory module connector.

Step 4 — Pressing down the Memory Module

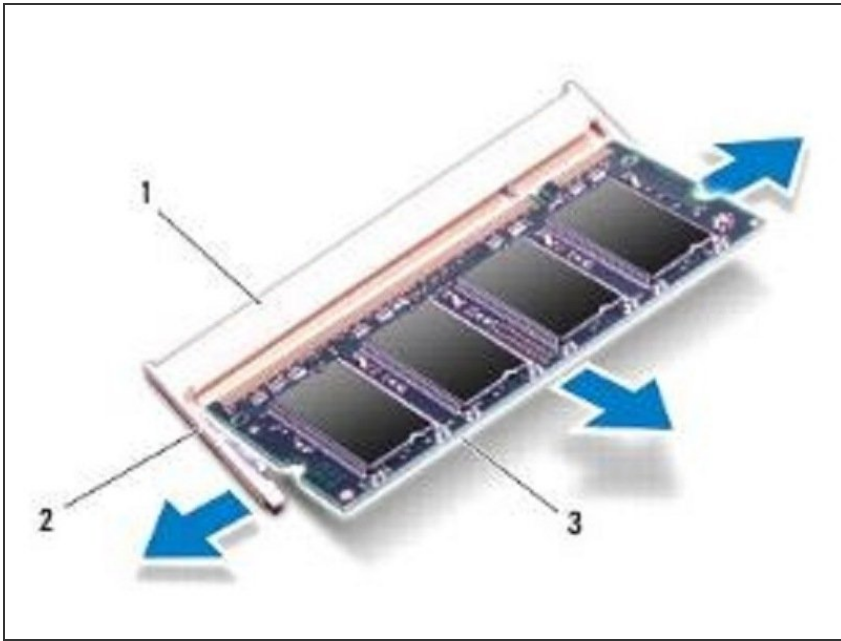

- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.

To reassemble your device, follow these instructions in reverse order.