




HP Mobile Thin Client mt41 Back Cover Replacement

Written By: Raul Rodriguez

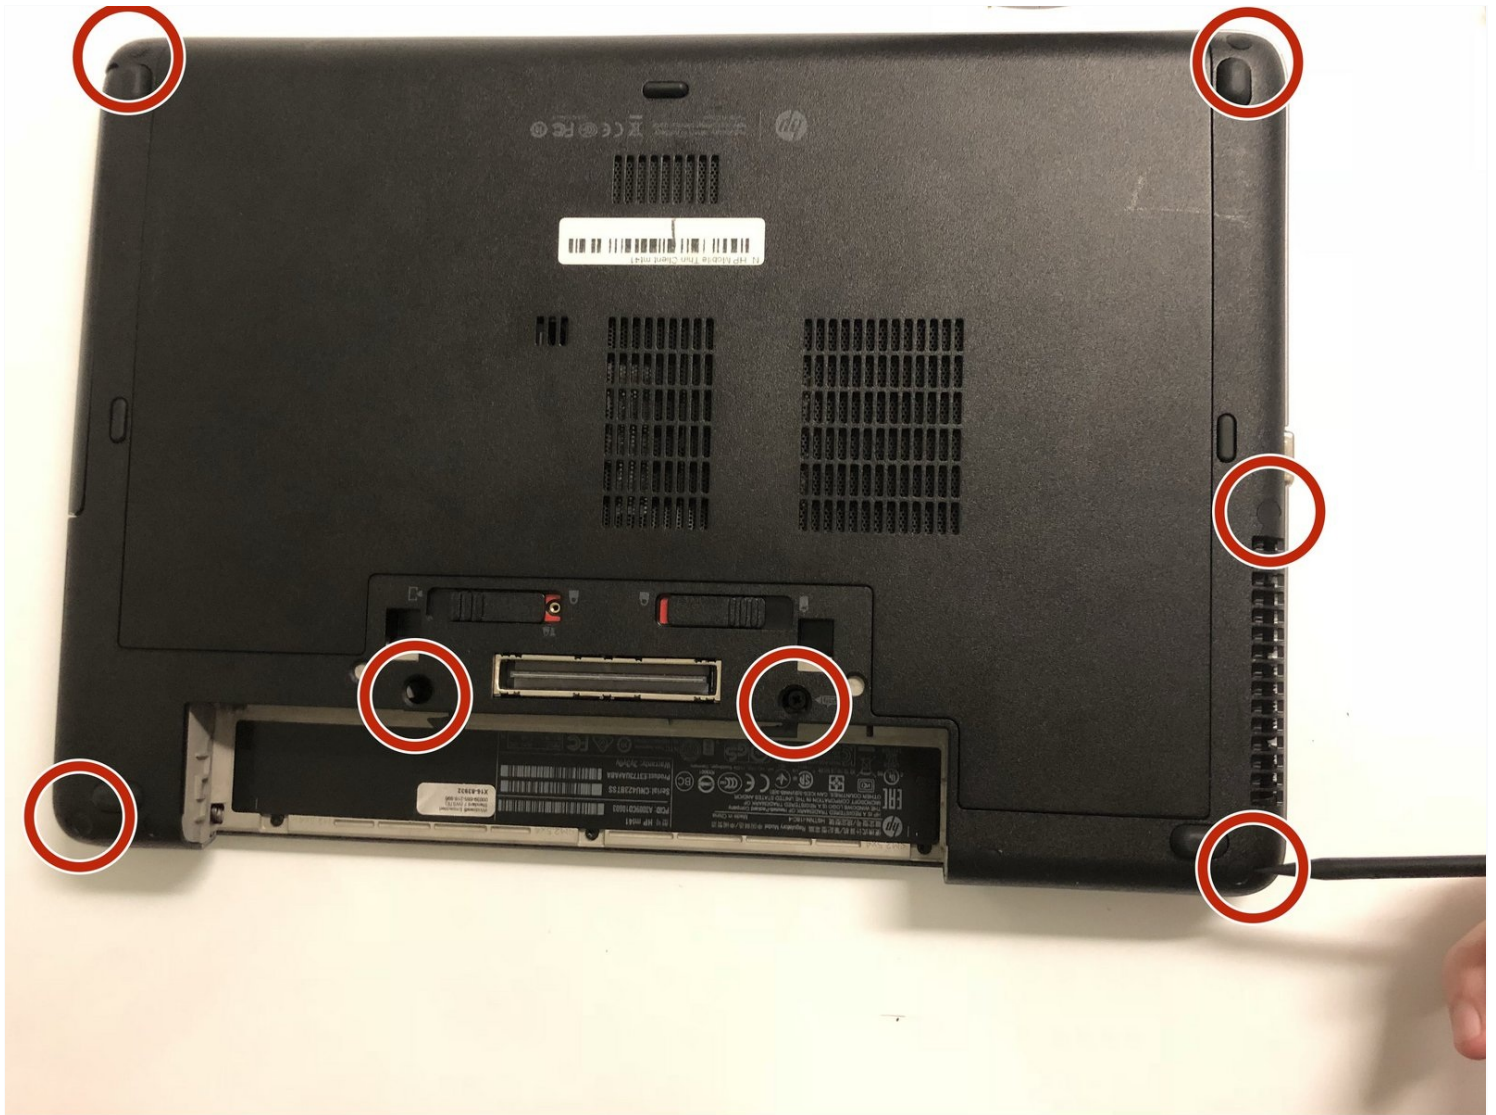

TOOLS:

iFixit Opening Tool (1)

T5 Torx Screwdriver (1)


Spudger (1)

Step 1 — Battery




- Locate the two slots on the bottom of the laptop to unlock the battery.

Step 2

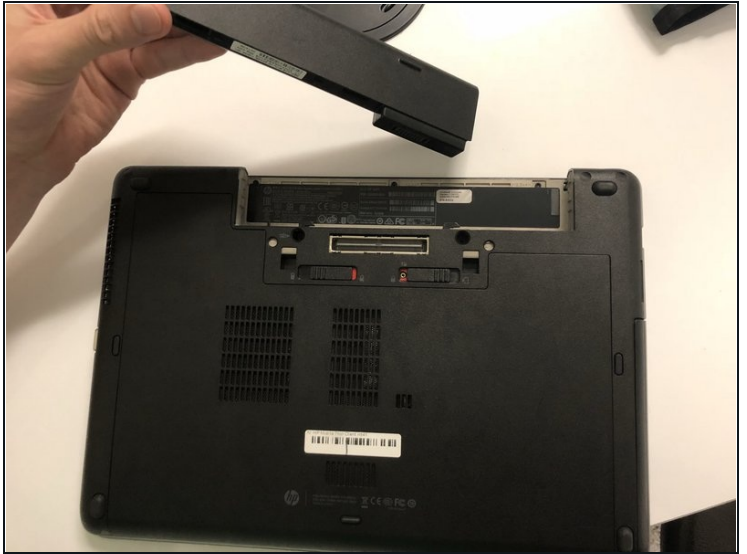


- Pull on both slots outwards as shown in the images to unlock the battery. The battery will not come out if the slots are locked. The battery should easily slide out without much force.

Step 3 — Back Cover

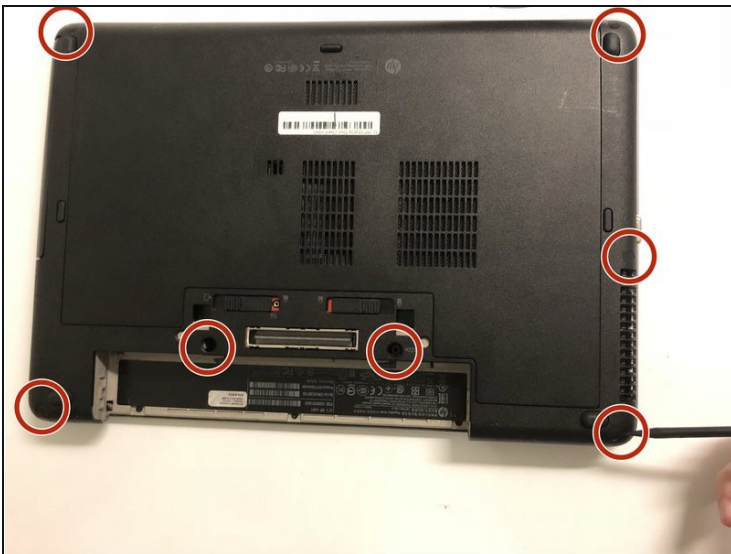

- Remove the nine screws that keep the back cover secured using the T5 Torx screwdriver.

Step 4

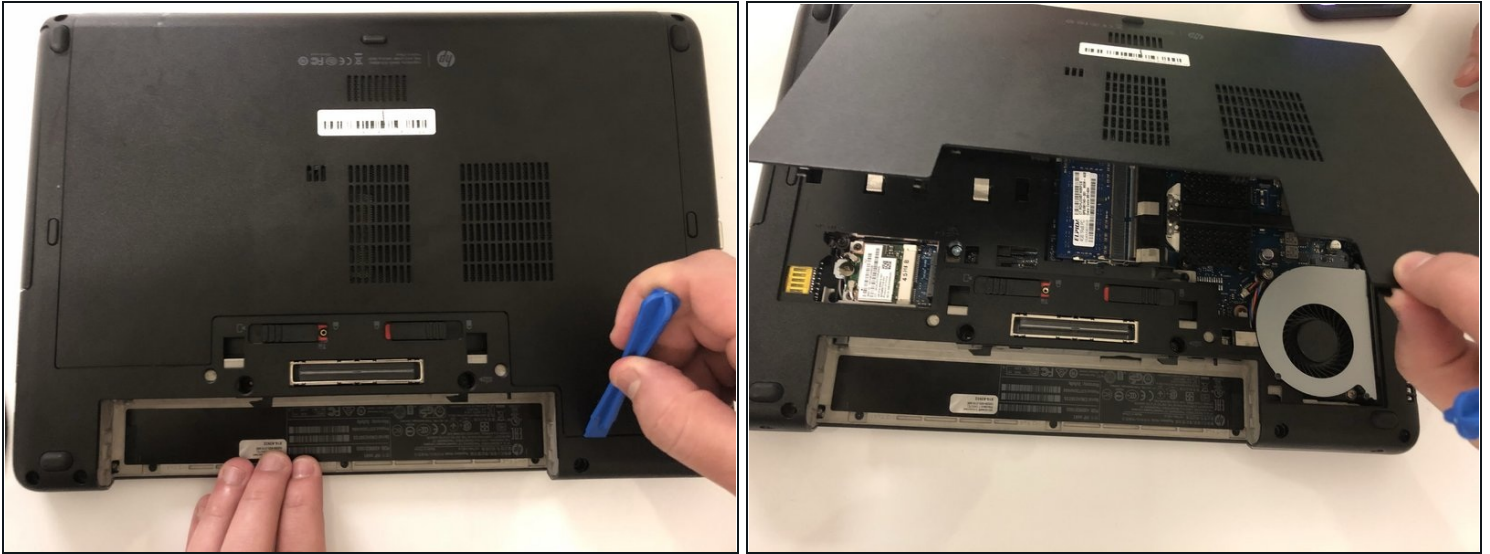

- Remove the middle plate using the iFixit opening tool.
- ⓘ This may require a bit of force. If it is not coming out try the other side.

Step 5



- Pop the back cover off from its latches by separating the two parts along their seam using the iFixit opening tool.
- ⓘ Be gentle; the plastic can crack.

Step 6



- Lift the back cover once all corners are unclipped from their latches.
- ⓘ Lifting the cover should not require much force.

To reassemble your device, follow these instructions in reverse order.